Copyright Introduction

Document version: V1.0
Date: 25th Dec. 2014
Document Introduction: The 1st formal issuance.

Abstract

The manual introduces issues closely related to maintenance such as specification, hardware operation, software configuration, service terms, fault diagnosis etc. of the server.
Readers of this guide will be deemed to have abundant knowledge about the server product, and will not cause any personal injury or product damage during operation and maintenance, for sufficient trainings received by them.

Target Audience

This manual mainly adapts to the following personnel:
● Technical support engineers
● Product maintenance engineers
It is suggested that server maintenance operation shall be carried out by professional engineers with related server knowledge via referring to this manual.

Table of Content

COPYRIGHT INTRODUCTION **1**

ABSTRACT **1**

TARGET AUDIENCE **1**

TABLE OF CONTENT **2**

1 SAFETY INTRODUCTION **4**

2. PRODUCT SPECIFICATION INTRODUCTION **9**

2.1 Introduction 9
2.2 Features and Specification 10
2.3 Front Panel 12
2.4 Rear Panel 16
2.5 Mainboard Layout 17
2.6 Mainboard Jumper Introduction 20

3 BIOS CONFIGURATION **21**

3.1 System BIOS Configuration Methods 21
3.2 BIOS Configuration 23
3.3 Firmware Update 72

4 BMC CONFIGURATION **77**

4.1 Introduction 77
4.2 Functional Modules 78
4.3 Web Interface Introduction 79
4.4 Remote Control 84
4.5 Power Supply and Heat Radiation 86
4.6 BMC Configuration 88
4.7 Logs 92
4.8 Fault Diagnosis 94
4.9 System Maintenance 95
4.10 Command Line Function Introduction 96
4.11 Time Zone Table 103

5 HARDWARE MAINTENANCE 106

5.1 Tool Preparation 106
5.2 Parts Replacement 107

6. FREQUENT FAULTS, DIAGNOSIS AND TROUBLESHOOTING 121

6.1 Frequent Faults 121
6.2 Diagnosis and Exclusion Instructions 122

7 SPECIFICATIONS 124

7.1 USA FCC Statement 124
7.2 CE Statement of EU 125
7.3 China CCC 125
7.4 China Environmental Symbols 125

1 Safety Introduction

Warning: the following warnings show that there are potential dangers that may cause property loss, personal injury or death:

1. The power supply equipment in the system may generate high voltage and dangerous electrical energy and thus cause personal injury. Please do not dismount the cover of the host or to dismount and replace any component in the system by yourself, unless otherwise informed by the distributor; only maintenance technicians trained by the distributor have the right to disassemble the cover of the host, dismount and replace the internal components.

2. Please connect the equipment to appropriate power supply, and the power should be supplied by external power supply which is indicated on the rated input label. To prevent your equipment from damages caused by momentary spike or plunge of the voltage, please use relevant voltage stabilizing equipment or uninterruptible power supply equipment.

3. If extended cables are needed, please use the three-core cables matched with correct earthed plug, and check the ratings of the extended cables to make sure that the sum of rated current of all products inserted into the extended cables do not exceed 80% of the limits of the rated currents of the extended cables.

4. Please be sure to use the supplied power supply component, such as power lines, power socket (if supplied with the equipment) etc. For the safety of equipment and the user, do not replace randomly power cables or plugs.

5. To prevent electric shock dangers caused by leakage in the system, please make sure that the power cables of the system and peripheral equipment are correctly connected to the earthed power socket. Please connect the three-core power line plug to the three-core AC power socket that is well earthed and easy to access, be sure to use the earthing pin of power lines and do not use the patch plug or the earthing pin unplugged with cables. In case of the earthing conductors not installed and it is uncertain whether there are appropriate earthing protections, please do not operate or use the equipment.

Contact and consult with the electrician.

6. To avoid short circuit of internal components and fire or electric shock hazards, please do not fill any object into the open pores of the system.

7. Please place the system far away from the cooling plate and at the place with heat sources, and be sure not to block the air vents.

8. Be sure not to scatter food or liquid in the system or on other components, and do not use the product in humid and dusty environment.

9. The replacement of batteries with those of another model may cause explosion. When replacement of batteries is required, please consult first the manufacturer and choose batteries of the same or a similar model recommended by the manufacturer. Do not dismount, extrude and pink the batteries or make the external connection point short circuit, and do not expose them in the environment over 60 ℃. Never throw them into fire or water. Please do not try to open or repair the batteries, and be sure to reasonably deal with the flat batteries and do not put the fl at batteries, the circuit boards that may include the batteries and other components with other wastes. For relevant battery recovery, please contact the local waste recovery and treatment mechanism.

10. Before installing equipment in the chassis, please install front and side supporting feet on the independent chassis; for cabinet connecting with other chassis, it shall install the front supporting foot first. If you fail to install correspondingly the supporting foot before installing equipment in the chassis, it may cause the cabinet to turn over in some cases, and thus may cause personal injury. Therefore, it is necessary to install supporting feet before installing equipment in the chassis. After installing the equipment and other components in the chassis, it can only pull out one component from the cabinet through its sliding component at one time. Pulling out several components at the same time may lead the cabinet to turn over and cause serious personal injury.

11. Please do not move the chassis independently. Considering the height and weight of the chassis, at least two people are needed to complete its movement.

12. Please do not carry out direct contact operation on power copper busbar when the cabinet is powered on, and it is prohibited to carry out direct short

circuit of power copper busbar.

13. The product is Grade A product, and in the living environment, it may cause radio interference. In such case, it may need the user to take feasible measures for the interference.

Note: In order to help you use the equipment, the following considerations can help avoid the occurrence of problems that may damage the components or cause data loss etc.

1. In case of the following cases, please unplug the power line plug of products from the power socket and contact customer service department of the distributor:

    1) The power cables, extended cables or power plugs are damaged.

    2) The products get wet by water.

    3) The products have fallen off or been damaged.

    4) Objects fall into the products.

    5) When operating according to the operation instructions, the products cannot function normally.

2. If the system becomes damp, please dispose according to the following steps:

    1) Switch off the power supplies of the system and the equipment, disconnect them with the power socket, wait for 10 to 20 minutes, and then open the cover of the host.

    2) Move the equipment to the ventilation place to dry the system at least for 24 hours and make sure that the system is fully dried.

    3) Close the cover of the host, re-connect the system to the power socket, and then start the equipment.

    4) In case of operation failure or abnormal situation, please contact the distributor and get technical support.

3. Pay attention to the position of the system cables and power cables, wire them in places not to be stepped on or knocked down and ensure not to place other objectives on the cables.

4. Before dismounting the cover of host or contacting the internal components, you shall cool down the equipment first; to avoid damaging the main-board, please power off the system and wait for 5 seconds, and then dismount the components from the main-board or disconnect the connection of peripheral equipment of the system.

5. If there are modulator-demodulator, telecommunication or local area network options in the equipment, please pay attention to the following matters:

    1) In case of thunder and lightning weather, please do not connect or use the modulator-demodulator. Otherwise, it may be subject to lightning strike.

    2) Never connect or use modulator-demodulator in moist environment.

    3) Never insert the modulator-demodulator or telephone cables to the socket of network interface controller (NIC).

    4) Before unpacking the product package, contacting or installing internal components or contacting un-insulated cables or jacks of the modulator-demodulator, please disconnect the modulator-demodulator cables.

6. In order to prevent the electrostatic discharge from damaging the electronic components in the equipment, please pay attention to the following matters:

    1) You shall conduct off the static electricity on the body before dismounting or contacting any electronic component in the equipment. You can conduct off the static electricity on the body by contacting the metal earthing objects (such as the unpainted metal surface on the chassis) to prevent the static electricity on the body from conducting itself to the sensitive components.

    2) For electrostatic sensitive components not ready to be installed for application, please do not take them out from the antistatic package materials.

    3) During the work, please touch the earthing conductor or the unpainted metal surface on the cabinet regularly to conduct off the static electricity on the body that may damage the internal components.

7. When dismounting the internal components with the approval of the

distributor, please pay attention to the following matters:

1) Switch off the system power supply and disconnect the cables, including disconnecting any connection of the system. When disconnecting the cables, please grab the connector of cables and plug it out, and never pull the cables.

2) Before dismounting the cover of cabinet or touching the internal components, the products need to be cooled down.

3) Before dismounting and touching any electronic component in the equipment, you shall conduct off the static electricity on the body by touching the metal earthingobjectives.

4) During the dismounting process, the operation shall not be too big, so as to prevent damage to the components or scratching of the arms.

5) Carefully deal with the components and plug-in cards, and please never touch, the components or connection points on the plug-in cards. When taking the plug-in cards or components, you should grab the edges of the plug-in cards or components or their metal fixed supports.

8. During the process of cabinet installation and application, please pay attention to the following matters:

1) After the installation of cabinet is finished, please ensure that the supporting feet have been fixed to the rack and supported to the ground, and all weight of the rack have been fell onto the ground.

2) It shall install into the cabinet according to the sequences from the bottom to the top, and first install the heaviest component.

3) When pulling out the components from the cabinet, it shall apply force slightly to ensure the cabinet to keep balance and stabilization.

4) When pressing down the release latch of the sliding rail of components and sliding in or out, please be careful, as the sliding rail may hurt your figures.

5) Never make the AC power branch circuit in the cabinet overload. The sum of cabinet load shall not exceed 80% of the ratings of branch circuits.

6) Ensure that components in the cabinet have good ventilation.

7) When repairing components in the cabinet, never step on any other components.

2. Product Specification Introduction

2.1 Introduction

This type is a kind of server product developed independently. It adopts Intel Grantley-EP platform, and uses Wellsburg chip set. It supports two mainstream Intel Xeon E5-26** V3 series processors. It supports 16 DIMM DDR4 memory, reaching up to 2133MHz. It supports ECC Registered and multiple senior memory redundancy function.It supports up to 2.5” x 16 SAS/SATA/SSD hot-plugging hard disks or 3.5” x 12 SAS/SATA/SSD hot-plugging hard disks.

Mainboard integrates Gigabit network cards of high performance, and supports network advanced features. Mainboard integrates BMC/KVM chips. 5 PCI-Express expansion slots available.Supports SAS 3.0 (12Gb/s) or SAS Raid cards, and implements flexible SAS/SAS RAID solutions. Modular design on components such as structure, storage, PCI expansion, power supply and fan etc. Energy-saving and noise reduction design, equipped with PMbus power supply of high efficiency, supports DPNM function, and implements energy saving and consumption reducing.

Supports 12 front set 3.5/2.5 inches SAS/SATA/SSD hard disks, and appearances of them are as shown in the following figure.

Note: The 3.5 inches hard disk bracket could be used to hold a 3.5/2.5 inches hard disk.

2.2 Features and Specification

Processor	
Processor Type	Intel dual-way Xeon E5-26XX V3 Series (supports up to two 145W)
Interface	Two Socket-R3 slots.
Chipset	
Chipset Type	PCH C610(Wellsburg)
Memory	
Memory Type	DDR4 ECC RDIMM/LRDIMM memory
Single Inline Memory Module Qty.	16
Memory Volume	It supports up to 1024GB (64GB for single)
I/O Interface	
USB Interface	2 rear set USB 3.0 interfaces, and 2 built-in USB 3.0 interfaces
Display Interface	1 front set VGA interface 1 rear set VGA interface
Serial Interface	1 built-in serial port
ID Indicator Interface	1 ID indicator (blue) and its press button
Display Controller	
Controller Type	A speed 2400 integrated in chip, with max. resolution supporting 1280*1024
SAS Backplane	
SAS3.0 backplane	It supports hog-plugging SAS/SATA/SSD hard disks.
Network Card	
Network Card Controller	The mainboard optionally integrates 1 Intel I350 double gigabit or four gigabit net card, and provides two or four 1000M self-adapting RJ45 net ports; The mainboard optionally integrates 1 Intel 82599 single-port or double-port 10 gigabit net card, and provides one or two 10 gigabit SFP+Net Card(s).

Management Chip	
Management Chip	It integrates 1 independent 1000Mbps network interface, which is used in IPMI remote management.
PCI Extension Slot	Mainboard: 1 onboard PCI Express 3.0 x24 slot (used to support PCI-E Riser, which could not adapt to external cards); 3 vertically inserted PCIE slots; When there's one single CPU is in the system: It could support 1 PCIE x8+x1 slot (able to support network sub card of management function). It could support 1 PCIE x8 (in x16 Slots). When there're double CPUs in the system: It could support 1 vertically inserted PCIE x8+x1 slot (able to support management function network card). It could support 1 vertically inserted PCIE x8 (in x16 Slots) It could support 1 vertically inserted PCIE x16 (in x16 Slots) Via installing a Riser card connecting to a full height and half height card, it could support 1 vertically inserted PCIE x8 (in x8 Slots) and 1 PCIE x16 (in x16 Slots);
Hard Disk	
Hard Drive Type	Front set 2.5/3.5 inch SAS, SATA and SSD hard disks; Up to 4 rear set SATA and SSD hard disks could be supported. (Subject to actual type you purchased)
External Storage Driver	
CD Driver	External USB CD drive.
Drive U Disk	Optional drive U disk.
Power Supply	
Specification	Output power of sing/Double power 550W/800W and above; 1+1 redundancy; 2 power modules; it supports PMBus power supply, and implements Node Manager 3.0 function.
Power Input	Please refer to power input on nameplate tag of the host.
Physical Specification	
External Dimension of Package	651 width ×307 height ×971 depth (unit: mm)

Host Size	447 width ×87 height ×720 depth (unit: mm)
Product Weight	Standard configuration (3 hard disks) Host weight: 19.5kg; Gross weight: 32kg. (Gross weight includes: Host + Packing Box + Rail + Parts Kit) Full configuration (24 hard disks) Host weight: 25.8kg; Gross weight: 35.55kg. (Gross weight includes: Host + Packing box + Rail + Parts box)
Environment Parameters	
Working Environment Temperature	10℃-35℃
Storage & Transportation Temperature	-40℃-55℃
Working Humidity	35%-80% relative humidity
Storage & Transportation Humidity	20%-93% (40℃) relative humidity

2.3 Front Panel

2.3.1 3.5×12 Disk Position

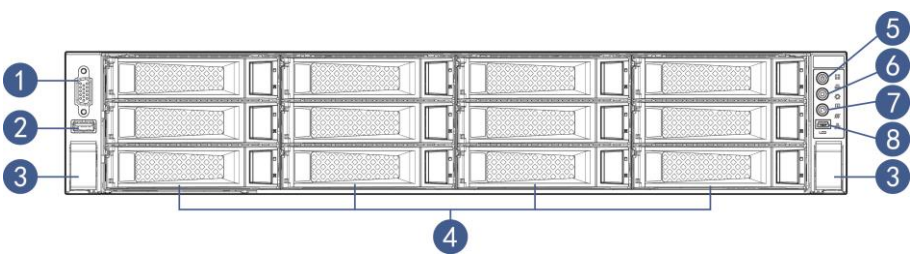

No.	Module Name

No.	Module Name
1	Front set VGA interface
2	Front set USB 3.0 interface
3	Securing buckle of server and cabinet
4	Front set hard disk slot
5	Server switch button
6	ID light and button
7	System fault indicator button
8	LCD liquid crystal management module interface

3.5×12 disk position hard disk sequence diagram

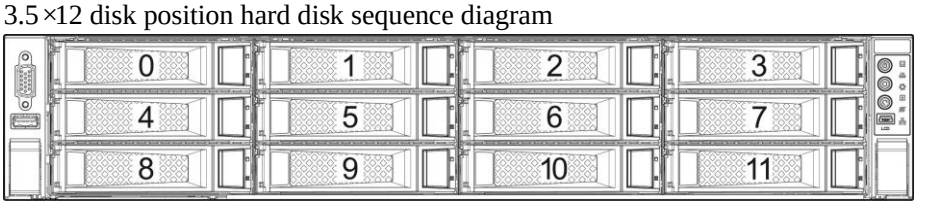

2.3.2 Front Control Panel Buttons and Indicators

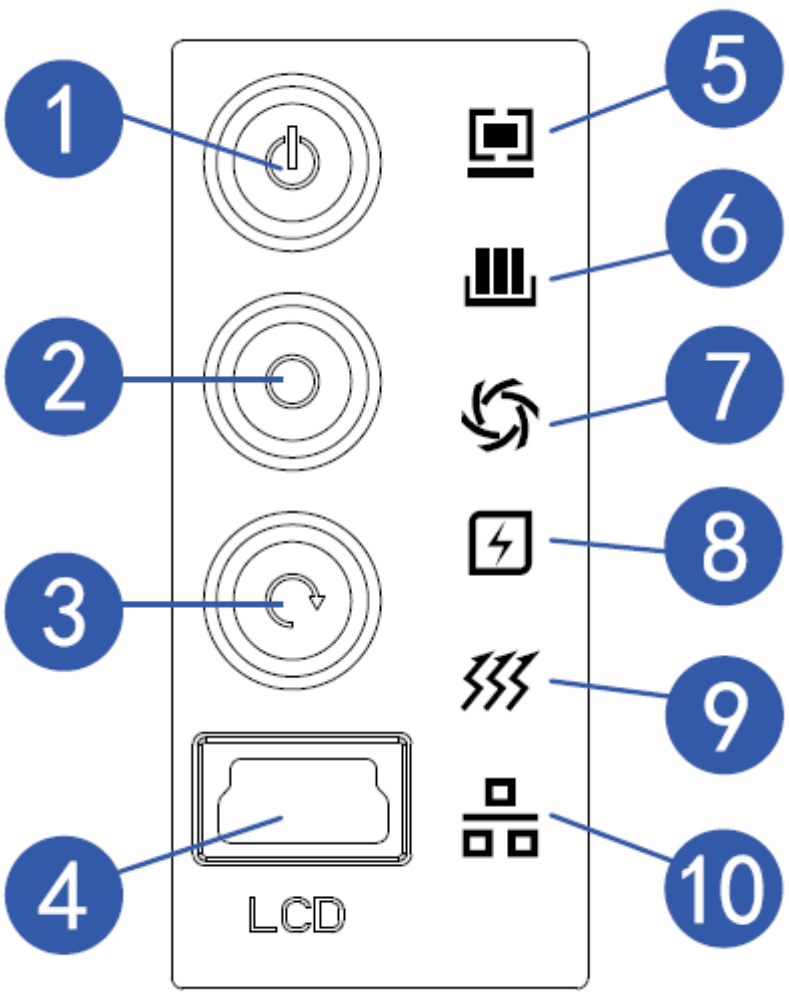

No.	Module Name
1	Server switch button
2	ID light and button

No.	Module Name
3	System fault indicator button
4	LCD liquid crystal management module interface
5	System fault indicator
6	Memory fault indicator
7	Fan fault indicator
8	Power fault indicator
9	System overheating indicator
10	Network status indicator

2.3.3 Indicators on Hard Disk Bracket

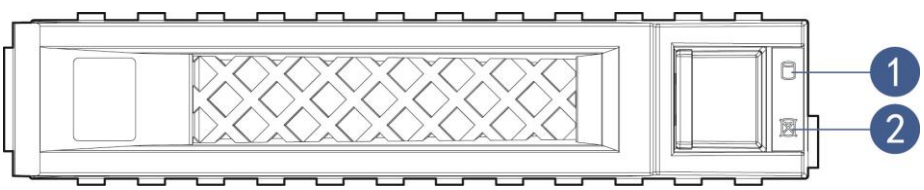

Number	Module Name	Description
1	Hard disk activity status indicator	Constant green: Normal Flashing green: Hard disk is reading and writing
2	Hard disk fault alarming indicator	Constant red: Hard disk fault Constant blue: Hard disk positioning Constant blue: In coordination

Number	Module Name	Description
		with RAID rebuilding

2.4 Rear Panel

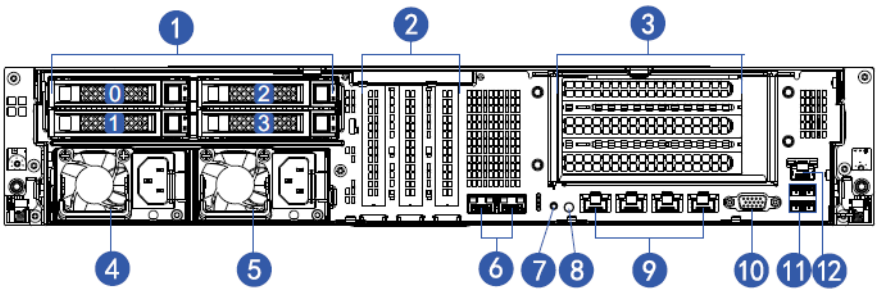

Number	Module Name
1	Rear set 2.5 inch hard disk slot
2	PCIE slot (half height)
3	PCIE slot (full height)
4	Power supply 0
5	Power supply 1
6	10 Gigabit net card interface
7	BMC reset button
8	ID light and button

Number	Module Name
9	Gigabit net card interface
10	VGA interface
11	USB3.0 interface
12	IPMI management interface

2.5 Mainboard Layout

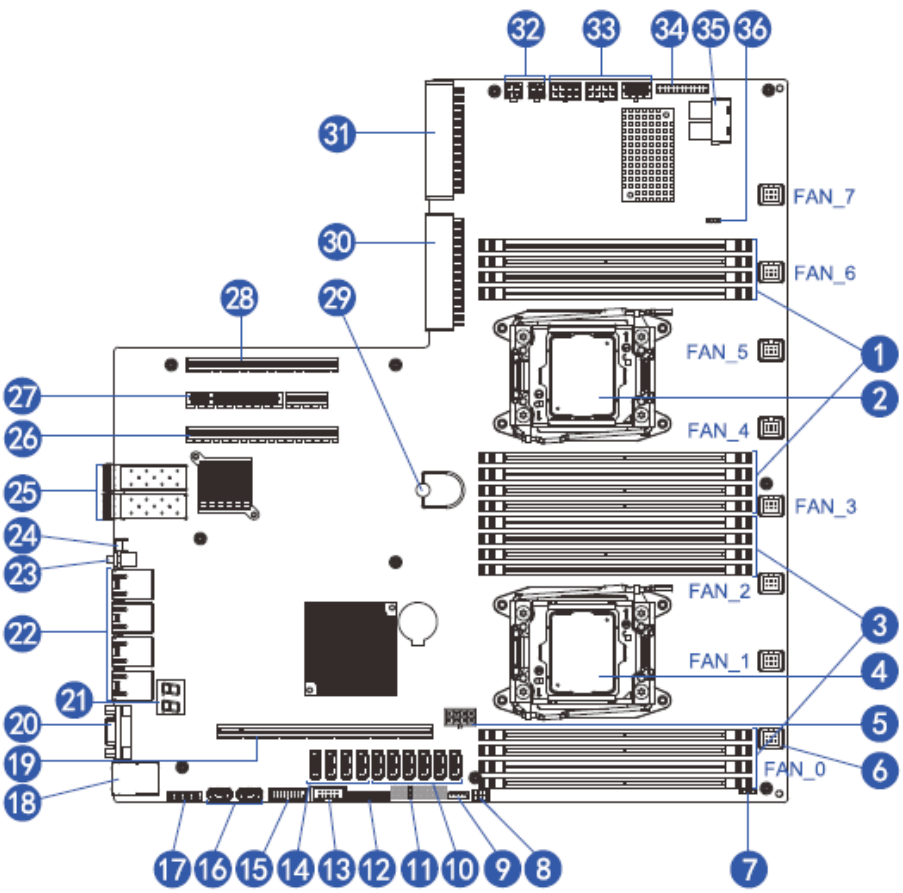

Number	Module Name
1	Memory slot (corresponding with CPU0)
2	CPU0
3	Memory slot (corresponding with CPU1)
4	CPU1
5	GPU Power supply interface
6	System fan interfaces (8 interfaces in all)
7	I2C interface
8	GPIO interface
9	IPMB interface
10	SATA interfaces (6)
11	CLEAR CMOS jumper
12	TCM interface
13	COM interface
14	sSATA interfaces (4)
15	Front set USB 3.0 interface
16	Built-in USB 3.0 interface
17	Front set VGA interface

Number	Module Name
18	IPMI management interface / rear set USB 3.0 interface (2)
19	PCIEx24 slots (corresponding with CPU1)
20	Rear set VGA interface
21	Debug light
22	Gigabit network port
23	ID light and button
24	BMC Reset button
25	10 Gigabit net port
26	PCIEx16 slots (corresponding with CPU1)
27	PCIEx8 (corresponding with CPU0)
28	PCIEx8 (in x16 slots corresponding with CPU0)
29	Mainboard handle
30	PSU1
31	PSU0
32	Power interface (4 port)
33	Power interface (8 port)
34	Front control panel interface

Number	Module Name
35	LSI 3008 HDminiSAS interface
36	LSI 3008 SAS Key

2.6 Mainboard Jumper Introduction

See [2.5 Mainboard Layout] for jumper positions.

Clear CMOS Jumper Introduction

Jumper No.	Function Description	Jumper Functions
CLR_CMOS	CMOS clear jumper	Short-circuit pin1-2, to restore normal status; short-circuit pin2-3, to clear CMOS.

Note:

It is required to shut down the system, as well as disconnect power supply during CMOS cleaning, and hold for 5 seconds after short-circuiting Pin2-3; then short-circuit Pin1 and Pin2 of CLR_CMOS jumper with a jumper cap (the default status), to restore its original status.

3 BIOS Configuration

This chapter introduces BIOS function setup and mainboard jumper of the server. All operations described in this section are only limited to operators or administrators with system maintenance qualification.

BIOS is a basic input and output system. The system parameter and the hard drive parameter can be adjusted through special set program. BIOS has great influence on the system start and running so that setting parameters improperly may arose the conflict among the hardware resource, or fall down the system run performance. Hence understanding the BIOS setup is significant to the configuration of your server. If no especial requirement, you are suggested to use the default value and not alter the parameters optionally.

Notes:

1. Before the server BIOS setup is altered, please record the corresponding original setup. Hence when there are operating problems in the system due to the option altered, the setup can revert.

2. Ordinarily the factory default system value is the optimized setup. Don't try to alter the parameters before you understand their denotations.

3. The common setup is introduced in detail in this paper. The less referred options in the application procedure are simply explained or not.

4. The content of the BIOS is diverse based on the different configurations of the products; hence the detailed introduction is elided.

3.1 System BIOS Configuration Methods

Power on the server, system starts to boot, when the following content appears below the distributor logo on the screen:

"Press <DEL> to SETUP or <TAB> to POST or <F12> to PXE Boot.", press [DEL] button, when "Entering Setup..." appears on bottom right on the screen, it will enter system BIOS configuration later, and you could select options using arrow buttons on BIOS main menu to enter sub-menu.

Note: Options in grey are not available. Options with symbol "▶", have a sub-menu.

Control key instruction table

Press Key	**Function**
<Esc>	Exit or return from sub-menu to main menu.
<←> or <→>	Select a menu.
<↑> or <↓>	Move the cursor up or down.
<Home> or <End>	Move the cursor to top or bottom of the screen.
<+> or <->	Select the previous or next numerical value or setting of the current one.
<F1>	Help
<F2>	Restore the last configuration.
<F9>	Restore default configuration.
<F10>	Save and exit
<Enter>	Execute commands or select a sub-menu.

3.2 BIOS Configuration

3.2.1 Main Menu

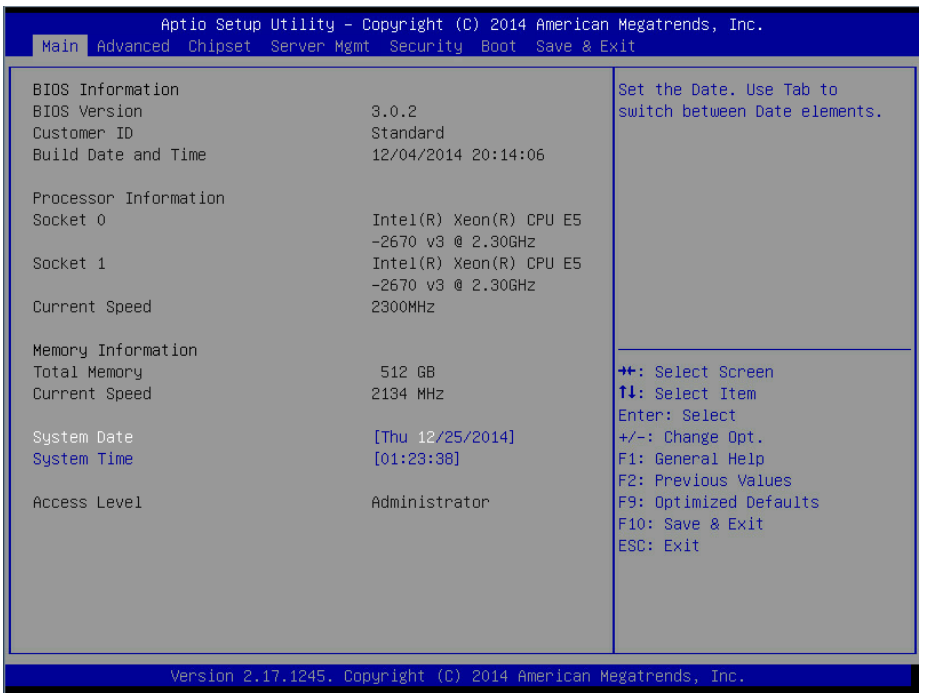
Aptio Setup Utility – Copyright (C) 2014 American Megatrends, Inc.
Main Advanced Chipset Server Mgmt Security Boot Save & Exit
BIOS Information
BIOS Version 3.0.2
Customer ID Standard
Build Date and Time 12/04/2014 20:14:06
Processor Information
Socket 0 Intel(R) Xeon(R) CPU E5 -2670 v3 @ 2.30GHz
Socket 1 Intel(R) Xeon(R) CPU E5 -2670 v3 @ 2.30GHz
Current Speed 2300MHz
Memory Information
Total Memory 512 GB
Current Speed 2134 MHz
System Date [Thu 12/25/2014]
System Time [01:23:38]
Access Level Administrator
Set the Date. Use Tab to switch between Date elements.
→←: Select Screen
↑↓: Select Item
Enter: Select
+/-: Change Opt.
F1: General Help
F2: Previous Values
F9: Optimized Defaults
F10: Save & Exit
ESC: Exit
Version 2.17.1245. Copyright (C) 2014 American Megatrends, Inc.

Main Menu Interface Instruction Table

Interface Parameters	**Function Description**
BIOS Information	Displays current BIOS information.
Processor Information	Displays CPU information.
Memory Information	Displays memory volume and current speed.
System Date(Day mm/dd/yyyy) System Time (hh/mm/ss)	Displays system time.
Access Level	Current access level

3.2.2 Advanced Menu

Advanced Menu Interface Instruction Table

Interface Parameters	**Function Description**
Trusted Computing	Trustable computing configuration
ACPI Settings	Advanced configuration and power interface settings
AST2400 Super IO Configuration	AST2400 I/O chip parameter configuration
Serial Port Console Redirection	Serial port console redirection settings
PCI Subsystem Settings	PCI subsystem settings
Network Stack Configuration	Network stack configuration
CSM Configuration	CMS configuration
USB Configuration	USB configuration
Onboard LAN Configuration	Onboard network card configuration

3.2.2.1 Trusted Computing

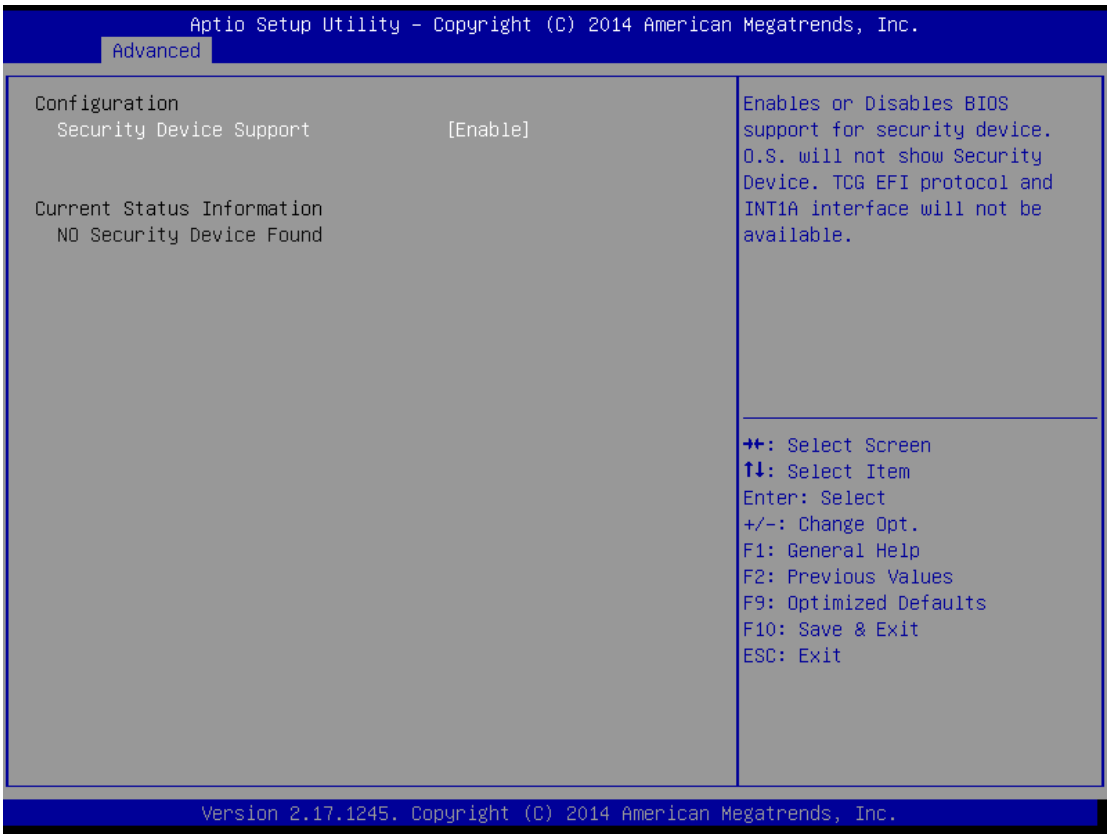
Aptio Setup Utility – Copyright (C) 2014 American Megatrends, Inc.
Advanced
Configuration
Security Device Support [Enable]
Current Status Information
NO Security Device Found
Enables or Disables BIOS support for security device. O.S. will not show Security Device. TCG EFI protocol and INT1A interface will not be available.
→←: Select Screen
↑↓: Select Item
Enter: Select
+/-: Change Opt.
F1: General Help
F2: Previous Values
F9: Optimized Defaults
F10: Save & Exit
ESC: Exit
Version 2.17.1245. Copyright (C) 2014 American Megatrends, Inc.

Trusted Computing Menu Interface Instruction Table

Interface Parameters	**Function Description**
Security Device Support	BIOS's security device support settings
Current Status Information	Status information of the current security device

3.2.2.2 ACPI Settings

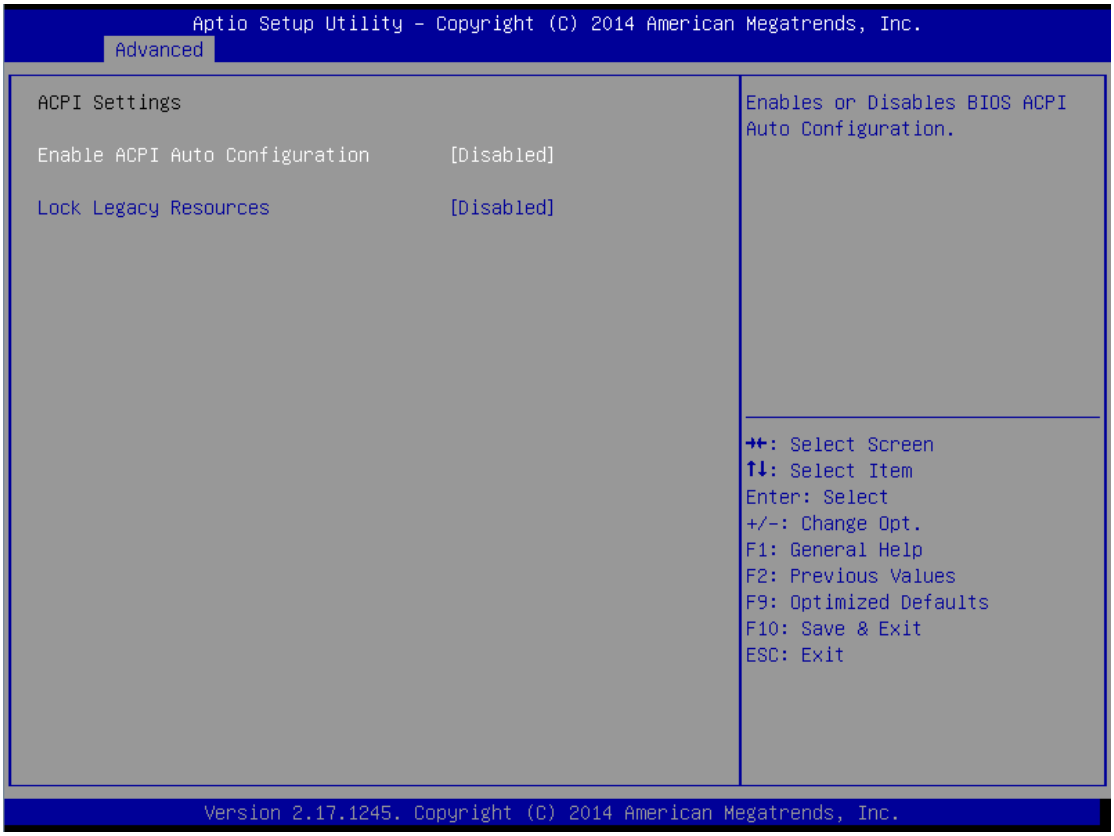

Advanced Menu Interface Instruction Table

Interface Parameters	**Function Description**
Enable ACPI Auto Configuration	To allow ACPI's automatic configuration.
Lock Legacy Resources	Locking legacy resources setting

3.2.2.3 AST2400 Super IO Configuration

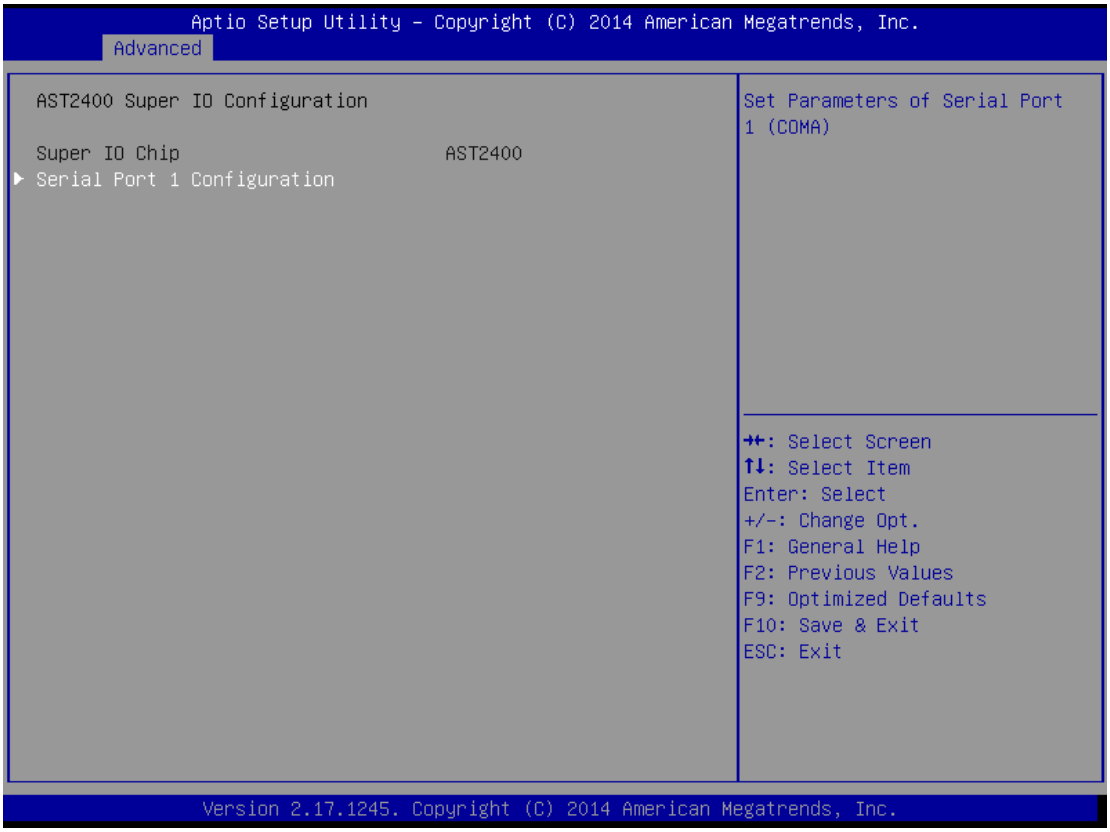
Aptio Setup Utility – Copyright (C) 2014 American Megatrends, Inc.
Advanced
AST2400 Super IO Configuration
Super IO Chip AST2400
Serial Port 1 Configuration
Set Parameters of Serial Port 1 (COMA)
→←: Select Screen
↑↓: Select Item
Enter: Select
+/-: Change Opt.
F1: General Help
F2: Previous Values
F9: Optimized Defaults
F10: Save & Exit
ESC: Exit
Version 2.17.1245. Copyright (C) 2014 American Megatrends, Inc.

AST2400 Super IO Configuration Menu Interface Instruction Table

Interface Parameters	**Function Description**
Super IO Chip	The current I/0 chip
Serial Port 1 Configuration	Serial port 1 configuration

3.2.2.4 Serial Port Console Redirection

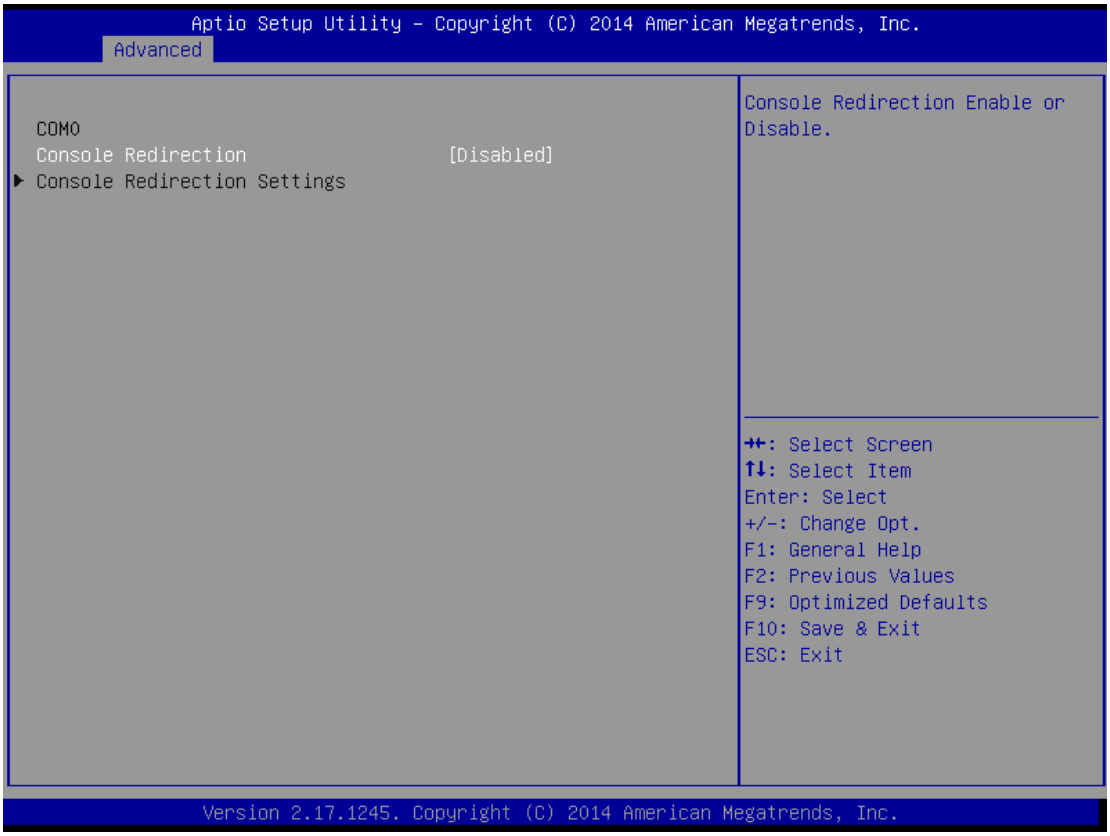

Serial Port Console Redirection Menu Interface Instruction Table

Interface Parameters	**Function Description**
Console Redirection	The console redirection switching settings
Console Redirection Settings	The console redirection parameter settings

3.2.2.4.1 Console Redirection Settings

When the Console Redirection option is set to [Enabled], the Console Redirection Settings menu is started.

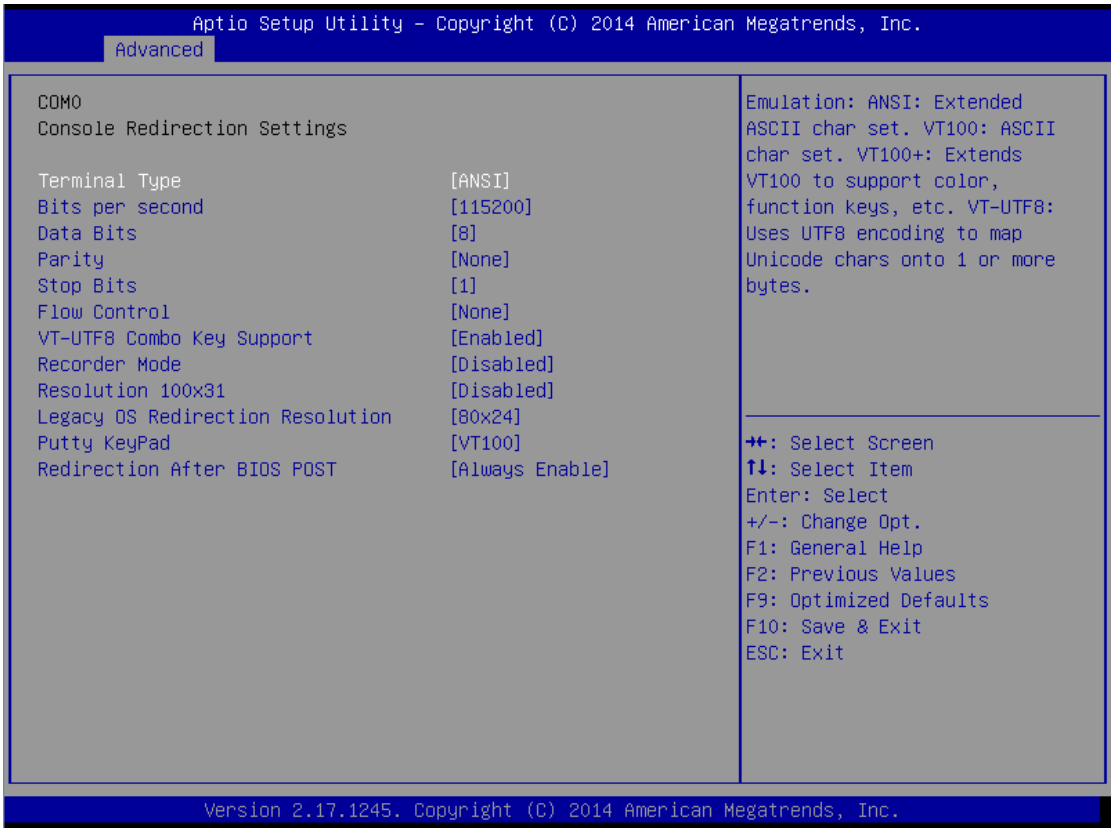
Aptio Setup Utility – Copyright (C) 2014 American Megatrends, Inc.
Advanced
COM0
Console Redirection Settings
Terminal Type [ANSI]
Bits per second [115200]
Data Bits [8]
Parity [None]
Stop Bits [1]
Flow Control [None]
VT-UTF8 Combo Key Support [Enabled]
Recorder Mode [Disabled]
Resolution 100x31 [Disabled]
Legacy OS Redirection Resolution [80x24]
Putty KeyPad [VT100]
Redirection After BIOS POST [Always Enable]
Emulation: ANSI: Extended ASCII char set. VT100: ASCII char set. VT100+: Extends VT100 to support color, function keys, etc. VT-UTF8: Uses UTF8 encoding to map Unicode chars onto 1 or more bytes.
→←: Select Screen
↑↓: Select Item
Enter: Select
+/-: Change Opt.
F1: General Help
F2: Previous Values
F9: Optimized Defaults
F10: Save & Exit
ESC: Exit
Version 2.17.1245. Copyright (C) 2014 American Megatrends, Inc.

Console Redirection Settings Menu Interface Introduction

Interface Parameters	**Function Description**
Terminal Type	Terminal type settings
Bits per second	Baud rate settings
Data Bits	Data bits settings
Parity	Parity check settings
Stop Bits	Stop bits settings
Flow Control	Flow control settings
VT-UTF8 Combo Key Support	VT-UTF8 Combo key support settings
Recorder Mode	Recorder mode settings
Redirection 100×31	Expanded terminal resolution settings
Legacy OS Redirection Resolution	Terminal resolution settings of legacy OS
Putty KeyPad	Putty's functional keys and keyboard settings
Redirection After BIOS POST	Redirection after BIOS bootup settings

3.2.2.5 PCI Subsystem Settings

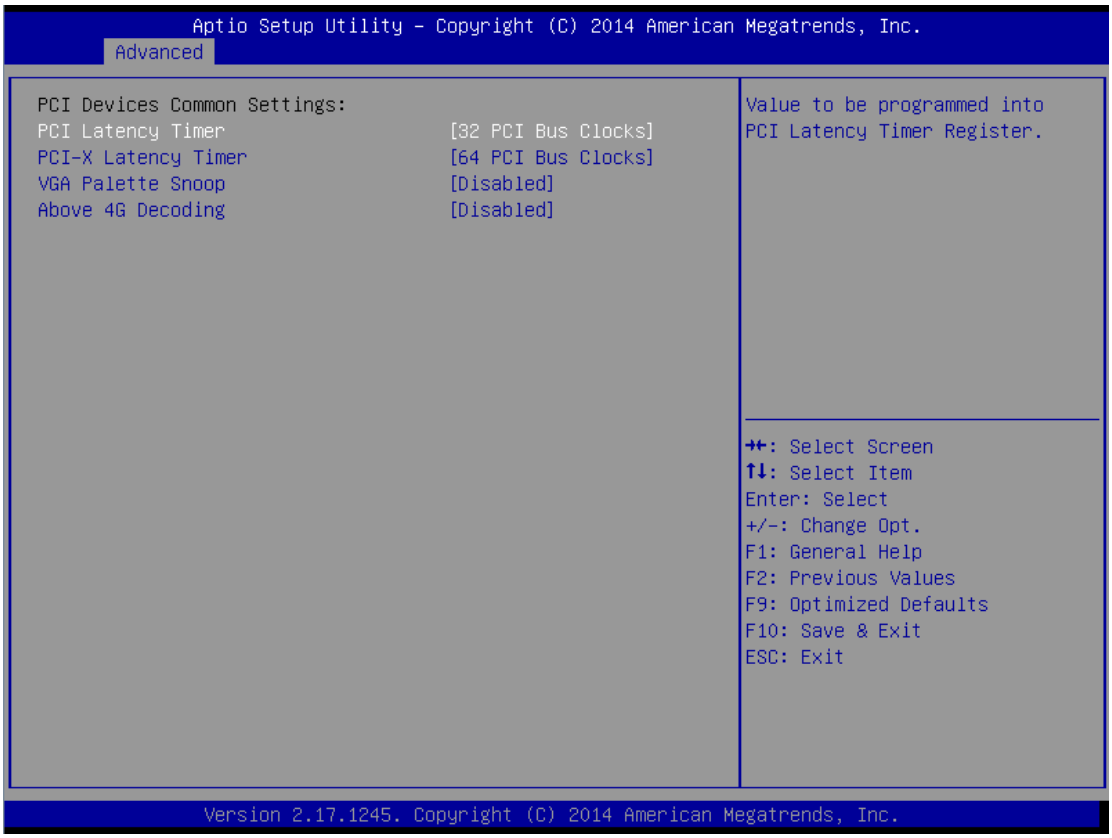
Aptio Setup Utility – Copyright (C) 2014 American Megatrends, Inc.
Advanced
PCI Devices Common Settings:
PCI Latency Timer [32 PCI Bus Clocks]
PCI-X Latency Timer [64 PCI Bus Clocks]
VGA Palette Snoop [Disabled]
Above 4G Decoding [Disabled]
Value to be programmed into PCI Latency Timer Register.
→←: Select Screen
↑↓: Select Item
Enter: Select
+/-: Change Opt.
F1: General Help
F2: Previous Values
F9: Optimized Defaults
F10: Save & Exit
ESC: Exit
Version 2.17.1245. Copyright (C) 2014 American Megatrends, Inc.

PCI Subsystem Settings Menu Interface Instruction Table

Interface Parameters	**Function Description**
PCI Latency Timer	PCI delay timer settings
PCI-X Latency Timer	PCI-X delay timer settings
VGA Palette Snoop	VGA color correction settings
Above 4G Decoding	64bit equipment's decoding settings on address space larger than 4G.

3.2.2.6 CSM Configuration

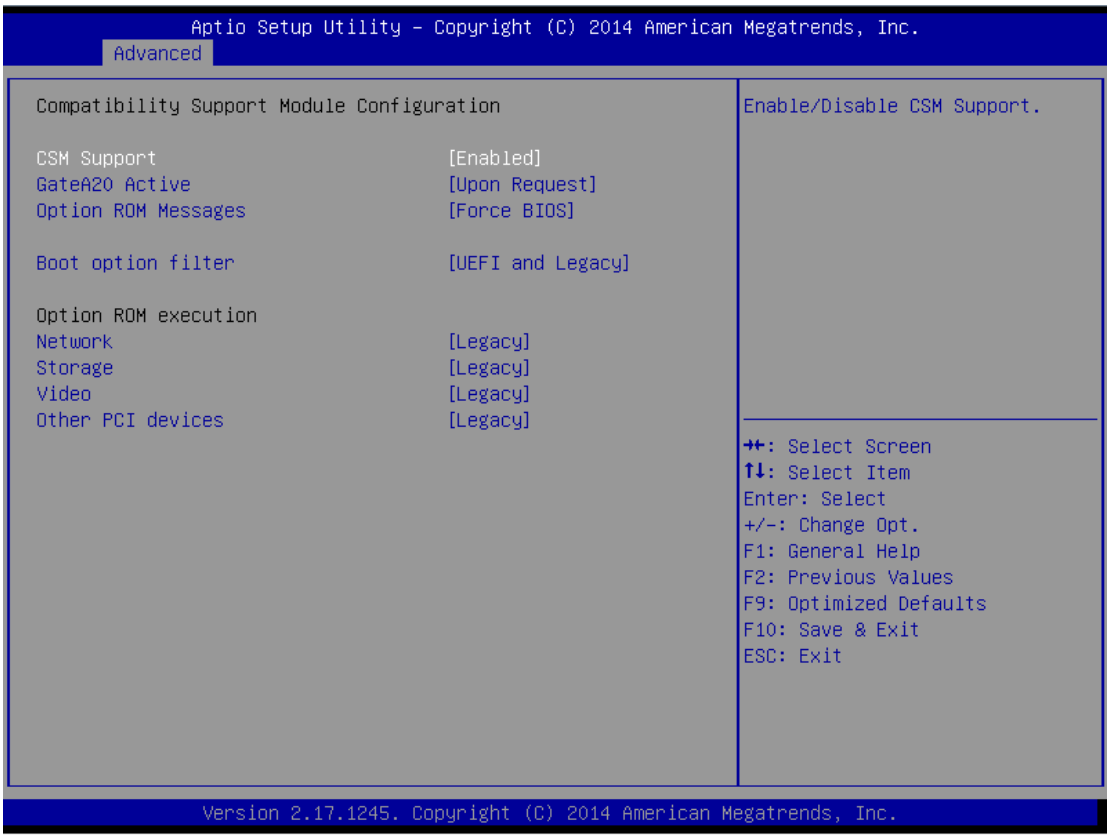

CSM Configuration Menu Interface Instruction Table

Interface Parameters	**Function Description**
CSM Support	CSM support settings
GateA20 Active	A20 address line's control mode settings
Option Rom Message	Option Rom display mode settings
Boot option filter	Boot option filter settings
Option ROM execution	Option Rom execution method
Network	Network card Option Rom execution method settings
Storage	Storage device Option Rom execution method settings
Video	Video device Option Rom execution method settings

Other PCI devices	Other PCI devices Option Rom execution method settings

3.2.2.7 USB Configuration

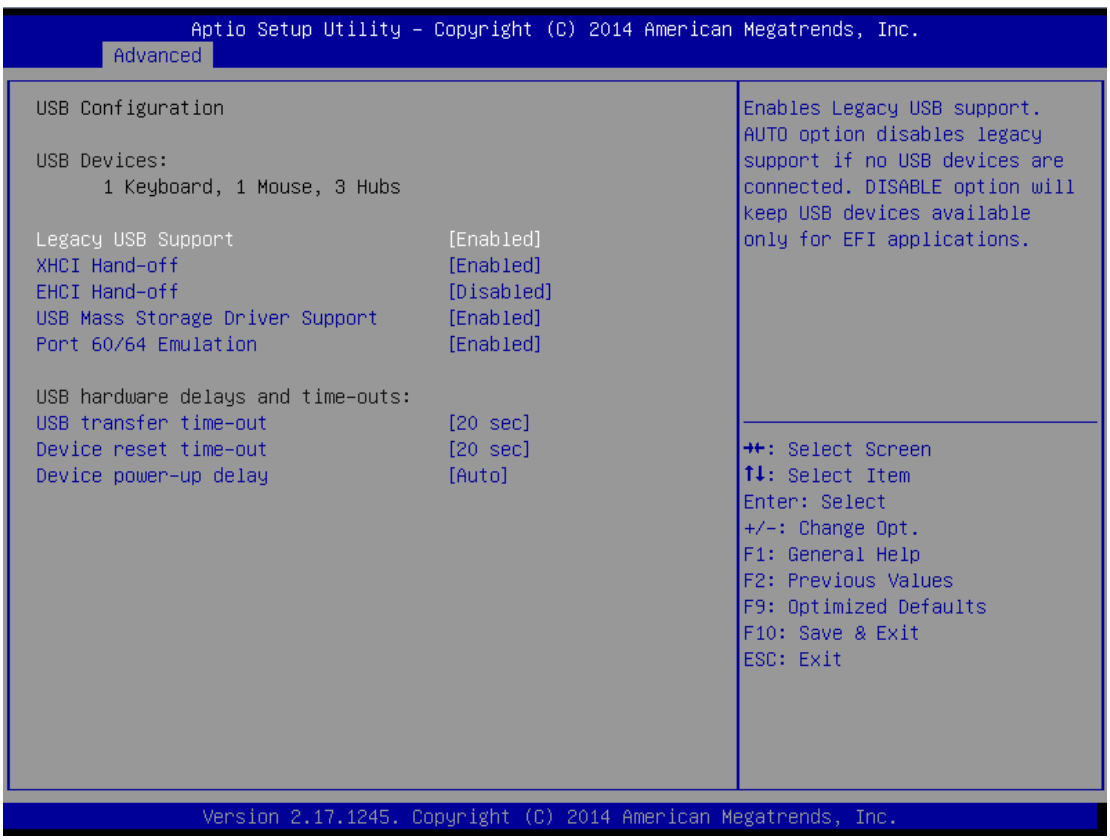
Aptio Setup Utility – Copyright (C) 2014 American Megatrends, Inc.
Advanced
USB Configuration
USB Devices:
1 Keyboard, 1 Mouse, 3 Hubs
Legacy USB Support [Enabled]
XHCI Hand-off [Enabled]
EHCI Hand-off [Disabled]
USB Mass Storage Driver Support [Enabled]
Port 60/64 Emulation [Enabled]
USB hardware delays and time-outs:
USB transfer time-out [20 sec]
Device reset time-out [20 sec]
Device power-up delay [Auto]
Enables Legacy USB support. AUTO option disables legacy support if no USB devices are connected. DISABLE option will keep USB devices available only for EFI applications.
→←: Select Screen
↑↓: Select Item
Enter: Select
+/-: Change Opt.
F1: General Help
F2: Previous Values
F9: Optimized Defaults
F10: Save & Exit
ESC: Exit
Version 2.17.1245. Copyright (C) 2014 American Megatrends, Inc.

USB Menu Interface Instruction Table

Interface Parameters	**Function Description**
Legacy USB Support	Legacy USB device settings
XHCI Hand-off	Expansible host controller interface settings, orienting to USB 3.0.
EHCI Hand-off	Enhanced host controller interface settings, orienting to USB2.0.
USB Mass Storage Driver Support	USB mass storage driver support settings
Port 60/64 Emulation	USB port 60/64h emulation settings

3.2.2.8 Onboard LAN Configuration

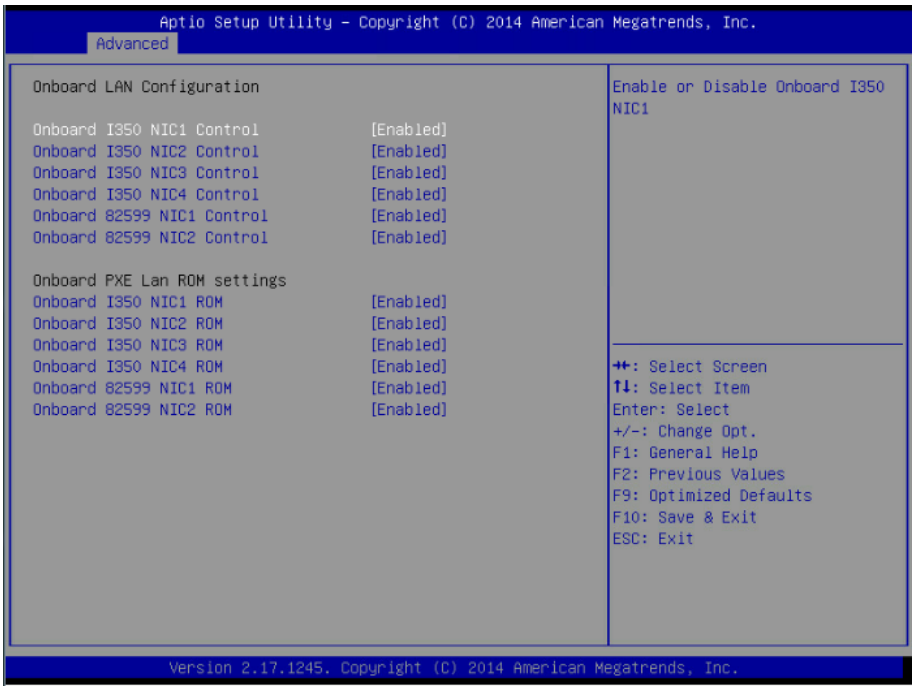
Aptio Setup Utility – Copyright (C) 2014 American Megatrends, Inc.
Advanced
Onboard LAN Configuration
Onboard I350 NIC1 Control [Enabled]
Onboard I350 NIC2 Control [Enabled]
Onboard I350 NIC3 Control [Enabled]
Onboard I350 NIC4 Control [Enabled]
Onboard 82599 NIC1 Control [Enabled]
Onboard 82599 NIC2 Control [Enabled]
Onboard PXE Lan ROM settings
Onboard I350 NIC1 ROM [Enabled]
Onboard I350 NIC2 ROM [Enabled]
Onboard I350 NIC3 ROM [Enabled]
Onboard I350 NIC4 ROM [Enabled]
Onboard 82599 NIC1 ROM [Enabled]
Onboard 82599 NIC2 ROM [Enabled]
Enable or Disable Onboard I350 NIC1
→←: Select Screen
↑↓: Select Item
Enter: Select
+/-: Change Opt.
F1: General Help
F2: Previous Values
F9: Optimized Defaults
F10: Save & Exit
ESC: Exit
Version 2.17.1245. Copyright (C) 2014 American Megatrends, Inc.

Onboard LAN Configuration Menu Interface Instruction Table

Interface Parameters	**Function Description**
Onbaord I350 NIC1 Control	Onboard network card NIC1 switching settings
---	---
Onboard PXE Lan ROM Settings	Onboard Lan PXE option switch settings
---	---

3.2.3 Chipset Menu

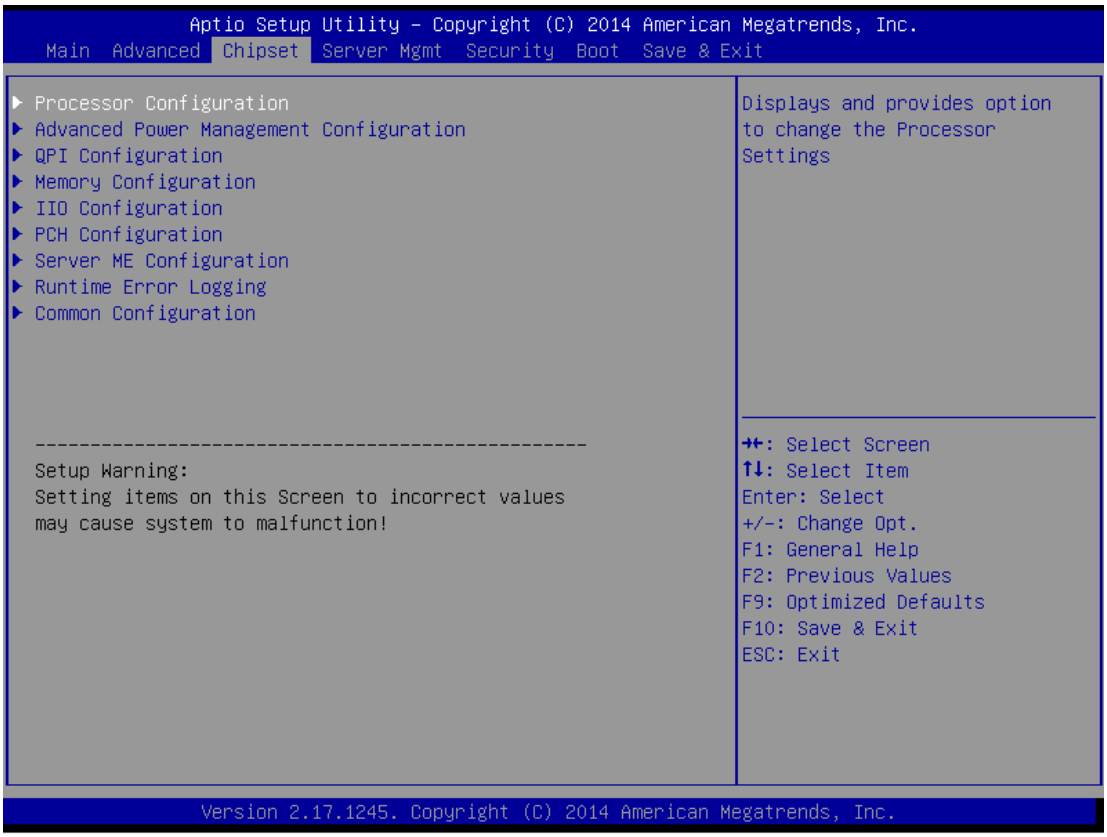
Aptio Setup Utility – Copyright (C) 2014 American Megatrends, Inc.
Main Advanced Chipset Server Mgmt Security Boot Save & Exit
Processor Configuration
Advanced Power Management Configuration
QPI Configuration
Memory Configuration
IIO Configuration
PCH Configuration
Server ME Configuration
Runtime Error Logging
Common Configuration
Displays and provides option to change the Processor Settings
Setup Warning:
Setting items on this Screen to incorrect values may cause system to malfunction!
→←: Select Screen
↑↓: Select Item
Enter: Select
+/-: Change Opt.
F1: General Help
F2: Previous Values
F9: Optimized Defaults
F10: Save & Exit
ESC: Exit
Version 2.17.1245. Copyright (C) 2014 American Megatrends, Inc.

Chipset Menu Interface Instruction Table

Interface Parameters	**Function Description**
Processor Configuration	Processor configuration
Advanced Power Management Configuration	Advanced power management configuration
QPI Configuration	QPI configuration
Memory Configuration	Memory configuration
IIO Configuration	IIO configuration
PCH Configuration	PCH configuration
Server ME Configuration	Server ME configuration
Runtime Error Logging	Runtime error log configuration
Common Configuration	Common options configuration

3.2.3.1 Processor Configuration

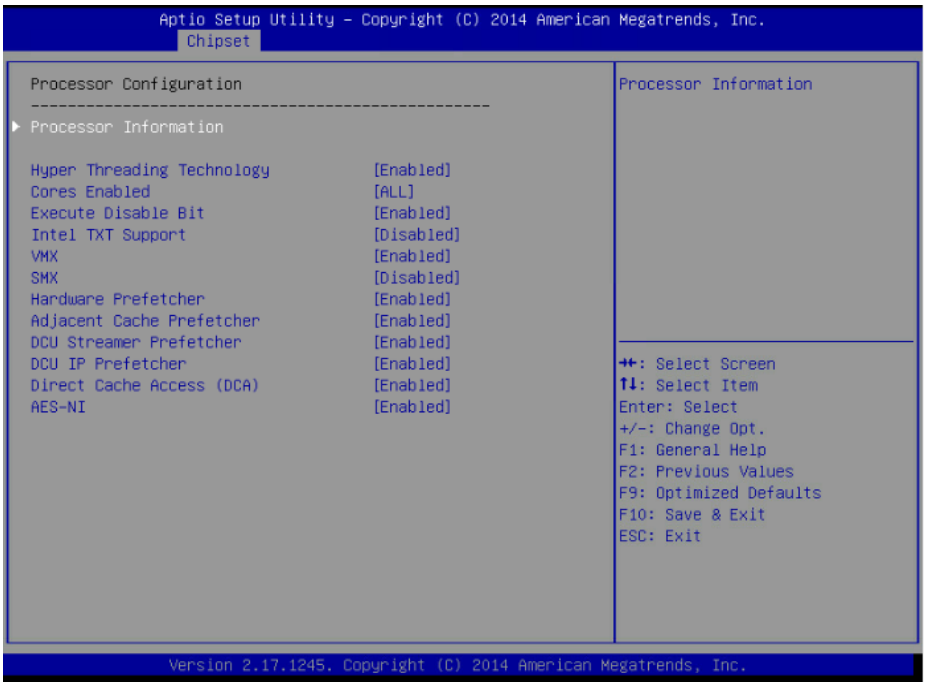

Processor Configuration Menu Interface Instruction Table

Interface Parameters	**Function Description**
Processor Information	Processor information sub-menu, and processor detailed information.
Hyper Threading Technology	Hyper threading technology settings
Core Enabled	CPU core number settings
Execute Disable Bit	Virus protecting technology settings
Intel TXT Support	Intel trustable execution technology support settings
VMX	Intel hardware-assisted virtualization technology settings
SMX	Safe mode expansion settings
Hardware Prefetcher	Hardware prefetch settings
Adjacent Cache Prefetch	Adjacent high speed cache prefetch settings
DCU Streamer Prefetcher	DCU Streamer prefetch settings
DCU IP Prefectcher	DCU IP prefetch settings

Direct Cache Access (DCA)	Direct high speed cache access settings
AES-NI	Intel AES-NI advanced encryption standard settings

3.2.3.2 Advanced Power Management Configuration

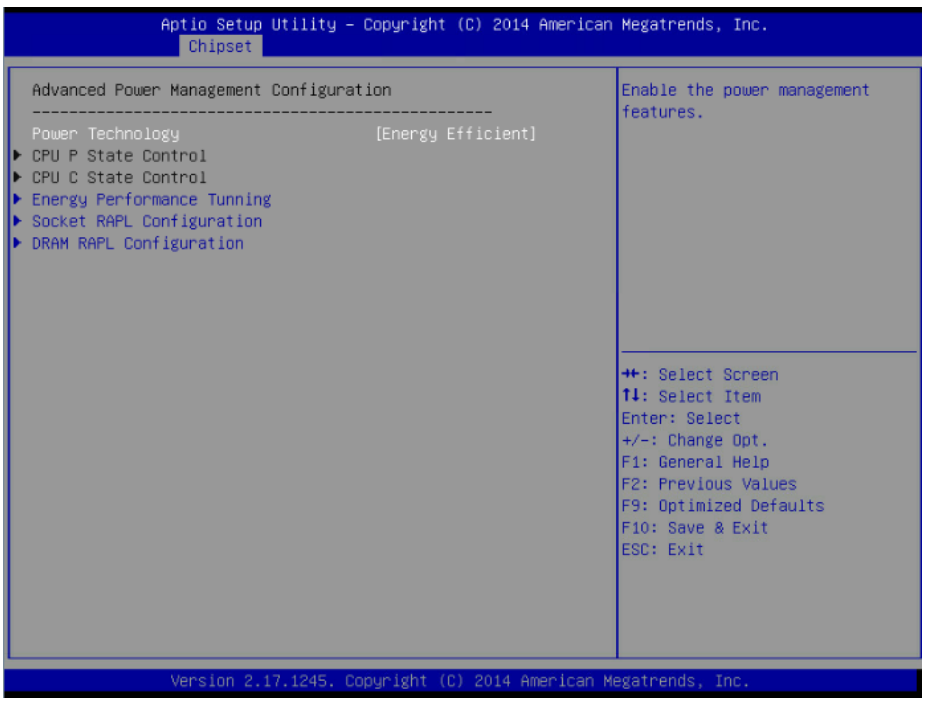

Advanced Power Management Configuration Menu Interface Instruction Table

Interface Parameters	**Function Description**
Power Technology	To set power management
CPU P State Control	CPU P State control sets sub-menu, and starts when Power Technology is set to [Custom].
CPU C State Control	CPU C State control sets sub-menu, and starts when Power Technology is set to [Custom].
Energy Performance Tunning	CPU performance and energy tuning sub-menu
Socket RAPL Configuration	Turbo power limit settings sub-menu, and EIST option requires to be set to [Enabled].
DRAM RAPL Configuration	DRAM RAPL configuration sub-menu

1)CPU P State Control

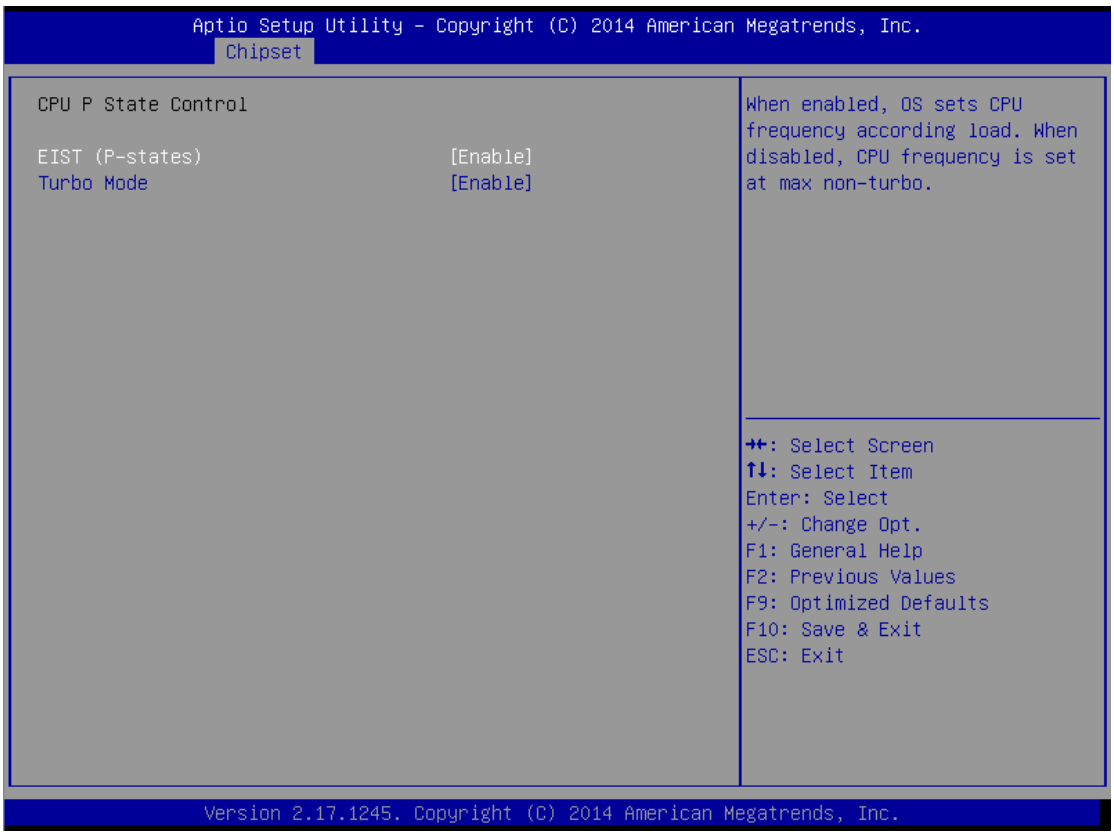
Aptio Setup Utility – Copyright (C) 2014 American Megatrends, Inc.
Chipset
CPU P State Control
EIST (P-states) [Enable]
Turbo Mode [Enable]
When enabled, OS sets CPU frequency according load. When disabled, CPU frequency is set at max non-turbo.
→←: Select Screen
↑↓: Select Item
Enter: Select
+/-: Change Opt.
F1: General Help
F2: Previous Values
F9: Optimized Defaults
F10: Save & Exit
ESC: Exit
Version 2.17.1245. Copyright (C) 2014 American Megatrends, Inc.

CPU P State Control Menu Interface Instruction Table

Interface Parameters	**Function Description**
EIST(P-states)	EIST switching settings
Turbo Mode	Turbo mode switching settings

2)CPU C State Control

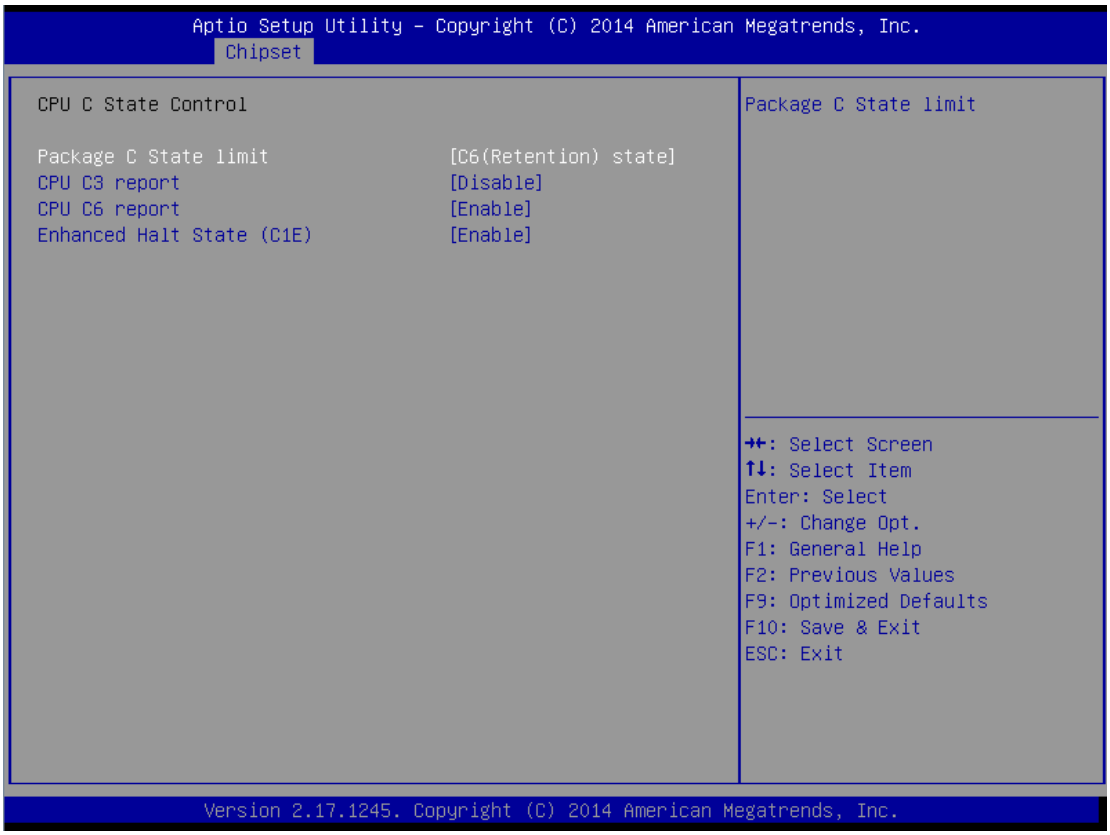
Aptio Setup Utility – Copyright (C) 2014 American Megatrends, Inc.
Chipset
CPU C State Control
Package C State limit [C6(Retention) state]
CPU C3 report [Disable]
CPU C6 report [Enable]
Enhanced Halt State (C1E) [Enable]
Package C State limit
→←: Select Screen
↑↓: Select Item
Enter: Select
+/-: Change Opt.
F1: General Help
F2: Previous Values
F9: Optimized Defaults
F10: Save & Exit
ESC: Exit
Version 2.17.1245. Copyright (C) 2014 American Megatrends, Inc.

CPU C State Control Menu Interface Instruction Table

Interface Parameters	**Function Description**
Package C State limit	C state limit settings
CPU C3 report	C3 switching settings
CPU C6 report	C6 switching settings
Enhanced Halt State (C1E)	C1E switching settings

3)Energy Performance Tuning

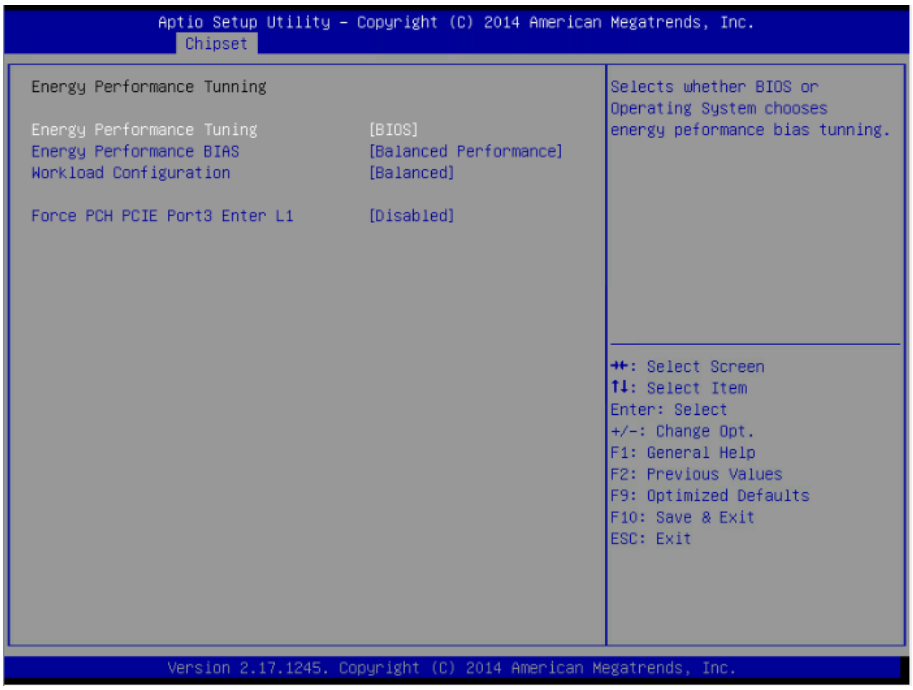
Aptio Setup Utility – Copyright (C) 2014 American Megatrends, Inc.
Chipset
Energy Performance Tunning
Energy Performance Tuning [BIOS]
Energy Performance BIAS [Balanced Performance]
Workload Configuration [Balanced]
Force PCH PCIE Port3 Enter L1 [Disabled]
Selects whether BIOS or Operating System chooses energy peformance bias tunning.
→←: Select Screen
↑↓: Select Item
Enter: Select
+/-: Change Opt.
F1: General Help
F2: Previous Values
F9: Optimized Defaults
F10: Save & Exit
ESC: Exit
Version 2.17.1245. Copyright (C) 2014 American Megatrends, Inc.

Energy Performance Tunning Menu Interface Instruction Table

Interface Parameters	**Function Description**
Energy Performance Tunning	To select BIOS or OS to carry out energy performance tuning
Energy PerformanceBIAS	Energy performance management settings
Workload Configuration	Workload configuration
Force PCH PCIE Port3 Enter L1	PCH PCIE Port 3 settings

3.2.3.3 QPI Configuration

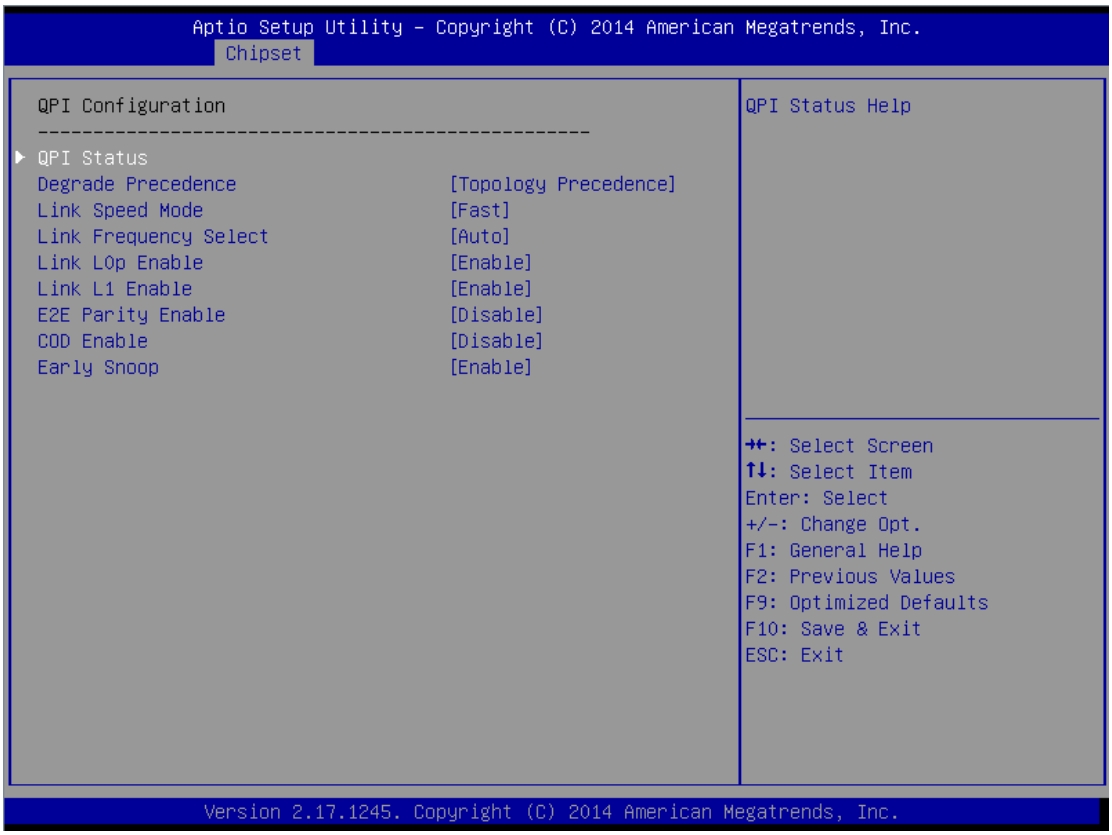

QPI Configuration Menu Interface Instruction Table

Interface Parameters	**Function Description**
QPI Satus	QPI status display sub-menu
Degrade Precedence	To degrade to priority settings.
Link Speed Mode	Link speed mode settings
Link Frequency Select	Link frequency selection settings
Link L0p Enable	Link power saving mode settings, which is made when bandwidth is half of the peak bandwidth..
Link L1 Enable	In the case that system is extremely idle, turn off QPI Link.
E2E Parity Enable	E2E parity check enabling settings
COD Enable	COD enabling settings
Early Snoop	Early Snoop settings

3.2.3.4 Memory Configuration

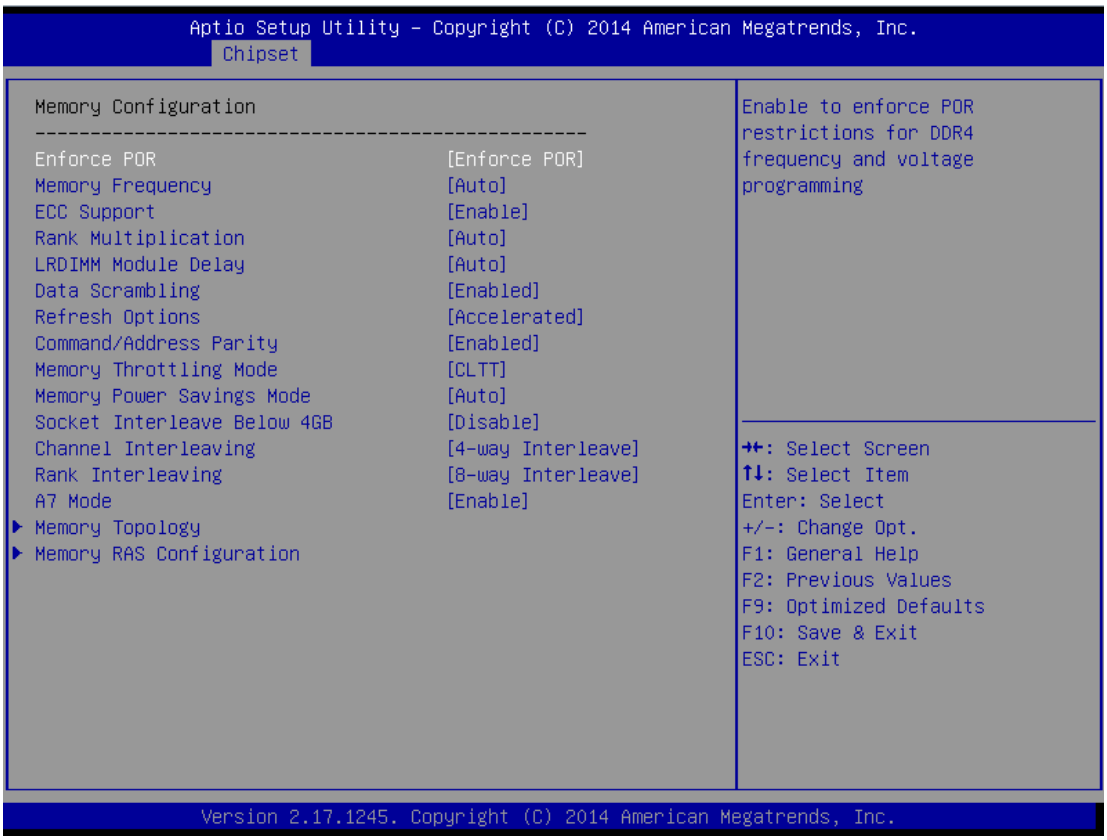

Memory Configuration Menu Interface Instruction Table

Interface Parameters	**Function Description**
Enforce POR	To execute POR settings
Memory Frequency	Memory frequency settings
ECC Support	ECC support settings
Rank Multiplication	Rank multiplication settings
LRDIMM Module Delay	LRDIMM module delay settings
Data Scrambling	Data scrambling settings
Refresh Options	Refresh mode settings
Command/Address Parity	DDR4 command/address parity check settings
Memory Throttling Mode	Memory thermal throttling mode settings
Memory Power Savings Mode	Memory power saving mode settings
Socket Interleave Below 4GB	Processor Interleaving settings on address space below 4G.

Channel Interleaving	Channel interleaving settings
Rank Interleaving	Rank interleaving settings
A7 Mode	A7 mode settings
Memory Topology	Memory Topology
Memory RAS Configuration	Memory RAS configuration sub-menu

1)Memory RAS Configuration

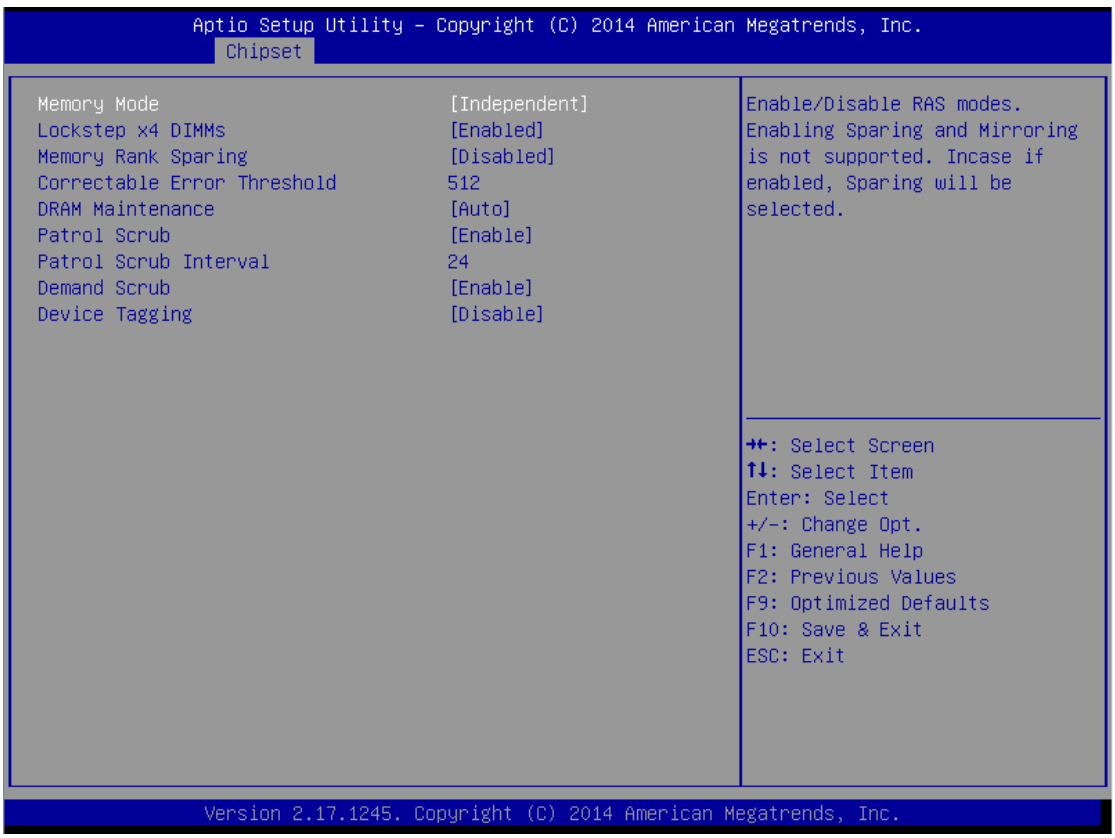
Aptio Setup Utility – Copyright (C) 2014 American Megatrends, Inc.
Chipset
Memory Mode [Independent]
Lockstep x4 DIMMs [Enabled]
Memory Rank Sparing [Disabled]
Correctable Error Threshold 512
DRAM Maintenance [Auto]
Patrol Scrub [Enable]
Patrol Scrub Interval 24
Demand Scrub [Enable]
Device Tagging [Disable]
Enable/Disable RAS modes. Enabling Sparing and Mirroring is not supported. Incase if enabled, Sparing will be selected.
→←: Select Screen
↑↓: Select Item
Enter: Select
+/-: Change Opt.
F1: General Help
F2: Previous Values
F9: Optimized Defaults
F10: Save & Exit
ESC: Exit
Version 2.17.1245. Copyright (C) 2014 American Megatrends, Inc.

Memory RAS Configuration Menu Interface Instruction Table

Interface Parameters	**Function Description**
Memory Mode	As for memory mode configuration, there’re 3 options of [Independent], [Mirroring] and [Lock Step].
Lockstep X4 DIMMs	X4 DIMMs' Lockstep switching settings
Memory Rank Sparing	Memory Rank hot sparing settings
Correctable Error Threshold	Correctable error threshold settings
DRAM Maintenance	DRAM maintenance settings
Patrol Scrub	Patrol Scrub settings

Patrol Scrub Interval	Patrol Scrub interleaving settings
Demand Scrub	Demand Scrub settings
Device Tagging	Device tagging settings

3.2.3.5 IIO Configuration

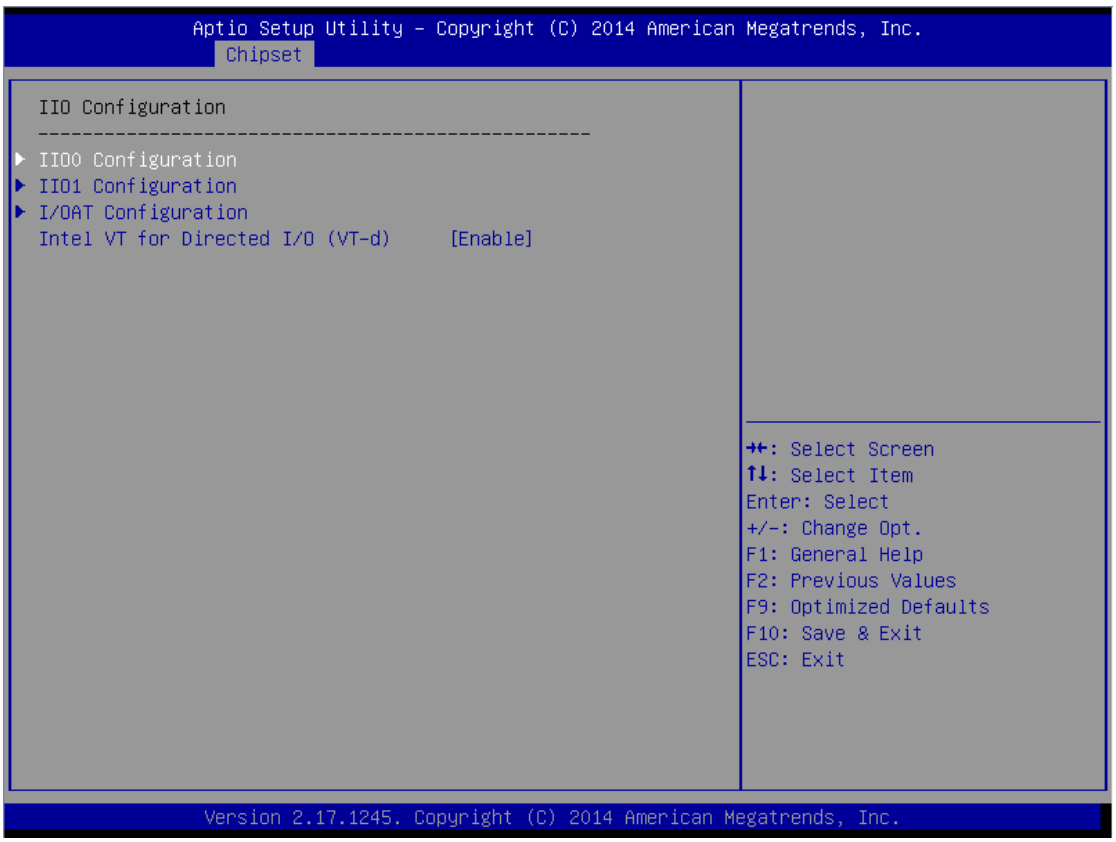

IIO Configuration Menu Interface Instruction Table

Interface Parameters	**Function Description**
IIO0 Configuration	IIO0 configuration sub-menu, used to set link speed of PCIE device of CPU0.
IIO1 Configuration	IIO1 configuration sub-menu, used to set link speed of PCIE device of CPU1.
I/OAT Configuration	Intel I/O acceleration technology configuration sub-menu.

Intel VT for Directed I/O (VT-d)	Intel VT-d switching settings

3.2.3.6 PCH Configuration

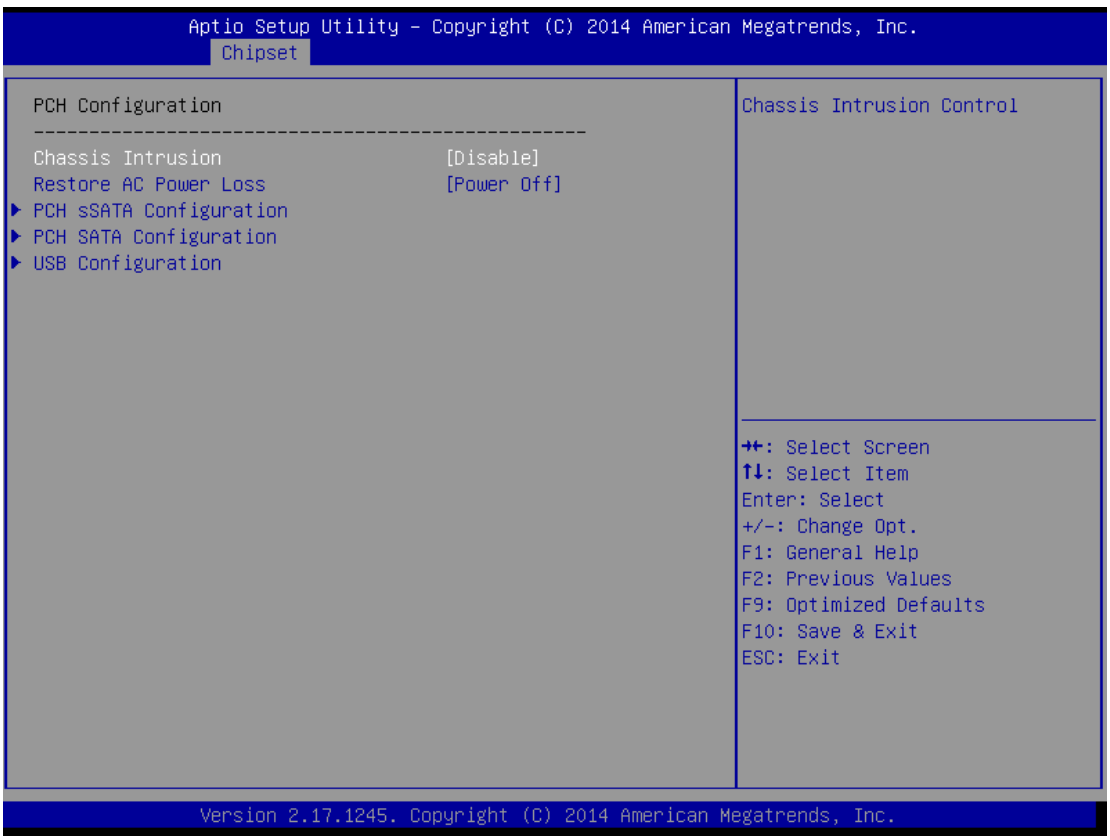

PCH Configuration Menu Interface Instruction Table

Interface Parameters	**Function Description**
Chassis Intrusion	Chassis intrusion switching settings
Restore AC Power Loss	AC power-on power status settings
PCH sSATA Configuration	PCH sSATA configuration sub-menu
PCH SATA Configuration	PCH SATA configuration sub-menu
USB Configuration	USB configuration sub-menu

1)PCH SATA Configuration

Taking PCH SATA Configuration menu as an example, introduce onboard SATA port, and SATA hard disk configuration, while PCH Ssata Configuration is similar

to this, which will not be repeated here.

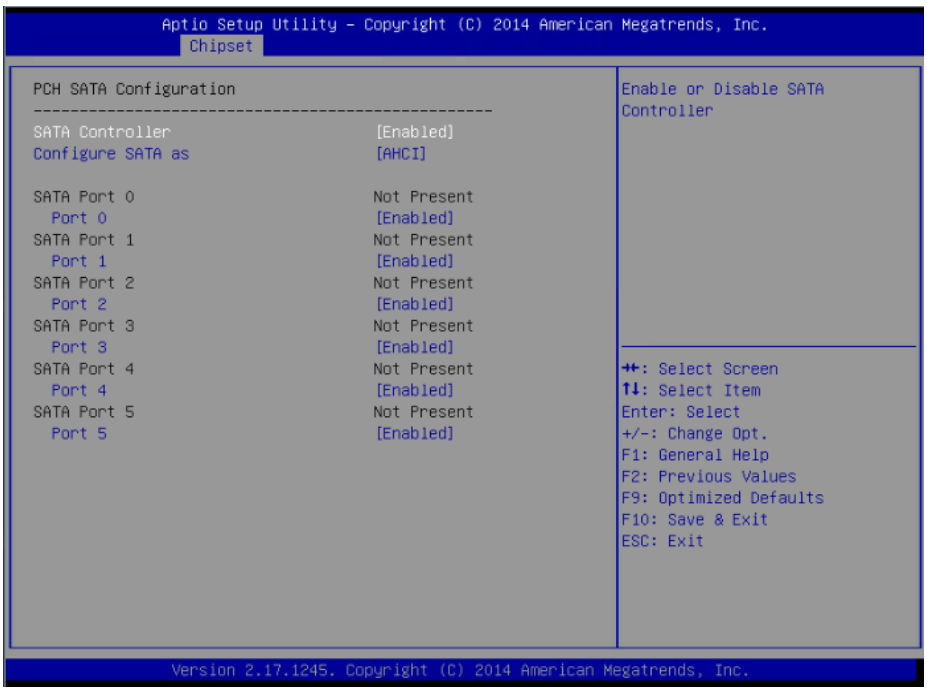

PCH SATA Configuration Menu Interface Instruction Table

Interface Parameters	**Function Description**
SATA Controller	SATA controller switching settings
Configure SATA as	As for SATA mode configuration, there're two modes of [AHCI] and [RAID] for setting.
SATA Port 0/1/2/3/4/5	Information of hard disks connected to onboard SATA port 0/1/2/3/4/5.

SATA RAID mode configuration.

a. Configure SATA as an option set to [RAID], press F10 to save settings, and system restarts.

b. During system startup, the following content will display on the screen:

Press<CTRL-I> to enter Configuration Utility…

Meanwhile, press [Ctrl] and [I] synchronously to enter SATA RAID configuration interface, and one example is as shown in the following figure.

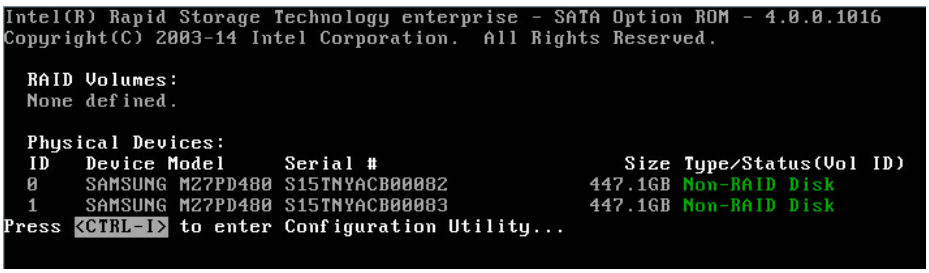
Intel(R) Rapid Storage Technology enterprise - SATA Option ROM - 4.0.0.1016
Copyright(C) 2003-14 Intel Corporation. All Rights Reserved.
RAID Volumes:
None defined.
Physical Devices:
ID Device Model Serial # Size Type/Status(Vol ID)
0 SAMSUNG MZ7PD480 S15TNYACB00082 447.1GB Non-RAID Disk
1 SAMSUNG MZ7PD480 S15TNYACB00083 447.1GB Non-RAID Disk
Press <CTRL-I> to enter Configuration Utility...

c. After entering SATA RAID configuration interface, menu list information, information of hard disk connecting to SATA controller (hard disk ID number, hard disk type, hard disk capacity as well as whether hard disk is a volume member etc.), existed RAID volume information (including volume ID number, name, RAID level, capacity, status, whether information bootable) will all display.

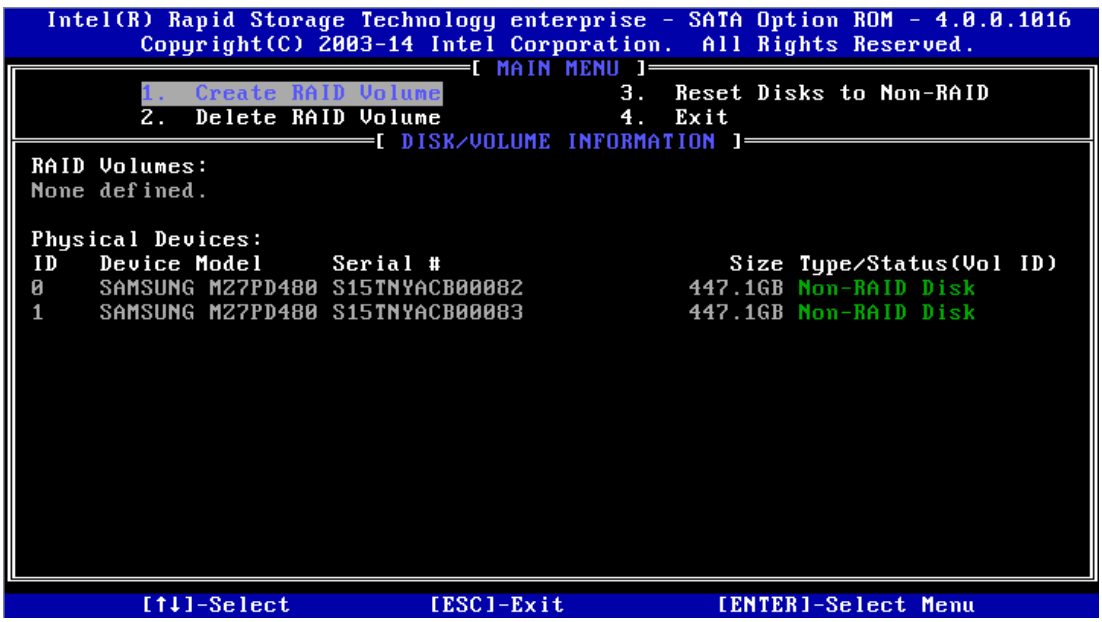
Intel(R) Rapid Storage Technology enterprise - SATA Option ROM - 4.0.0.1016
Copyright(C) 2003-14 Intel Corporation. All Rights Reserved.
[MAIN MENU]
1. Create RAID Volume
2. Delete RAID Volume
3. Reset Disks to Non-RAID
4. Exit
[DISK/VOLUME INFORMATION]
RAID Volumes:
None defined.
Physical Devices:
ID Device Model Serial # Size Type/Status(Vol ID)
0 SAMSUNG MZ7PD480 S15TNYACB00082 447.1GB Non-RAID Disk
1 SAMSUNG MZ7PD480 S15TNYACB00083 447.1GB Non-RAID Disk
[↑↓]-Select [ESC]-Exit [ENTER]-Select Menu

Press Key	Description
↑↓	Used to move cursor in different menus or to change values of menu options.
TAB	To select the next menu setting option.
Enter	To select a menu.
Esc	To exit menu or return to previous menu from sub-menu.

d.SATA RAID configuration interface has the following 4 executable menus:

Create RAID Volume	To create an RAID volume.
Delete RAID Volume	To delete an existed RAID volume.
Reset Disks to Non-RAID	To reset hard disks in RAID volume, and to restore them to non-RAID status.
Exit	To exit SATA Host RAID configuration interface.

a)Create RAID Volume Menu

After entering SATA RAID configuration interface, you could use up and down arrows to select this menu, then press [Enter] to create an RAID volume menu, or directly enter the number before the menu to create an RAID volume menu, for other menu operations are similar, so it will not be repeated here. A Create RAID Volume instance is as shown in the following figure:

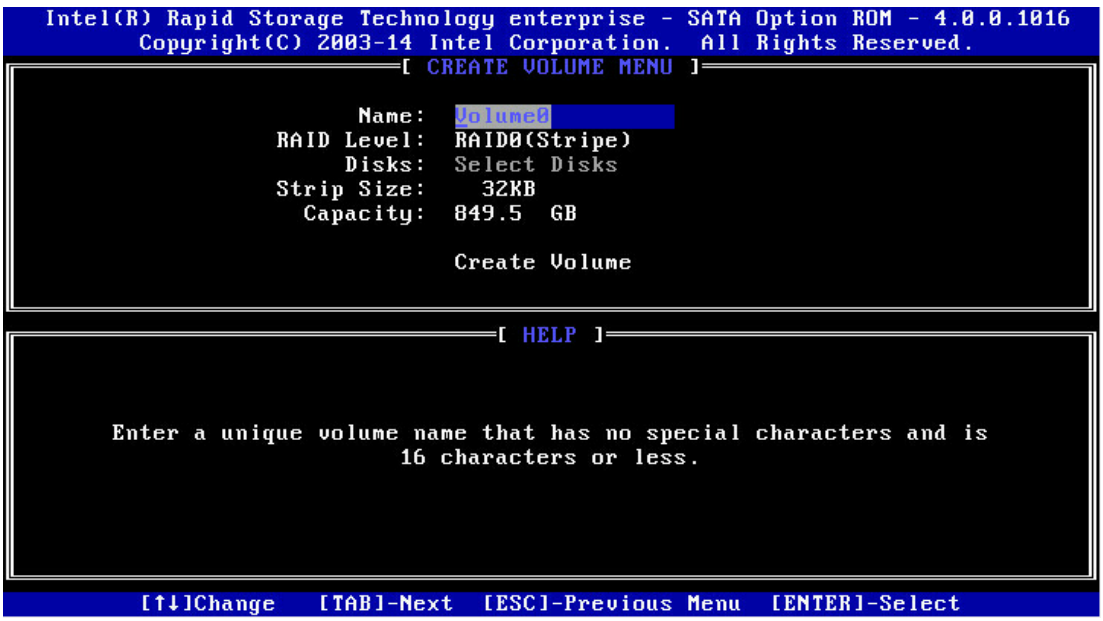
Intel(R) Rapid Storage Technology enterprise - SATA Option ROM - 4.0.0.1016
Copyright(C) 2003-14 Intel Corporation. All Rights Reserved.
[CREATE VOLUME MENU]
Name: Volume0
RAID Level: RAID0(Stripe)
Disks: Select Disks
Strip Size: 32KB
Capacity: 849.5 GB
Create Volume
[HELP]
Enter a unique volume name that has no special characters and is 16 characters or less.
[↑↓]Change [TAB]-Next [ESC]-Previous Menu [ENTER]-Select

System displays the following menu options:

Name	Please enter a volume label name less than 16 characters without containing any special character.
RAID Level	Please select RAID volume level, if no volume has been created at present, there're four volume levels of RAID0(Stripe), RAID1(Mirror), RAID10(RAID0+1) and RAID5(Parity)for selection, please select volume level according to actual requirements.

	RAID0: This RAID volume is allowed to be made on 2 or above hard disks. RAID1: This RAID volume is allowed to be made on 2 hard disks. RAID10: This RAID volume is allowed to be made on 4 hard disks, which is only available when hard disk quantity is 4 or above. RAID5 (Parity): This RAID volume is allowed to be made on 3 or above hard disks.
Disks	Select hard disks to make RAID volume, press enter after this option is selected, system will enter hard disk selection interface, please select hard disks to make RAID volume using space key accordingly, and then press enter to return to volume create menu.
Strip Size	Please select strip size, only RAID0 and RAID5 volumes could select this option.
Capacity	Set volume capacity, and the default value is the max. volume capacity.

After completing the above configuration, please select [Create Volume], and press enter, system prompts: "WARNING:ALL DATA ON THE SELECTED DISKS WILL BE LOST. Are you sure you want to create this volume ?(Y/N):".

To create an RAID volume, please enter "Y", a volume will be created, and all data on the selected disk will be lost.

Otherwise, please enter "N", to exit volume creation.

Here we enter "Y" to create an RAID volume, after creation completed, return to SATA Host RAID configuration main interface, and the created RAID volume will display in RAID volume.

b) Delete RAID Volume Menu

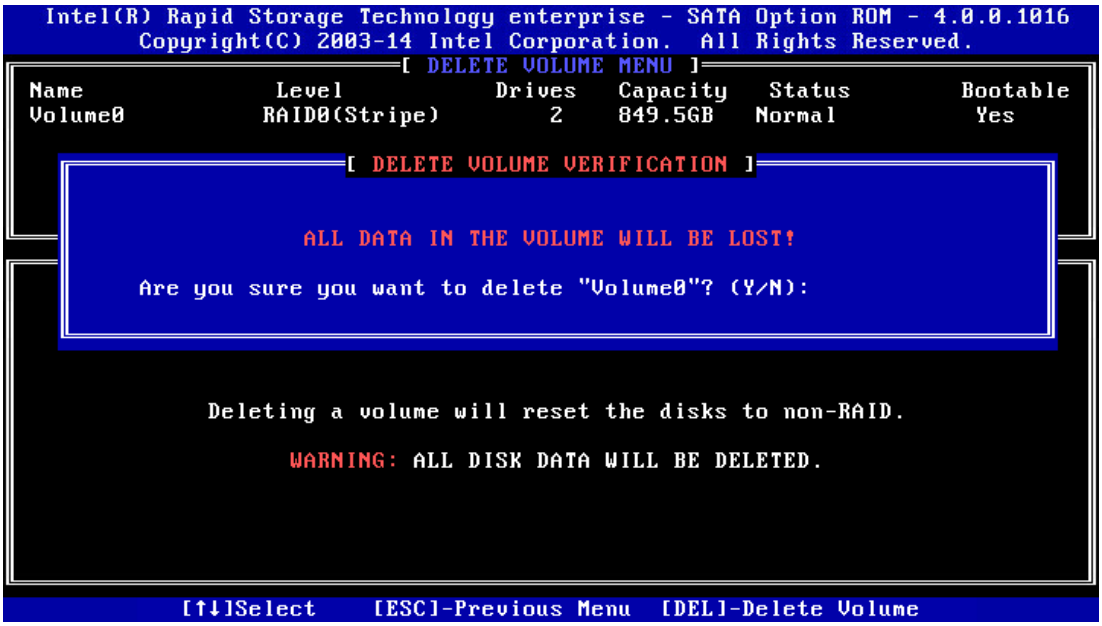
Intel(R) Rapid Storage Technology enterprise - SATA Option ROM - 4.0.0.1016
Copyright(C) 2003-14 Intel Corporation. All Rights Reserved.
[DELETE VOLUME MENU]
Name Level Drives Capacity Status Bootable
Volume0 RAID0(Stripe) 2 849.5GB Normal Yes
[DELETE VOLUME VERIFICATION]
ALL DATA IN THE VOLUME WILL BE LOST!
Are you sure you want to delete "Volume0"? (Y/N):
Deleting a volume will reset the disks to non-RAID.
WARNING: ALL DISK DATA WILL BE DELETED.
[↑↓]Select [ESC]-Previous Menu [DEL]-Delete Volume

After entering Delete RAID Volume menu, system prompts: “Deleting a volume will reset the disks to non-RAID. Warning: ALL DISKS DATA WILL BE DELETED.”.

To delete an RAID volume, please press [DEL], system prompts: “ALL DATA IN THE VOLUME WILL BE LOST!” again. Are you sure you want to delete “Volume*”?(Y/N):", to delete this RAID volume, please enter “Y”, to cancel deletion of this RAID volume, please enter “N”.

c)Reset Disks to Non-RAID Menu

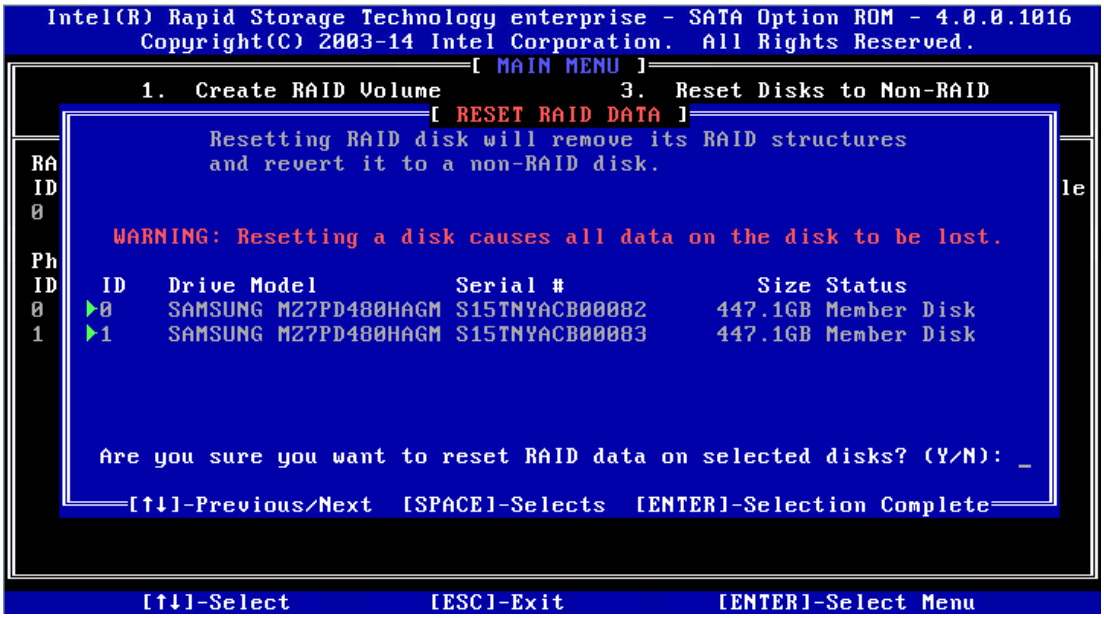
Intel(R) Rapid Storage Technology enterprise - SATA Option ROM - 4.0.0.1016
Copyright(C) 2003-14 Intel Corporation. All Rights Reserved.
[MAIN MENU]
1. Create RAID Volume
3. Reset Disks to Non-RAID
[RESET RAID DATA]
Resetting RAID disk will remove its RAID structures
and revert it to a non-RAID disk.
WARNING: Resetting a disk causes all data on the disk to be lost.
ID Drive Model Serial # Size Status
0 SAMSUNG MZ7PD480HAGM S15TNYACB00082 447.1GB Member Disk
1 SAMSUNG MZ7PD480HAGM S15TNYACB00083 447.1GB Member Disk
Are you sure you want to reset RAID data on selected disks? (Y/N):
[↑↓]-Previous/Next [SPACE]-Selects [ENTER]-Selection Complete
[↑↓]-Select [ESC]-Exit [ENTER]-Select Menu

After entering Reset Disks to Non-RAID menu, system will display all hard disks in RAID volume, please select the hard disk to reset using the space key according to actual demand, and then press enter to reset the hard disk, system prompts “Are you sure you want to reset RAID data on selected disks? (Y/N)” again, enter “Y” or “N” according to prompt. It is to be noted that, during resetting hard disk, data on this disk will all be lost, meanwhile, this disk will not belong to RAID volume any more.

d) Exit Menu

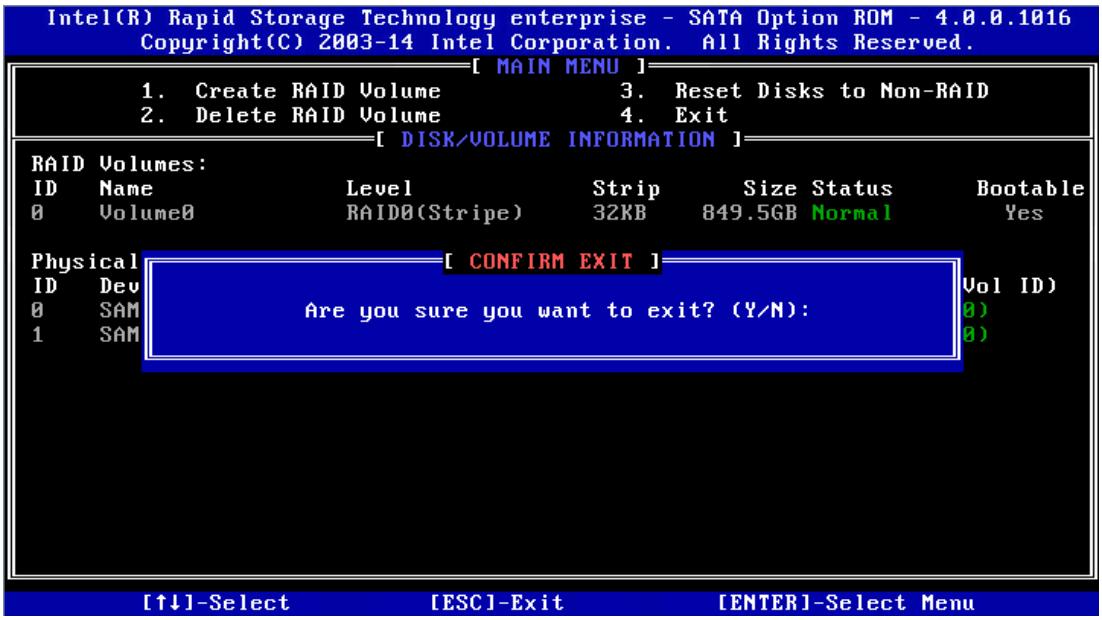

System prompts: " Are you sure you want to exit?(Y/N):", enter “Y”, to exit SAS RAID configuration interface, enter "N”, to cancel exit operation.

3.2.3.7 Server ME Configuration

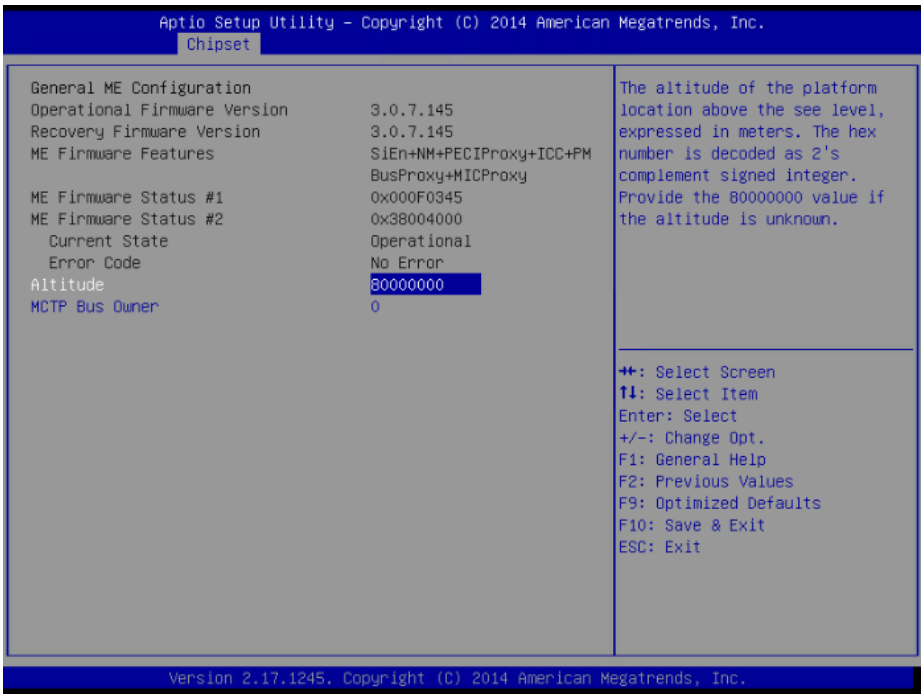
Aptio Setup Utility – Copyright (C) 2014 American Megatrends, Inc.
Chipset
General ME Configuration
Operational Firmware Version 3.0.7.145
Recovery Firmware Version 3.0.7.145
ME Firmware Features SiEn+NM+PECIProxy+ICC+PM BusProxy+MICProxy
ME Firmware Status #1 0x000F0345
ME Firmware Status #2 0x38004000
Current State Operational
Error Code No Error
Altitude 80000000
MCTP Bus Owner 0
The altitude of the platform location above the see level, expressed in meters. The hex number is decoded as 2's complement signed integer. Provide the 80000000 value if the altitude is unknown.
→←: Select Screen
↑↓: Select Item
Enter: Select
+/-: Change Opt.
F1: General Help
F2: Previous Values
F9: Optimized Defaults
F10: Save & Exit
ESC: Exit
Version 2.17.1245. Copyright (C) 2014 American Megatrends, Inc.

Server ME Configuration Menu Interface Instruction Table

Interface Parameters	**Function Description**
Operational Firmware Version	Operational ME firmware version
Recovery Firmware Version	Recovery ME firmware version
ME Firmware Features	ME firmware features
ME Firmware Status #1	ME FW status value #1
ME Firmware Status #2	ME FW status value #2
Current State	Current state
Error code	ME FW error code

3.2.3.8 Common Configuration

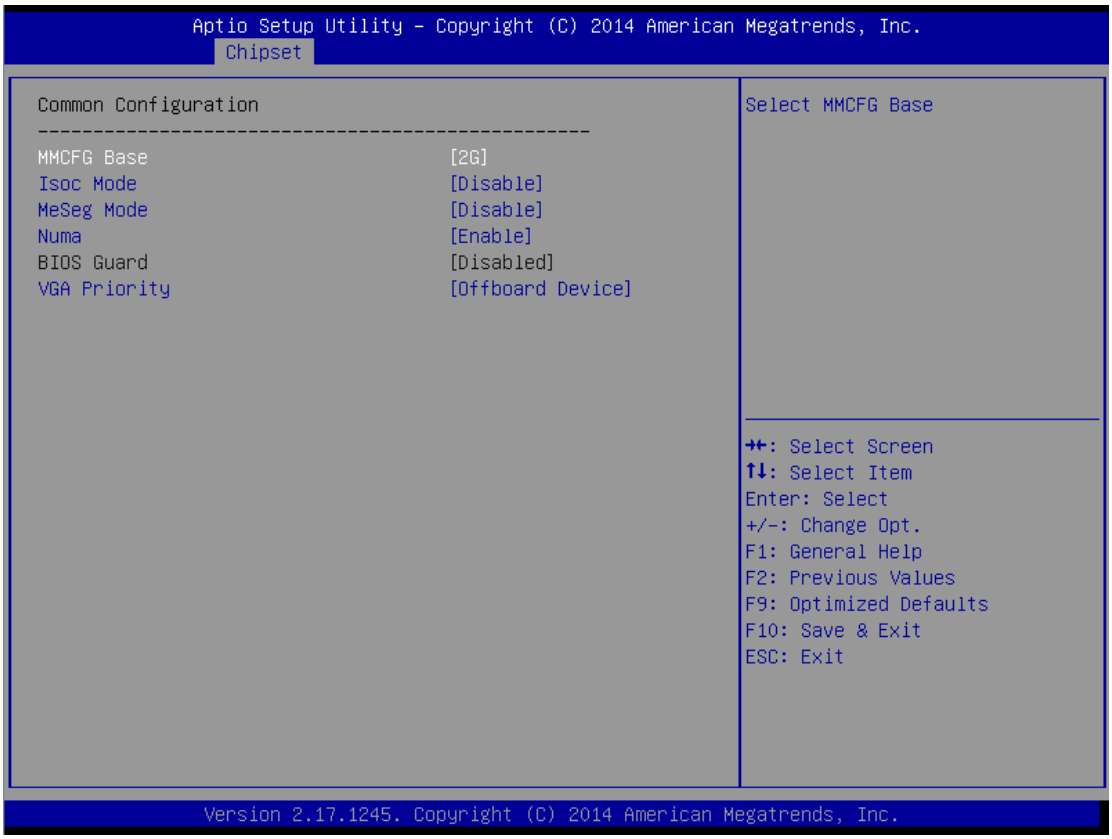

Common Configuration Menu Interface Instruction Table

Interface Parameters	**Function Description**
MMCFG Base	MMCFG base address settings
Isoc Mode	Isoc mode settings
MeSeg Mode	MeSeg mode settings
Numa	Numa switching settings
BIOS Guard	BIOS guarding settings
VGA Priority	Integrated video card and external video card priority settings.

3.2.4 Server Mgmt

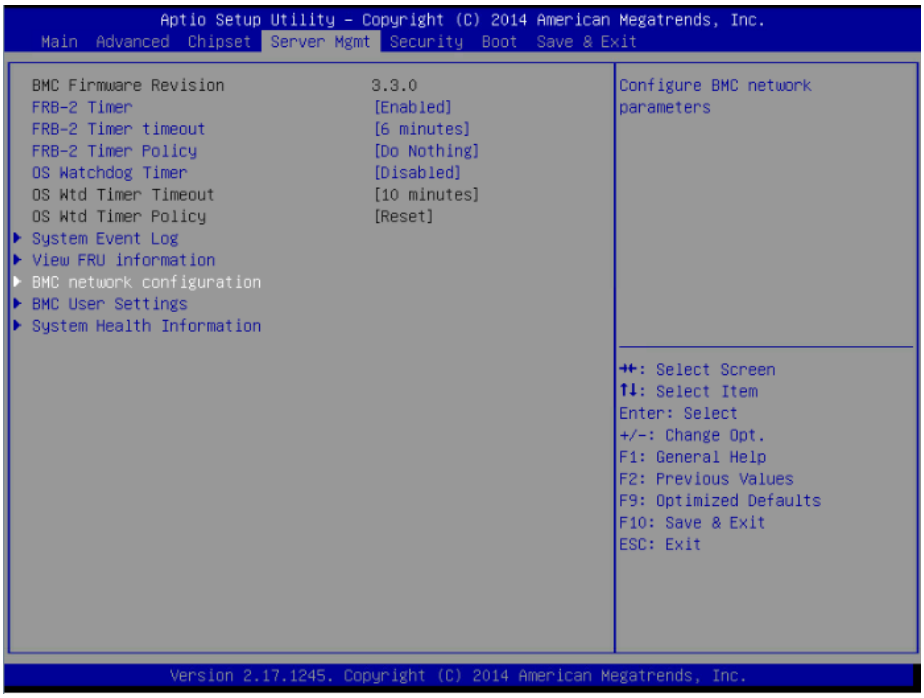
Aptio Setup Utility – Copyright (C) 2014 American Megatrends, Inc.
Main Advanced Chipset Server Mgmt Security Boot Save & Exit
BMC Firmware Revision 3.3.0
FRB-2 Timer [Enabled]
FRB-2 Timer timeout [6 minutes]
FRB-2 Timer Policy [Do Nothing]
OS Watchdog Timer [Disabled]
OS Wtd Timer Timeout [10 minutes]
OS Wtd Timer Policy [Reset]
System Event Log
View FRU information
BMC network configuration
BMC User Settings
System Health Information
Configure BMC network parameters
→←: Select Screen
↑↓: Select Item
Enter: Select
+/-: Change Opt.
F1: General Help
F2: Previous Values
F9: Optimized Defaults
F10: Save & Exit
ESC: Exit
Version 2.17.1245. Copyright (C) 2014 American Megatrends, Inc.

Server Mgmt Menu Interface Instruction Table

Interface Parameters	**Function Description**
BMC Firmware Version	BMC firmware version
FRB-2 TImer	FRB-2 clock settings
FRB-2 Timer timeout	FRB-2 clock expiration time settings
FRB-2 Timer policy	Policy settings after FRB-2 clock expiration
OS Watchdog Timer	System watchdog clock settings
OS Wtd Timer timeout	OS watchdog clock expiration time settings
OS Wtd Timer policy	Policy settings after OS watchdog clock expiration
BMC network configuration	BMC network settings
System Event Log	System event log sub-menu
View FRU information	To view FRU information sub-menu.
BMC network configuration	BMC network configuration sub-menu

BMC User Settings	BMC user settings sub-menu
SystemHealth Information	System health information sub-menu

3.2.4.1 System Event Log

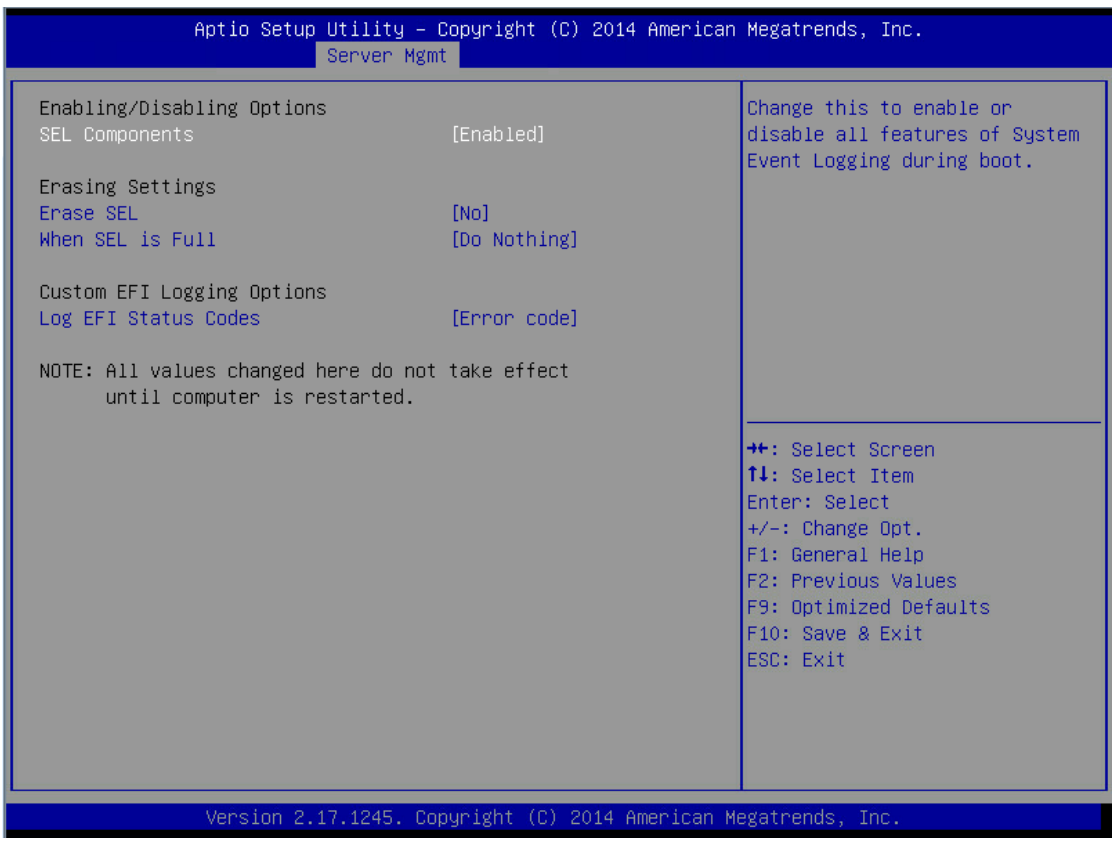
Aptio Setup Utility – Copyright (C) 2014 American Megatrends, Inc.
Server Mgmt
Enabling/Disabling Options
SEL Components [Enabled]
Erasing Settings
Erase SEL [No]
When SEL is Full [Do Nothing]
Custom EFI Logging Options
Log EFI Status Codes [Error code]
NOTE: All values changed here do not take effect until computer is restarted.
Change this to enable or disable all features of System Event Logging during boot.
→←: Select Screen
↑↓: Select Item
Enter: Select
+/-: Change Opt.
F1: General Help
F2: Previous Values
F9: Optimized Defaults
F10: Save & Exit
ESC: Exit
Version 2.17.1245. Copyright (C) 2014 American Megatrends, Inc.

System Event log Menu Interface Instruction Table

Interface Parameters	**Function Description**
SEL Components	System event log switching settings during startup
Erase SEL	System event log erasing settings
When SEL is Full	Operation settings after system event log is full.
Log EFI Staus Codes	Logging EFI status codes settings

3.2.4.2 View FRU Information

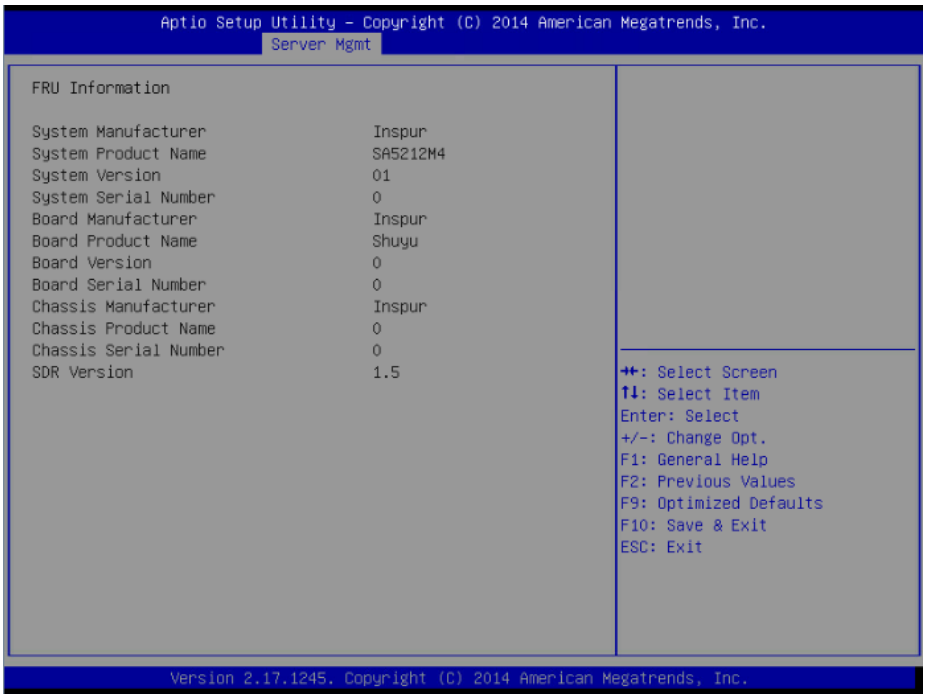

The View FRU Information menu lists BMC FRU information read by BIOS, and BIOS will interact with BMC at each system restart, keeping synchronous update of FRU information.

3.2.4.3 BMC network configuration

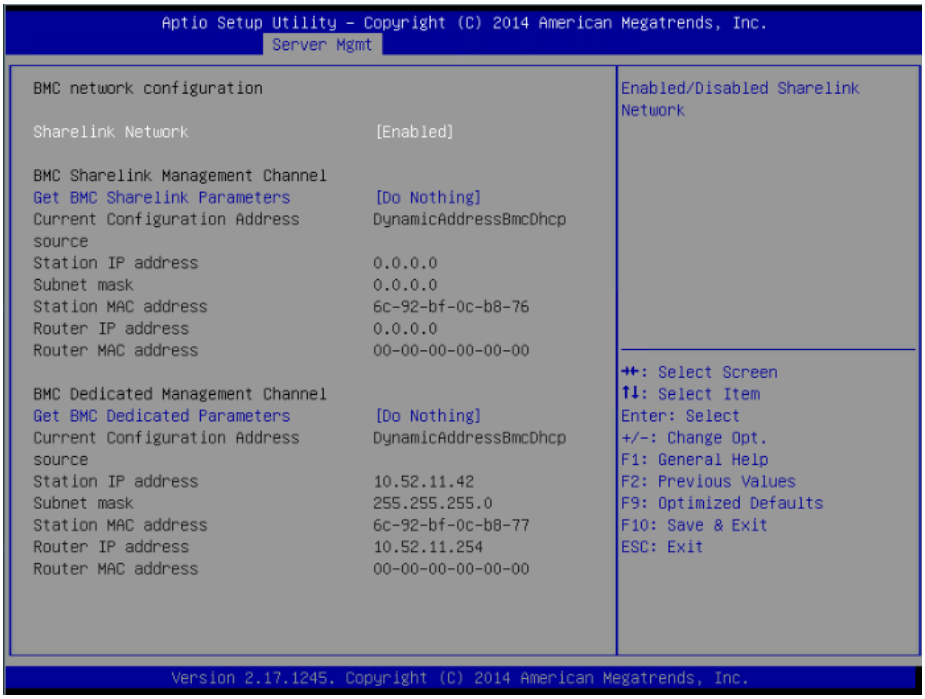
Aptio Setup Utility – Copyright (C) 2014 American Megatrends, Inc.
Server Mgmt
BMC network configuration
Sharelink Network [Enabled]
BMC Sharelink Management Channel
Get BMC Sharelink Parameters [Do Nothing]
Current Configuration Address source DynamicAddressBmcDhcp
Station IP address 0.0.0.0
Subnet mask 0.0.0.0
Station MAC address 6c-92-bf-0c-b8-76
Router IP address 0.0.0.0
Router MAC address 00-00-00-00-00-00
BMC Dedicated Management Channel
Get BMC Dedicated Parameters [Do Nothing]
Current Configuration Address source DynamicAddressBmcDhcp
Station IP address 10.52.11.42
Subnet mask 255.255.255.0
Station MAC address 6c-92-bf-0c-b8-77
Router IP address 10.52.11.254
Router MAC address 00-00-00-00-00-00
Enabled/Disabled Sharelink Network
→←: Select Screen
↑↓: Select Item
Enter: Select
+/-: Change Opt.
F1: General Help
F2: Previous Values
F9: Optimized Defaults
F10: Save & Exit
ESC: Exit
Version 2.17.1245. Copyright (C) 2014 American Megatrends, Inc.

BMC network configuration Menu Interface Instruction Table

Interface Parameters	**Function Description**
Configuration Address Source	Configuration BMC Network Status Parameter: It could set static IPs, and obtain IPs dynamically, while [Unspecified] will not modify BMC network parameters.
Current Configuration Address	Current configuration address status
Station IP adderess	Port IP address
Subnet mask	Subnet mask
Station MAC address	Port MAC address
Router IP address	Router IP address
Router MAC address	Router MAC address

BMC network configuration on BIOS setup interface, is to configure BMC management network via BIOS.

1) If no operation is carried out in BIOS, by default, it will read BMC, and configure its Dedicated management port and shareline management port, taking Dedicated management port as an example, the BIOS reading configuration is as shown in the following figure:

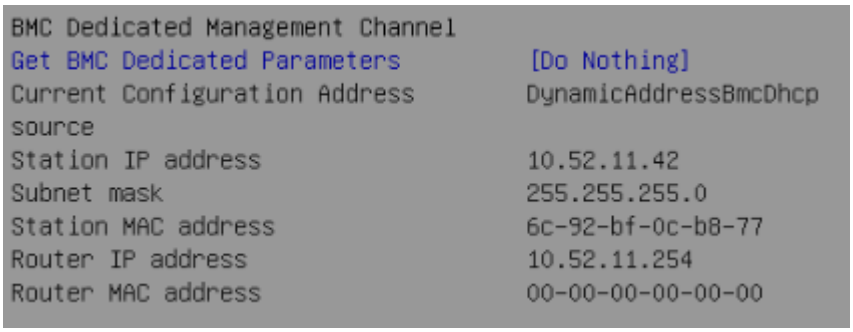
BMC Dedicated Management Channel
Get BMC Dedicated Parameters [Do Nothing]
Current Configuration Address source DynamicAddressBmcDhcp
Station IP address 10.52.11.42
Subnet mask 255.255.255.0
Station MAC address 6c-92-bf-0c-b8-77
Router IP address 10.52.11.254
Router MAC address 00-00-00-00-00-00

2) BIOS could carry out Dynamic and Static network settings on BMC Dedicated management port and sharelink management port, taking Dedicated management port as an example, to set a BMC Static IP as follows:

a. Set the Get BMC Dedicated Parameters option to【Manual】

b. Set the Configuration Address source option to【Static】

c. Select the Station IP Address option, and press Enter, to pop up the Station IP Address window, enter the Static IP to set manually, after configuration is completed, press Enter to confirm, and an example is as shown in the following figure:

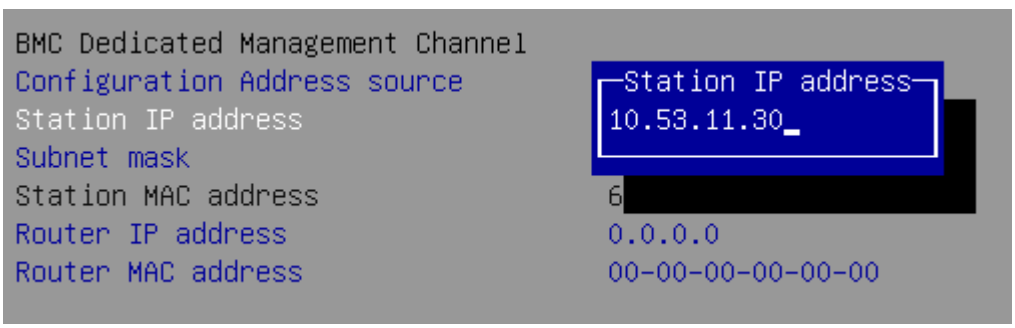

d. Select the Subnet Mask option, and press Enter, to pop up the Subnet Mask box, enter the Subnet Mask to set manually, after configuration is completed, press Enter to confirm, and an example is as shown in the following figure:

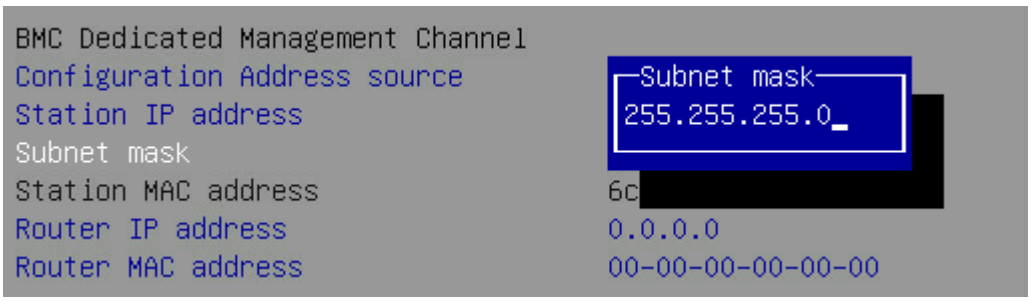

e. Select the Router IP Address option, and press Enter, to pop up the Router IP Address box, enter the Router IP Address to set manually, after configuration is completed, press Enter to confirm, and an example is as shown in the following figure:

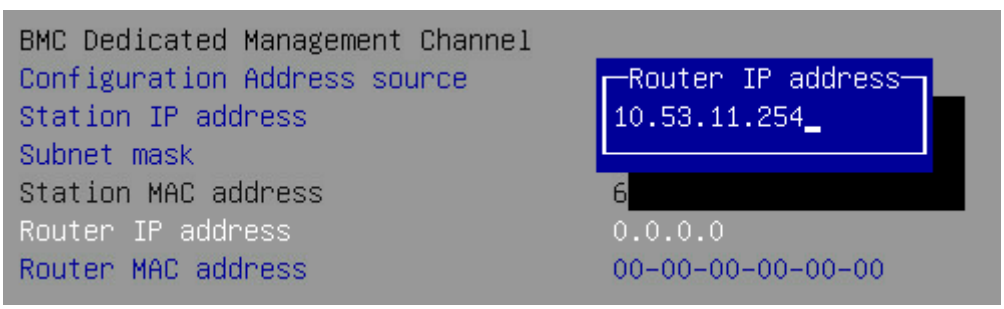

f. When Static IP configuration is done, press F10 to save and restart, BIOS will carry out Static IP configuration for BMC.

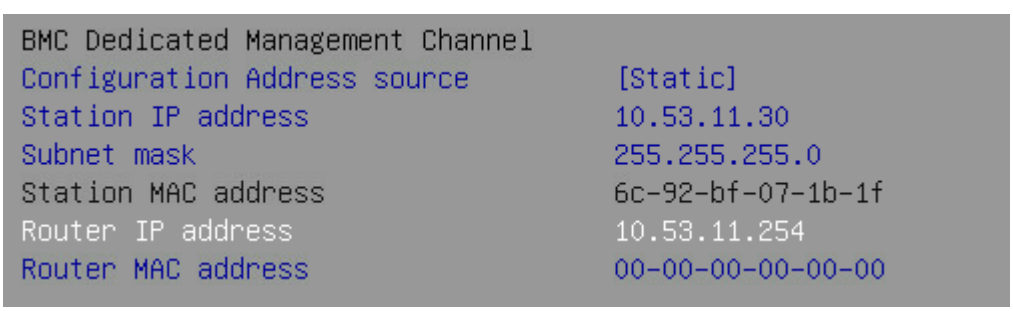

3.2.4.4 BMC User Settings

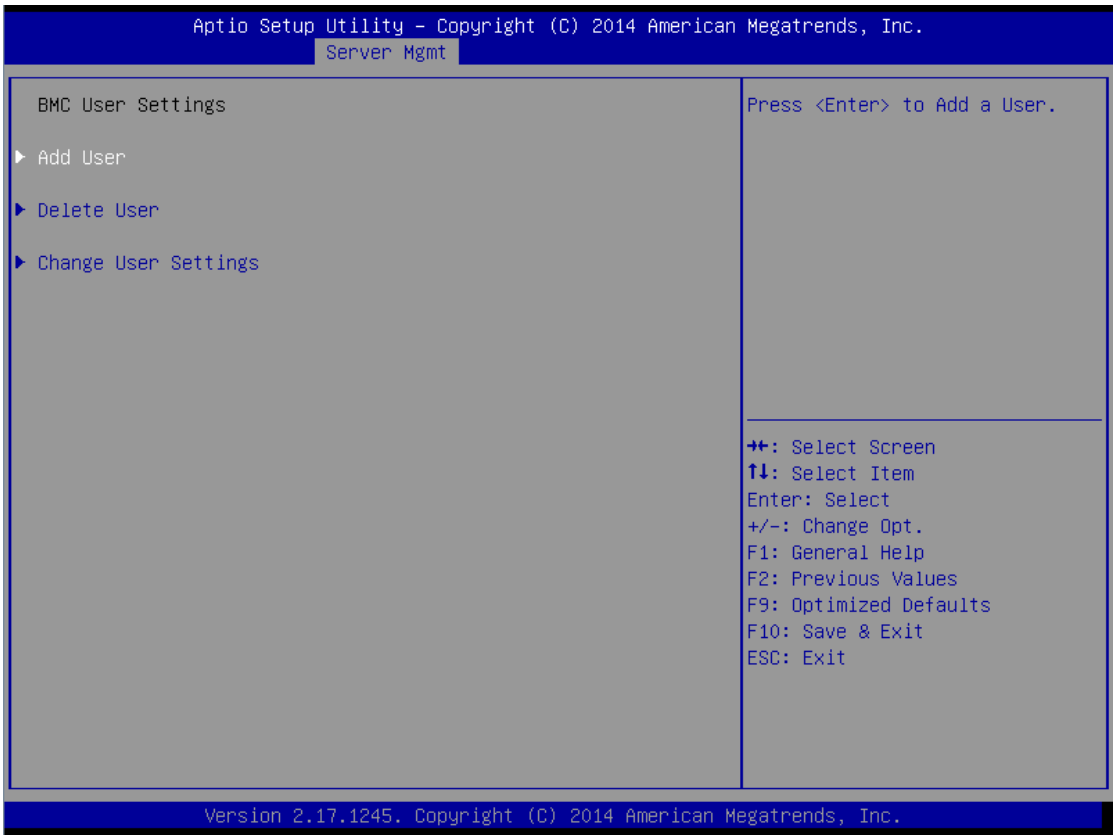

BMC User Settings Menu Interface Instruction Table

Interface Parameters	**Function Description**
Add User	The sub-menu for adding users.
Delete User	The sub-menu for deleting users.
Change User Settings	The sub-menu for modify user settings.

1) Add User operation

Aptio Setup Utility – Copyright (C) 2014 American Megatrends, Inc.
Server Mgmt
BMC Add User Details
User Name
User Password
Channel No 0
User Privilege Limit [No Access]
BMC User Note:
After add the new user account, please go to "Change User Settings" to set the "User" to be Enabled. Otherwise the new added user account can't use.
Enter BMC User Name
→←: Select Screen
↑↓: Select Item
Enter: Select
+/-: Change Opt.
F1: General Help
F2: Previous Values
F9: Optimized Defaults
F10: Save & Exit
ESC: Exit
Version 2.17.1245. Copyright (C) 2014 American Megatrends, Inc.

a. Select the User Name option, and press Enter to pop up the User Name box, enter the user name to set manually, after configuration is completed, press Enter to confirm.

b. Select the User Password option, and press Enter to pop up the User Password box, enter the user password to set manually, after configuration is completed, press Enter to confirm.

c. Channel NO is set to 1 or 8.

d. The User Privilege Limit option, sets privilege for new user, after configuration is completed, press Enter, to pop up the BMC USER SETTINGS INFO box, when system prompts “Set User Access Command Passed”, press Enter and then OK to confirm, the new user is added successfully, and the example is as shown in the following figure:

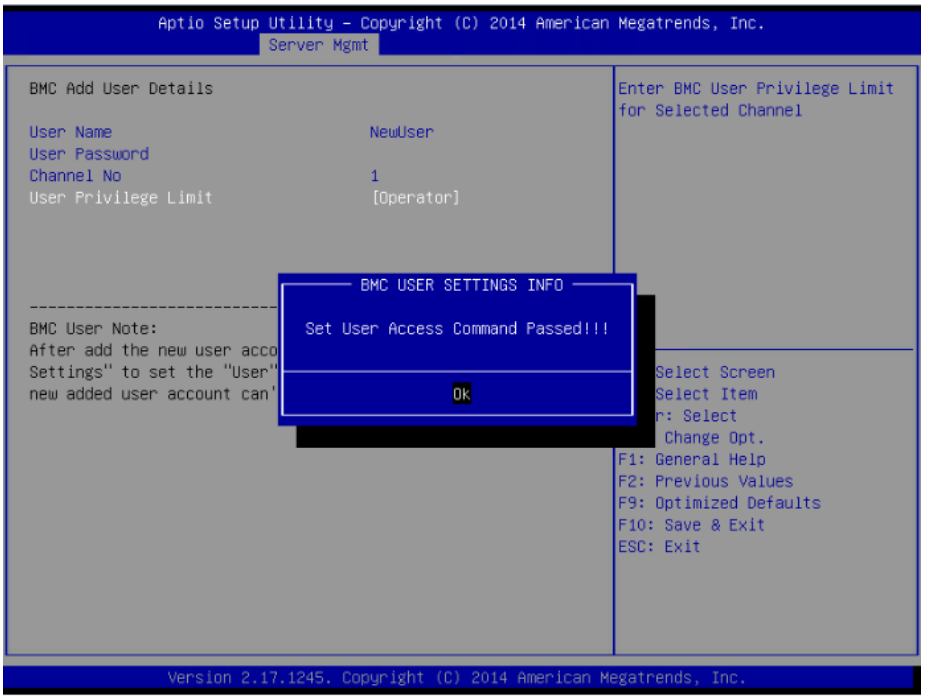

2) Delete User operation

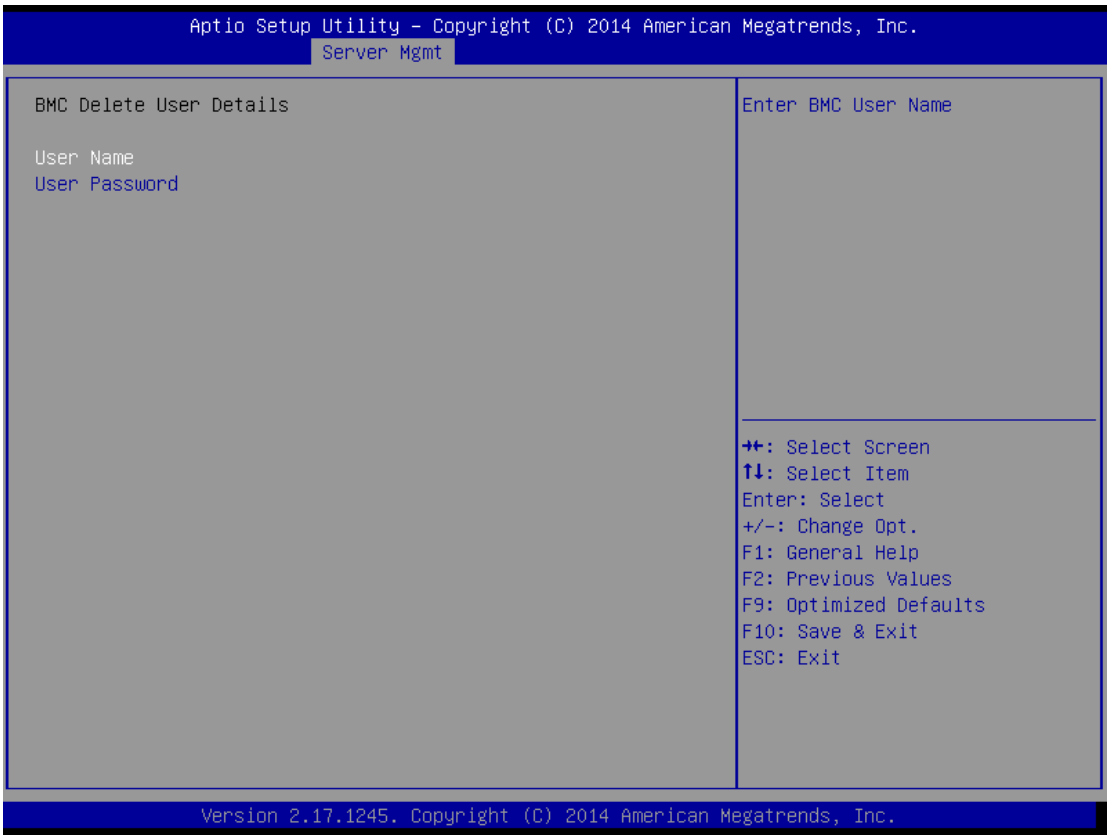

a. Select the User Name option, and press Enter to pop up the User Name box, manually enter the user name to delete, after configuration is completed, press Enter to confirm.

b. Select the User Password option, and press Enter to pop up the User Password box, manually enter the user password to delete, after that, press Enter to confirm, and the BMC USER SETTINGS INFO prompt will pop up, indicating user password deletion is done or not.

3) Change User Settings

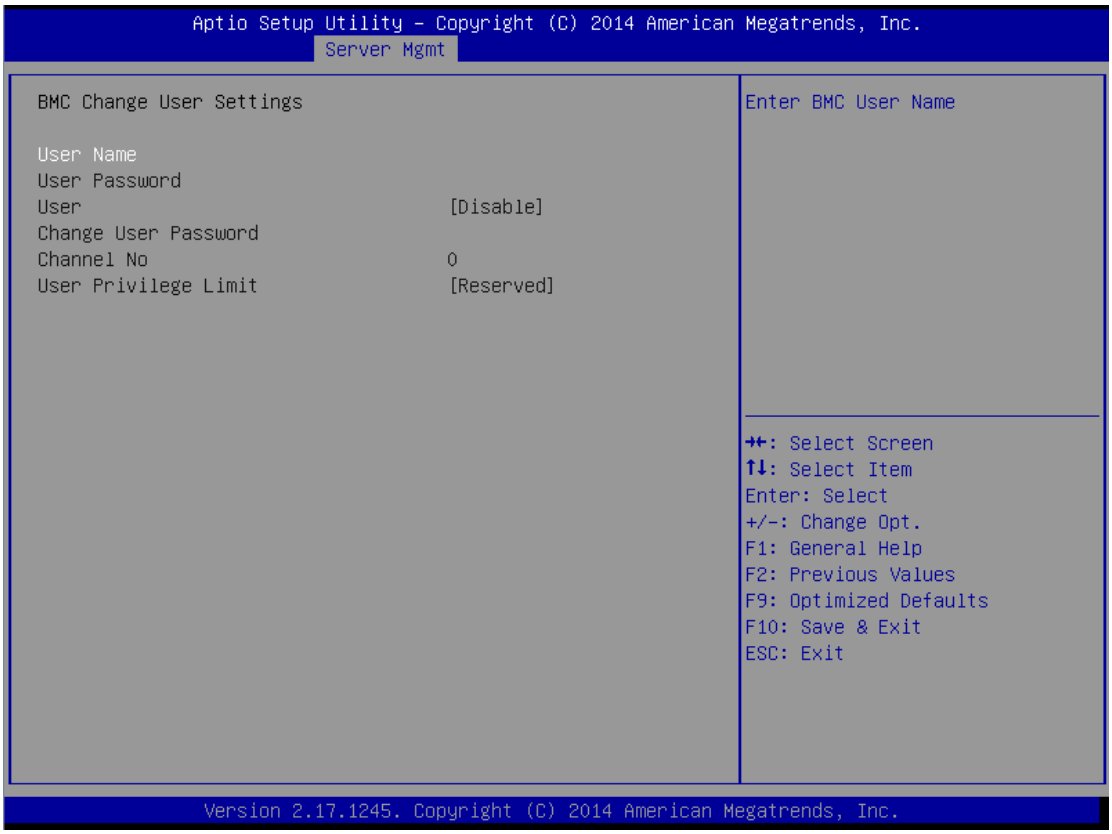

a. Select the User Name option, and press Enter to pop up the User Name box, manually enter the user name to modify, after configuration is completed, press Enter to confirm.

b. Select the User Password option, and press Enter to pop up the User Password box, manually enter the user password, and press Enter to confirm.

c. Select the User option, and set to [Enable] or [Disable].

d. Select the Change User Password option, to change user password.

c. Channel NO is set to 1 or 8.

f. The User Privilege Limit option, could change user's privilege, after configuration is completed, press Enter, to pop up the BMC USER SETTINGS INFO prompt, when system prompts "Set User Access Command Passed", press Enter and then OK to confirm, the user settings information is changed successfully.

3.2.4.5 System Health Information

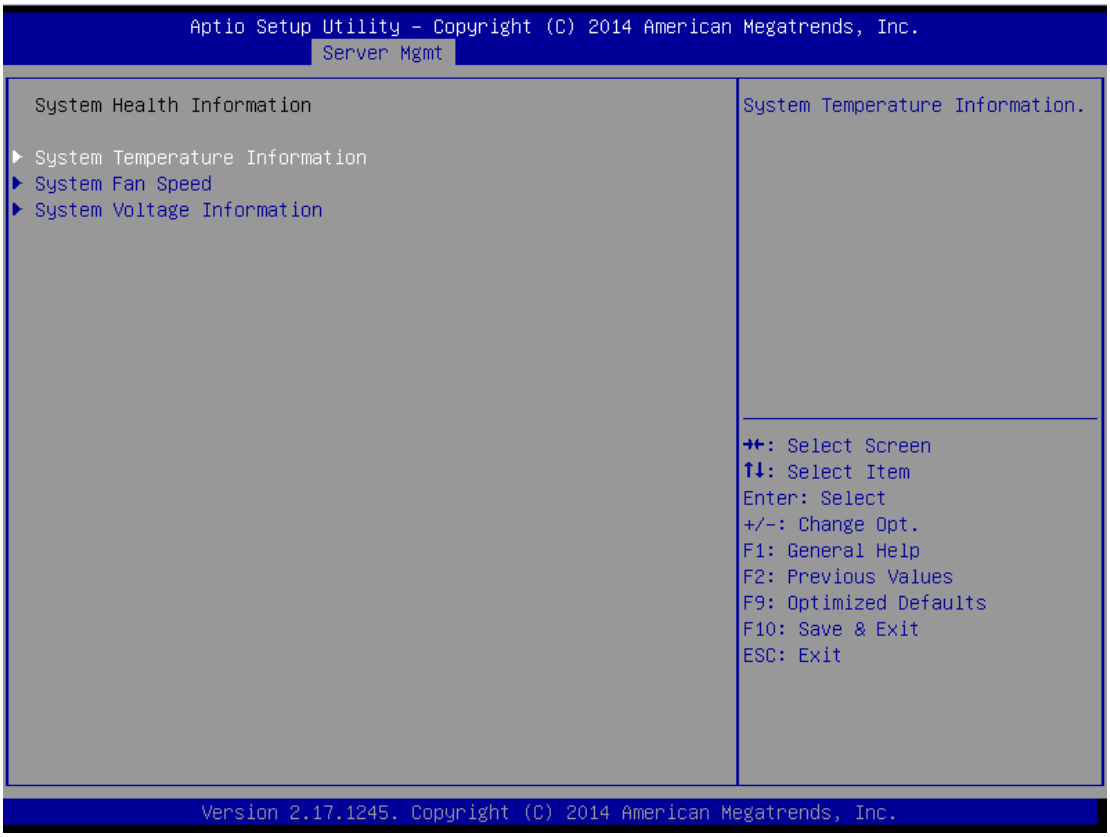

System Health Information Menu Interface Instruction Table

Interface Parameters	**Function Description**
System Temperature Information	System temperature information sub-menu
System Fan Speed	System fan speed sub-menu
System Voltage Information	System voltage information sub-menu

1) System Temperature Information

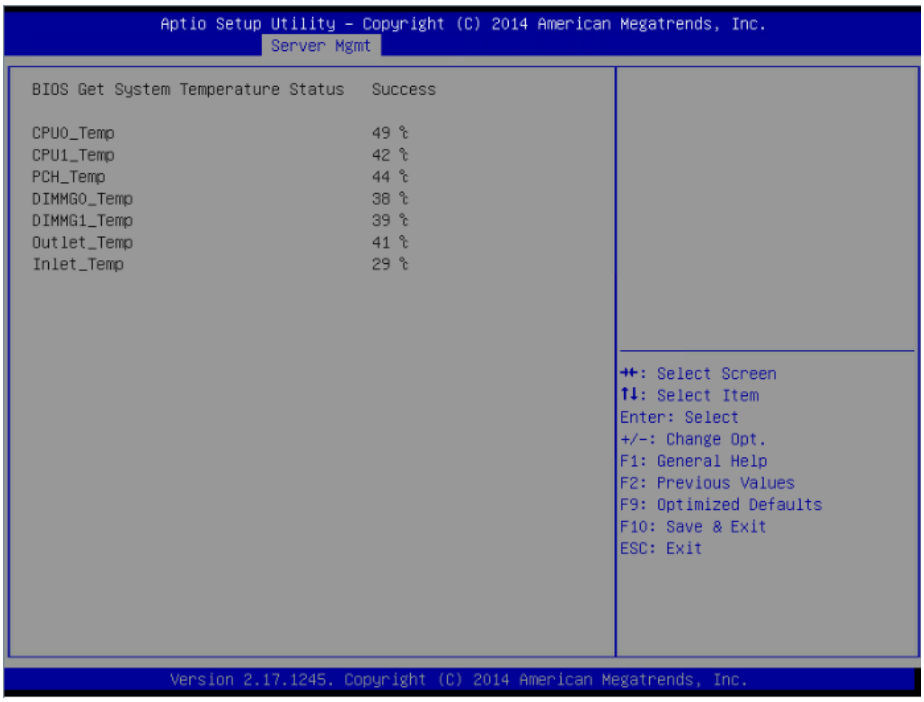

2) System Fan Speed

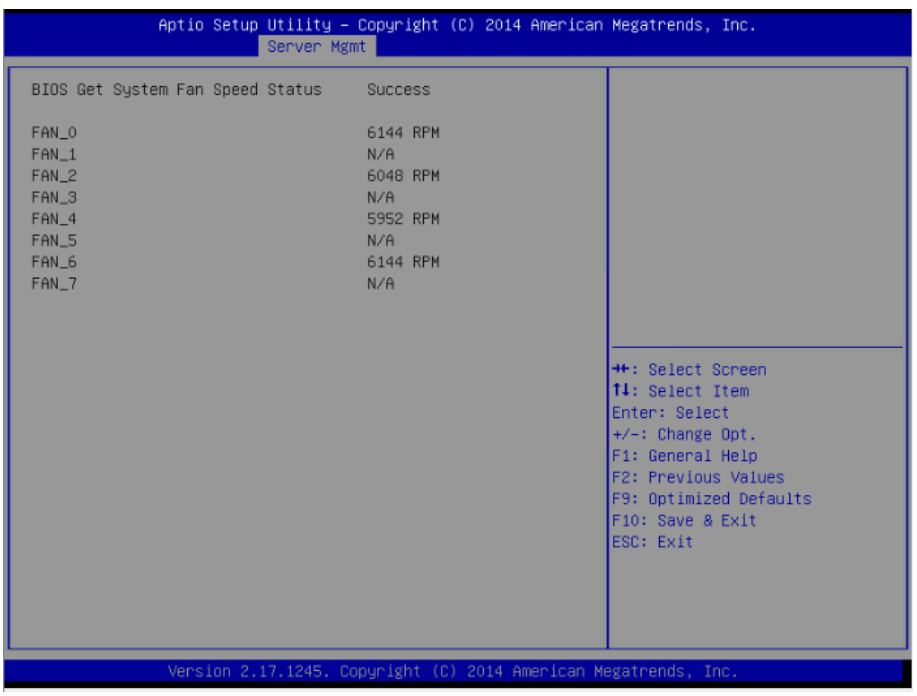

3) System Voltage Information

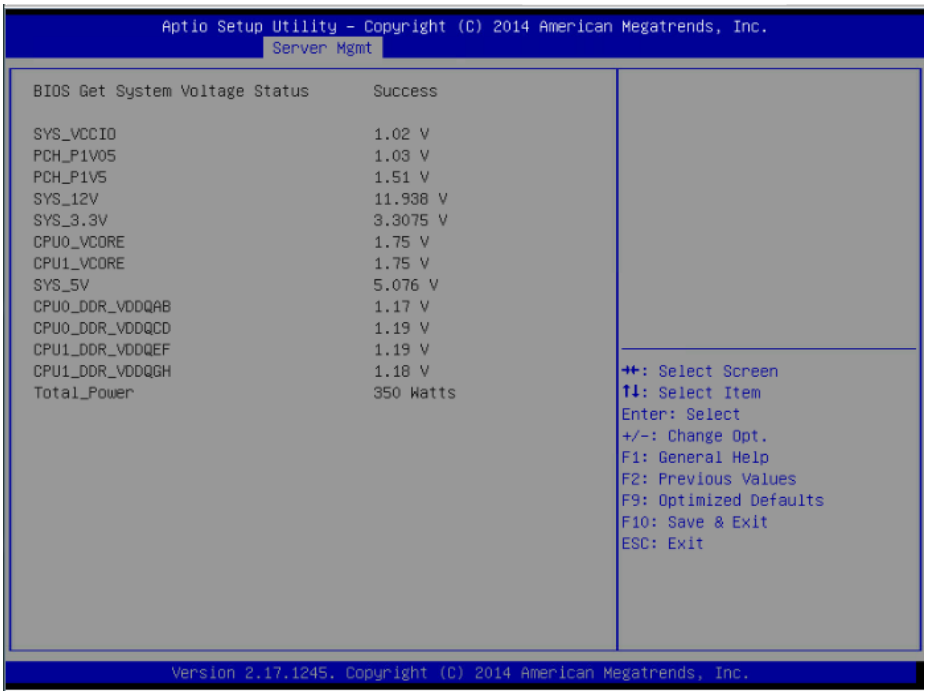
Aptio Setup Utility – Copyright (C) 2014 American Megatrends, Inc.
Server Mgmt
BIOS Get System Voltage Status Success
SYS_VCCIO 1.02 V
PCH_P1V05 1.03 V
PCH_P1V5 1.51 V
SYS_12V 11.938 V
SYS_3.3V 3.3075 V
CPU0_VCORE 1.75 V
CPU1_VCORE 1.75 V
SYS_5V 5.076 V
CPU0_DDR_VDDQAB 1.17 V
CPU0_DDR_VDDQCD 1.19 V
CPU1_DDR_VDDQEF 1.19 V
CPU1_DDR_VDDQGH 1.18 V
Total_Power 350 Watts
→←: Select Screen
↑↓: Select Item
Enter: Select
+/-: Change Opt.
F1: General Help
F2: Previous Values
F9: Optimized Defaults
F10: Save & Exit
ESC: Exit
Version 2.17.1245. Copyright (C) 2014 American Megatrends, Inc.

3.2.5 Security Menu

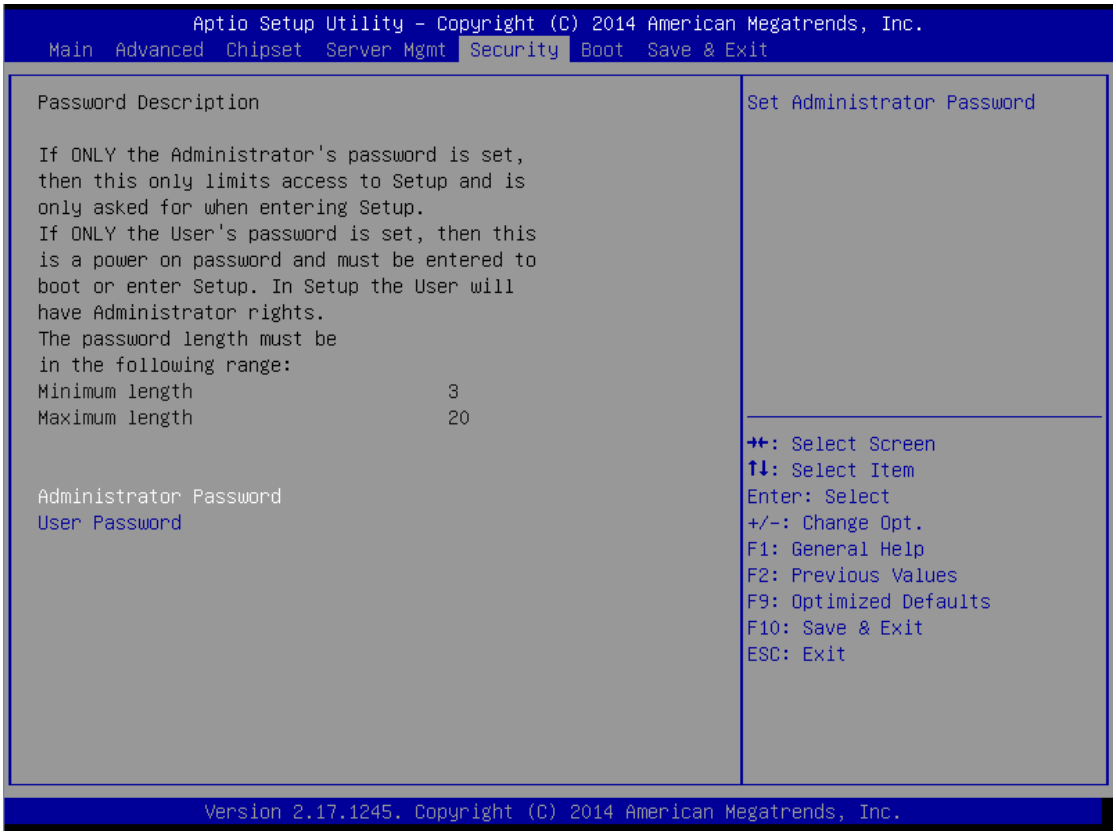
Aptio Setup Utility – Copyright (C) 2014 American Megatrends, Inc.
Main Advanced Chipset Server Mgmt Security Boot Save & Exit
Password Description
If ONLY the Administrator's password is set,
then this only limits access to Setup and is
only asked for when entering Setup.
If ONLY the User's password is set, then this
is a power on password and must be entered to
boot or enter Setup. In Setup the User will
have Administrator rights.
The password length must be
in the following range:
Minimum length 3
Maximum length 20
Administrator Password
User Password
Set Administrator Password
→←: Select Screen
↑↓: Select Item
Enter: Select
+/-: Change Opt.
F1: General Help
F2: Previous Values
F9: Optimized Defaults
F10: Save & Exit
ESC: Exit
Version 2.17.1245. Copyright (C) 2014 American Megatrends, Inc.

Security Menu Interface Instruction Table

Interface Parameters	**Function Description**
Administrator Password	Create a password for administrator.
User Password	Create a password for normal user.

3.2.6 Boot Menu

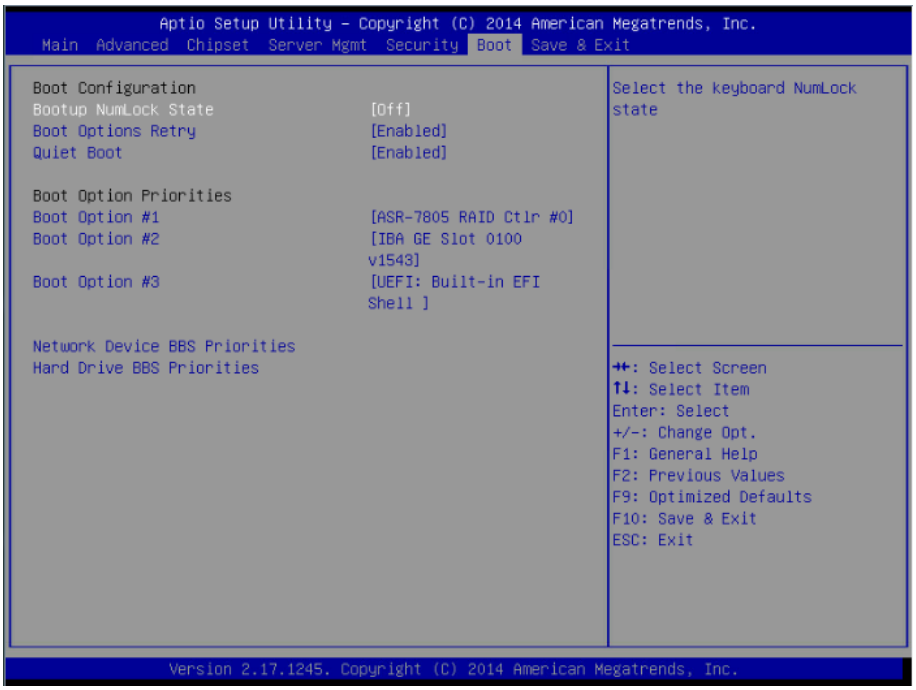
Aptio Setup Utility – Copyright (C) 2014 American Megatrends, Inc.
Main Advanced Chipset Server Mgmt Security Boot Save & Exit
Boot Configuration
Bootup NumLock State [Off]
Boot Options Retry [Enabled]
Quiet Boot [Enabled]
Boot Option Priorities
Boot Option #1 [ASR-7805 RAID Ctlr #0]
Boot Option #2 [IBA GE Slot 0100 v1543]
Boot Option #3 [UEFI: Built-in EFI Shell]
Network Device BBS Priorities
Hard Drive BBS Priorities
Select the keyboard NumLock state
→←: Select Screen
↑↓: Select Item
Enter: Select
+/-: Change Opt.
F1: General Help
F2: Previous Values
F9: Optimized Defaults
F10: Save & Exit
ESC: Exit
Version 2.17.1245. Copyright (C) 2014 American Megatrends, Inc.

Boot configuration Menu Interface Instruction Table

Interface Parameters	Function Description
Bootup NumLock State	Numlock keys status settings after bootup.
Boot Options Retry	The booting device polling settings
Quiet Boot	To boot quietly, set this option to Enabled, and boot logo displays as that set by manufacturer, disabled, boot logo displays as AMI's default logo.
Boot Option Priorities Boot Option #X	Boot option priority settings
Hard Driver BBS Priorities	Hard disk device BBS priority settings
Network Device BBS Priorities	Network device BBS priority settings

To set BIOS boot operation:

Enter Boot menu, move the cursor to Boot option #X via up and down arrows to select, and set system boot sequence, with X set to 1, 2, 3 etc., while an example is as shown in the following figure:

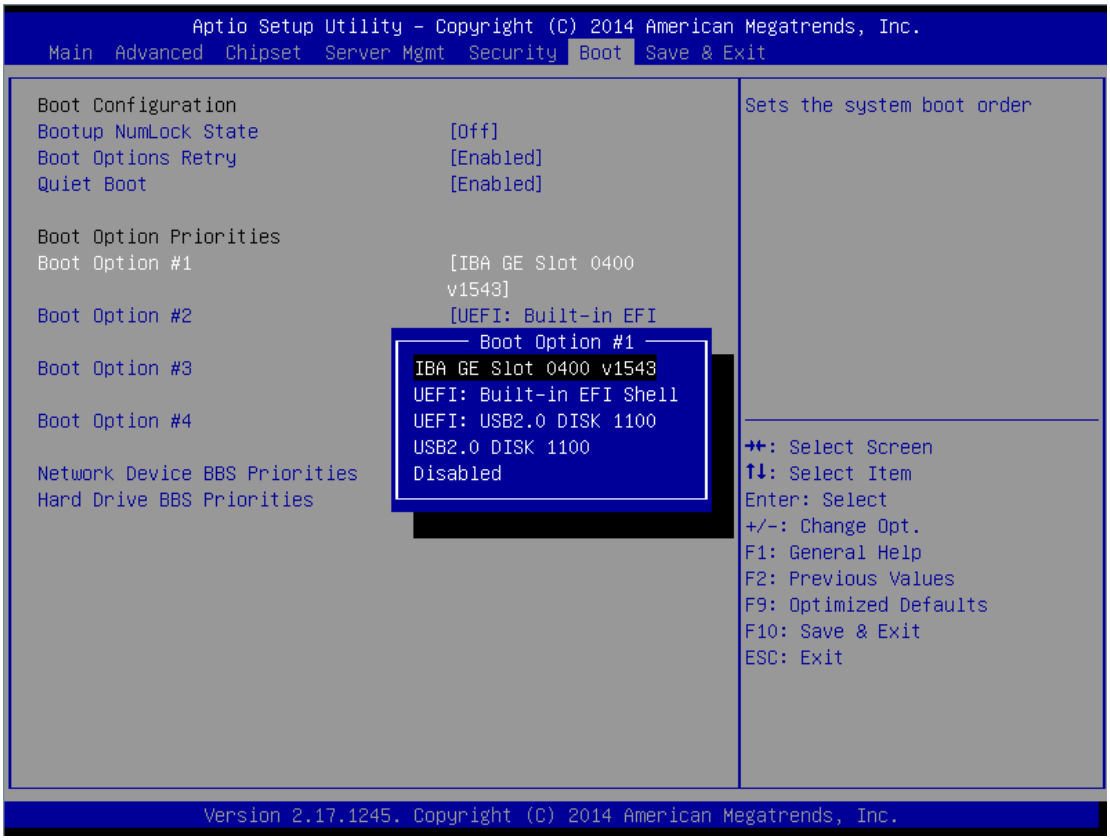
Aptio Setup Utility – Copyright (C) 2014 American Megatrends, Inc.
Main Advanced Chipset Server Mgmt Security Boot Save & Exit
Boot Configuration
Bootup NumLock State [Off]
Boot Options Retry [Enabled]
Quiet Boot [Enabled]
Boot Option Priorities
Boot Option #1 [IBA GE Slot 0400 v1543]
Boot Option #2 [UEFI: Built-in EFI
Boot Option #3
Boot Option #4
Network Device BBS Priorities
Hard Drive BBS Priorities
Boot Option #1
IBA GE Slot 0400 v1543
UEFI: Built-in EFI Shell
UEFI: USB2.0 DISK 1100
USB2.0 DISK 1100
Disabled
Sets the system boot order
→←: Select Screen
↑↓: Select Item
Enter: Select
+/-: Change Opt.
F1: General Help
F2: Previous Values
F9: Optimized Defaults
F10: Save & Exit
ESC: Exit
Version 2.17.1245. Copyright (C) 2014 American Megatrends, Inc.

Taking Boot option #1 as an example, you could set the first boot device for the system: Move the cursor to Boot option #1, and press Enter, to pop up the boot option for selection: i.e. IBA GE slot 0400 v1543, UEFI: Built-in EFI Shell, UEFI:USB2.O DISK 1100, USB2.O DISK 1100 etc., select one via up and down keys, i.e. USB2.O DISK 1100, and press Enter, to select USB DOS disk as the first boot device for the system.

3.2.7 Save & Exit Menu

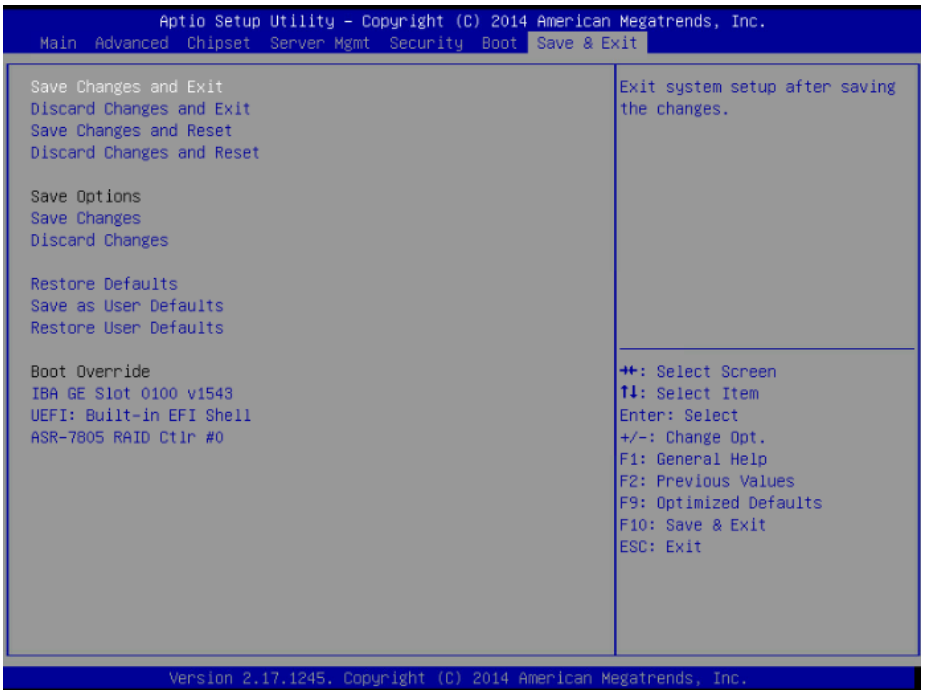
Aptio Setup Utility – Copyright (C) 2014 American Megatrends, Inc.
Main Advanced Chipset Server Mgmt Security Boot Save & Exit
Save Changes and Exit
Discard Changes and Exit
Save Changes and Reset
Discard Changes and Reset
Save Options
Save Changes
Discard Changes
Restore Defaults
Save as User Defaults
Restore User Defaults
Boot Override
IBA GE Slot 0100 v1543
UEFI: Built-in EFI Shell
ASR-7805 RAID Ctlr #0
Exit system setup after saving the changes.
→←: Select Screen
↑↓: Select Item
Enter: Select
+/-: Change Opt.
F1: General Help
F2: Previous Values
F9: Optimized Defaults
F10: Save & Exit
ESC: Exit
Version 2.17.1245. Copyright (C) 2014 American Megatrends, Inc.

Save & Exit Menu Menu Interface Instruction Table

Interface Parameters	**Function Description**
Save Changes and Exit	To Save and exit
Discard Changes and Exit	To abandon changes and exit.
Save Changes and Reset	To save changes and reboot
Discard Changes and Reset	To abandon changes and reboot
Save Changes	To save changes.
Discard Changes	To abandon changes.
Restore Defaults	To restore factory settings.
Save as user Defaults	To save as defaults.
Restore user Defaults	To restore user defaults.
Boot Override	To reload boot device, you could select all boot devices in the following.

3.3Firmware Update

For BIOS update, you could select to update in DOS or OS.

1) Use afudos tool to update BIOS in DOS

System boots from USB DOS startup disk, enters the directory containing afudos tool, while bin files of the corresponding new BIOS version have been put into this folder, execute command: afudos BIOS.bin /b /p /n /x /me to update BIOS and ME, for BIOS.bin – bin files of the new BIOS version, an example is as shown in the following figure:

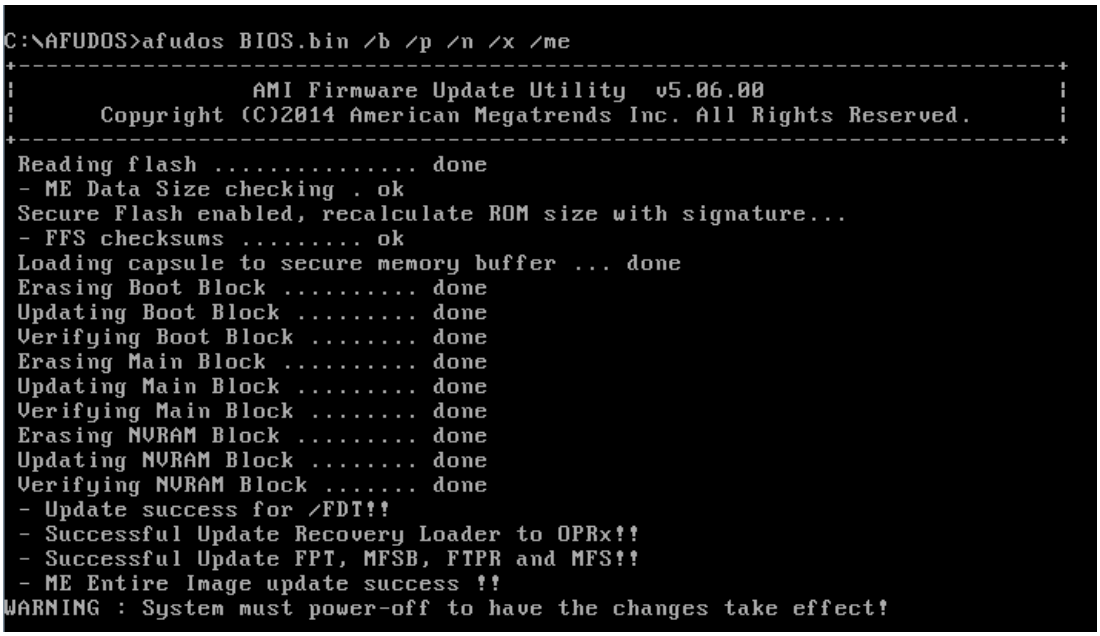
C:\AFUDOS>afudos BIOS.bin /b /p /n /x /me
AMI Firmware Update Utility v5.06.00
Copyright (C)2014 American Megatrends Inc. All Rights Reserved.
Reading flash ..... done
- ME Data Size checking . ok
Secure Flash enabled, recalculate ROM size with signature...
- FFS checksums ..... ok
Loading capsule to secure memory buffer ... done
Erasing Boot Block ..... done
Updating Boot Block ..... done
Verifying Boot Block ..... done
Erasing Main Block ..... done
Updating Main Block ..... done
Verifying Main Block ..... done
Erasing NVRAM Block ..... done
Updating NVRAM Block ..... done
Verifying NVRAM Block ..... done
- Update success for /FDT!!
- Successful Update Recovery Loader to OPRx!!
- Successful Update FPT, MFSB, FTPR and MFS!!
- ME Entire Image update success !!
WARNING : System must power-off to have the changes take effect!

When there's no change in ME part, to update BIOS part, it is only required to execute command: afudos BIOS.bin /b /p /n /x.

Parameter instructions: /b -- Program Boot Block

/p -- Program Main BIOS

/n -- Program NVRAM

/x -- Don't Check ROM ID

/me -- Program ME Entire Firmware Block

2) Use afudos tool to update BIOS in Linux OS

There're 32bit and 64bit Linux OS afulnx tools, taking Linux 64bit OS as an

example, use afulnx_64 tool, to enter the directory containing afulnx_64 tool, meanwhile, put bin files of corresponding BIOS into this folder, and enter command: /afulnx_64 BIOS.BIN /P /B /N /X /R, while an example is as shown in the following figure:

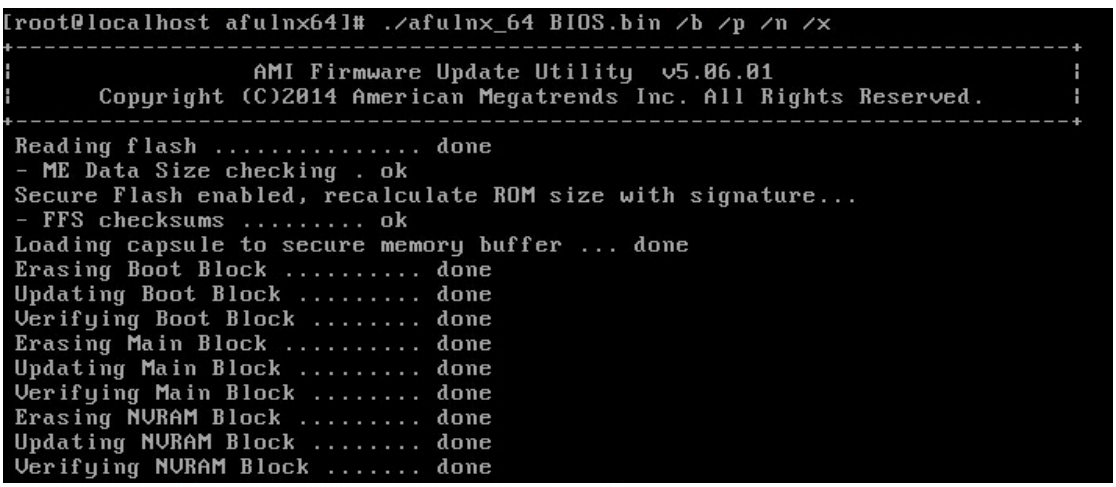
[root@localhost afulnx64]# ./afulnx_64 BIOS.bin /b /p /n /x
AMI Firmware Update Utility v5.06.01
Copyright (C)2014 American Megatrends Inc. All Rights Reserved.
Reading flash ..... done
- ME Data Size checking . ok
Secure Flash enabled, recalculate ROM size with signature...
- FFS checksums ..... ok
Loading capsule to secure memory buffer ... done
Erasing Boot Block ..... done
Updating Boot Block ..... done
Verifying Boot Block ..... done
Erasing Main Block ..... done
Updating Main Block ..... done
Verifying Main Block ..... done
Erasing NVRAM Block ..... done
Updating NVRAM Block ..... done
Verifying NVRAM Block ..... done

When there's any change in ME part, to update BIOS part, it is required to execute command: afudos BIOS.bin /b /p /n /x /me, with parameter instructions identical to DOS.

3) Use afuWin tool to update BIOS in Windows OS

There're 32bit and 64bit Windows OS afuwin tools, and afuwinx64.exe is used in 64bit OS, run a command prompt, to enter the directory containing afuwinx64.exe tool, meanwhile, put bin files of corresponding BIOS into this folder, and enter command: afuwinx64.exe BIOS.BIN /P /B /N /X /R, to update BIOS files.

Meanwhile, GUI method is provided in Windows to refresh BIOS. Taking Windows 2008R2 OS as an example, use AFUWINGUI tool to update BIOS.

a. Run AUWINGUI.EXE tool, as shown in the following figure:

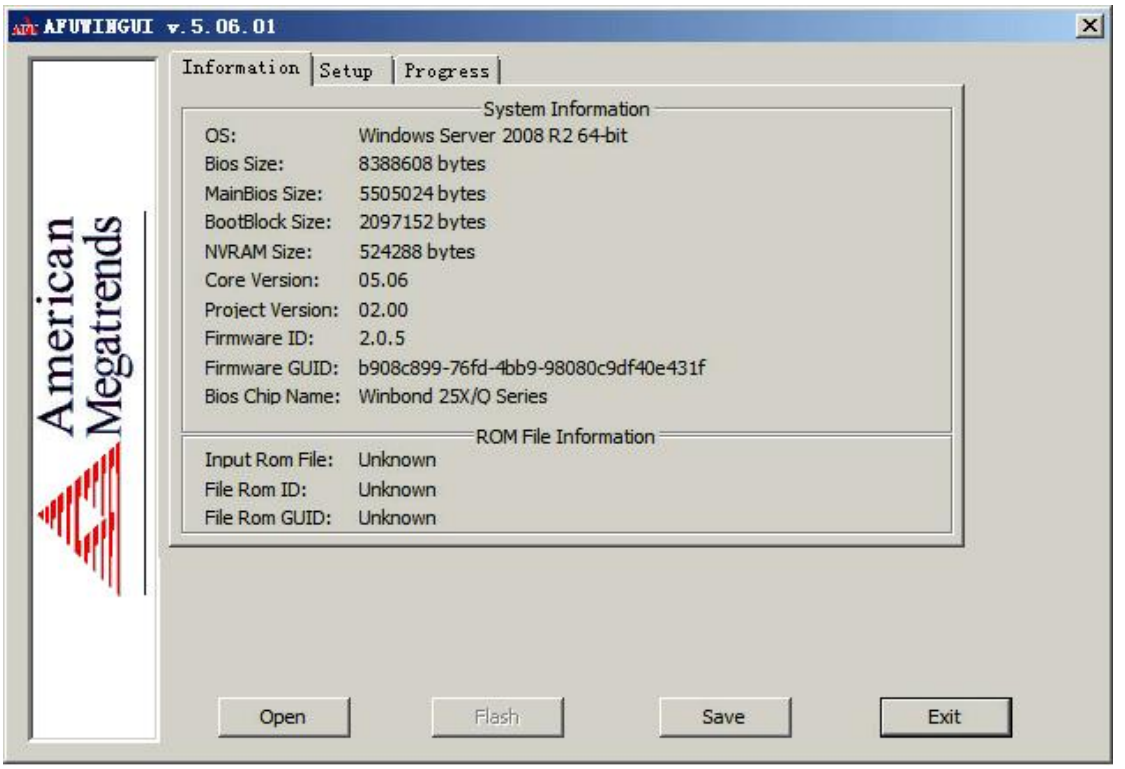

b. Click the Open button, after selecting the BIOS.bin file to update, system enters Setup interface automatically.

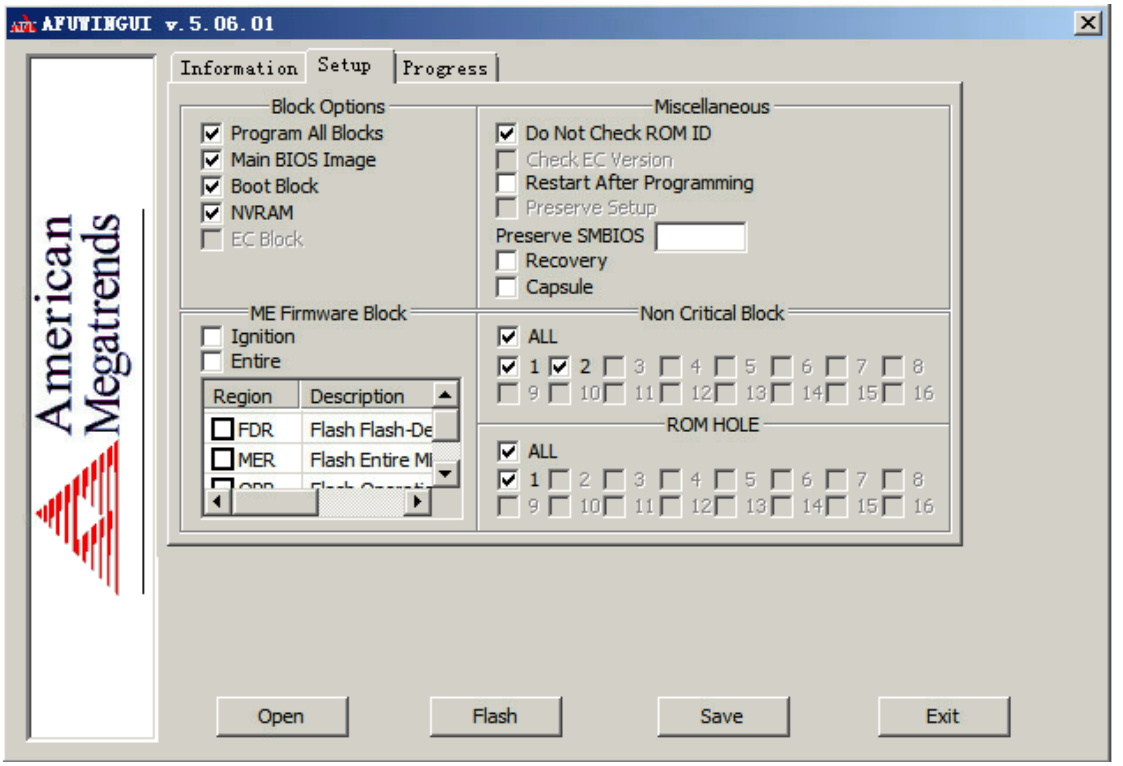

c. Select Program all Blocks and Do Not Check ROM ID options on Setup interface, click flash button, system enters Progress interface automatically, and executes BIOS update accordingly according to colors shown on the right, thus BIOS update is done as shown in the following figure:

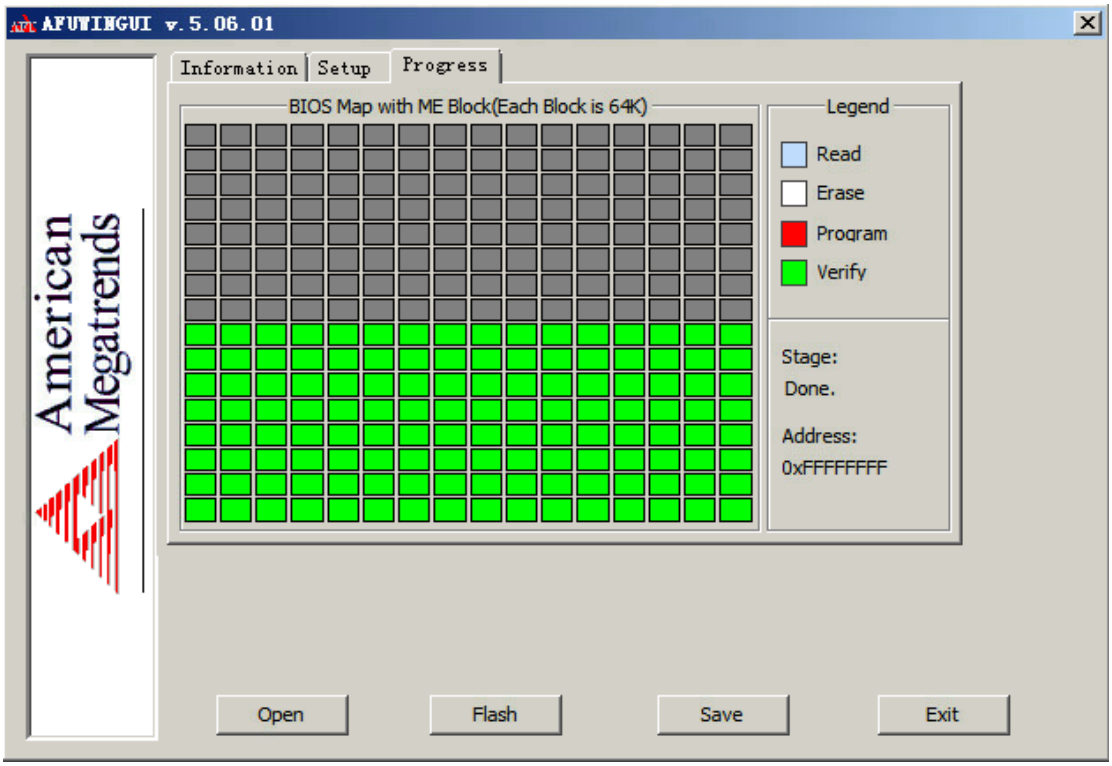
AFUWINGUI v.5.06.01
Information
Setup
Progress
BIOS Map with ME Block(Each Block is 64K)
Legend
Read
Erase
Program
Verify
Stage:
Done.
Address:
0xFFFFFFFF
American Megatrends
Open
Flash
Save
Exit

4 BMC Configuration

4.1 Introduction

This chapter introduces specifications and main functions to be abided by management software.

The distributor server management software is a control unit realizing server management, which is compatible with management standard of the server industry IPMI2.0 specification.

It mainly realizes the following functions:

● Remote control:

It realizes server control via functions such as KVM (Keyboard Video and Mouse), SOL (Serial Over Lan) and virtual media etc.

Note: SOL function has to be realized via third party tools such as IPMITool etc.

● Alarming management

Reports alarming information in a real-time way, and carries out corresponding solutions according to information.

● Status monitoring

Monitors various running states of all monitoring units in a real-time way.

● Device information management

Provides device version information, type and asset information.

● Heat radiation control

It could adjust fan rotation rate according to ambient temperature and workload dynamically.

● Supports IPMITool tool management.

Supports operation according to commands sent by IPMITool, and you could download IPMITool by yourself.

Note: IPMITool downloading website:

http://ipmitool.sourceforge.net/manpage.html

● Supports WEB interface management

Provides a friendly and visual interface management, and you could complete tasks of configuration and query via a click on the interface quickly.

● Supports account centralized management

Supports to store accounts in Active Directory server, and direct certification to server, so as to realize management system login with domain accounts.

4.2 Functional Modules

This chapter introduces the distributor server management system module composition as well as functions of these modules.

4.2.1 Module Composition

The distributor server management system is mainly composed of IPMI module, command line module, WEB module, KVMOver IP and virtual media etc.

● Command module realizes the calling of IPMI module. User realizes the operation on IPMI module via command lines.

● WEB module realizes daily management on server in the form of visual interface via calling IPMI commands, and WEB module has integrated functions of KVM and virtual media.

4.2.2 IPMI Module Introduction

IPMI module realizes management on server system according to IPMI2.0 standard.

Functions realized by IPMI module include:

● System real-time monitoring

It could realize alarming report, alarming indication and self-protection of startup system, when there's any fault detected.

● System remote control

It could realize management requirements such as remote power-on/off, and business system reset etc. via command lines and Web.

4.2.3 Command Line Function Introduction

Command line module includes query and configuration commands for network, sensor, fan, user management, system and server etc.

4.2.4 Remote Control Module Introduction

Remote control module includes:

● KVM Over IP: It means a management method that user carries out monitoring and control on remote devices via using local video, keyboard and mouse at client, to operate remote devices in a real-time way.

● Virtual media: A method of providing remote access on local media (CD-Rom, floppy drive or CD/floppy disk iso file) in the form of virtual CD driver and floppy drive on server via internet.

Note:

If Java runtime environment does not comply with requirements, user could login http://www.oracle.com/technetwork/java/javase/downloads/index.html to download.

4.3 Web Interface Introduction

About this chapter

It introduces Web interface of management system as well as operation steps to login Web interface.

● Login Web interface.

Introduces methods to login Web interface.

● Web interface introduction

Introduces Web interface layout.

4.3.1 Login Web Interface

It introduces methods to login Web interface.

This guide introduces operation steps to login Web management interface, taking Windows 7 operation system and FireFox browser as examples.

Note: When carrying out interface operation via Web, up to 20 users could login synchronously.

Step 1 Ensure management net ports on Client and server are connected to internet.

Step 2 Open the browser, and enter “http://ipaddress” in the address bar. (In

which ipaddress is the IP address of management port, for specific determining method on IP address, please refer to the annex to determine IP address of management network port)

Step 3 The login interface pops up, as shown in the following figure, in this interface:

1. Enter user name and password.

Note: System provides a default user “admin” in administer user group, and the default password is “admin”.

2. Click “Login”, to enter the management interface.

4.3.2 Web Interface Introduction

The Web interface helps users to accomplish server management via its visual and friendly interface, and the Web interface contains online help, so users could query instructions and operation guide on this interface via clicking button

on any interface.

Web interface is divided into four parts, as shown in the following figure.

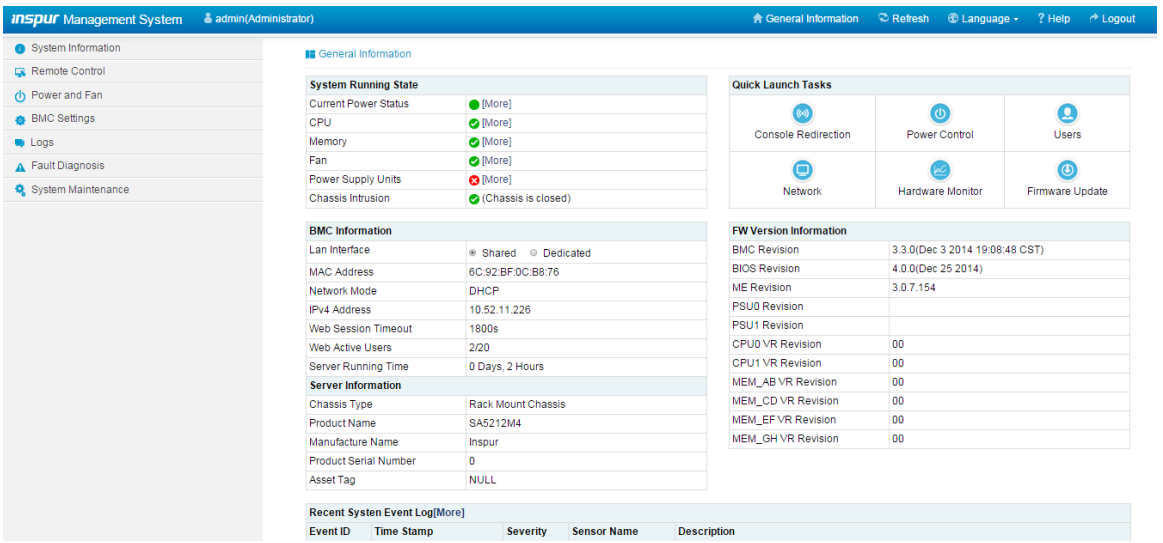

- The name of Web interface is displayed on top left of the interface.
- Meanings of all buttons on top right of the interface:

- ✧

Click the System Abstract button, to return to the System Abstract page.
- ✧ 

Click the Refresh button, to refresh the page.
- ✧

Click the Language button, to shift language, which supports Chinese and English.
- ✧ 

Click the Help button to query help information on corresponding page.
- ✧

Click the Logout button, to return to login page.

● There's a navigation tree on the left, via nodes on the tree, you could select different functional interfaces. Functions able to be realized via Web interface include: Viewing the overall situation, viewing system information, remote control, power management, event and log query, real-time monitoring, diagnosis and orientation, system maintenance, and system configuration etc. For detailed introduction on all functions, please refer to the following chapters.

● Specific operation interface is on the right of the interface.

4.3.3 Overall Situation

Click System Abstract, to open the "System Abstract" interface, as shown in the following figure.

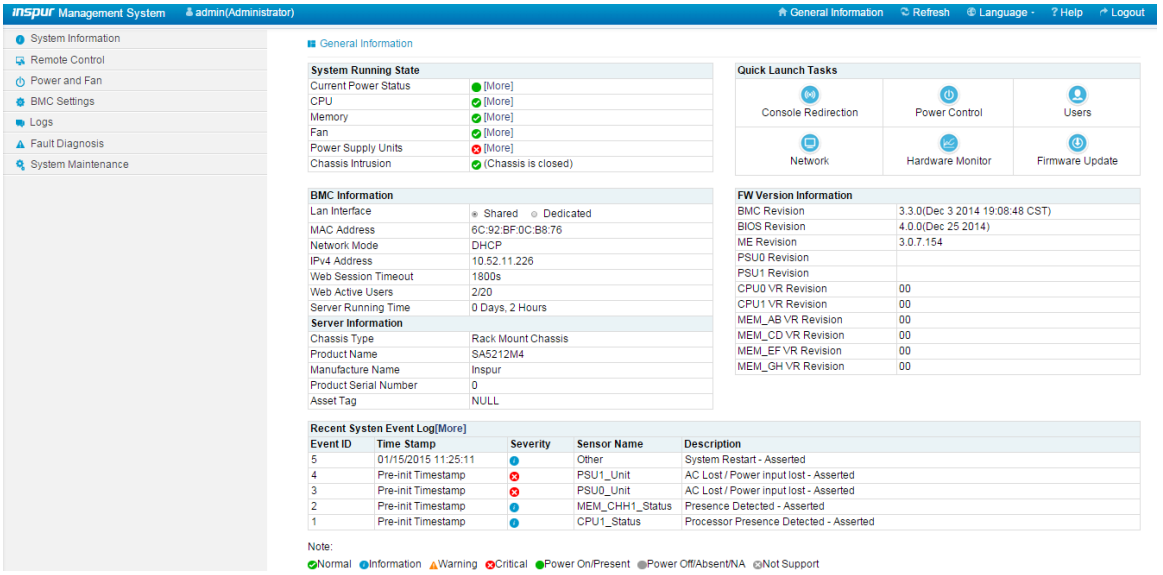

4.3.4 System Information

Select “System Information” on navigation tree, which includes five interfaces of “”Asset Information”, “Hardware Monitoring”, “Device Status”, “BIOS Option”, “FRU Information”, as shown in the following figure.

- Asset information: Displays system configuration information, which includes CPU, memory, PCIE device and Mac address information.
- Hardware monitoring: Displays real-time monitoring information, which includes temperature sensor, voltage sensor, fan rotation rate, power, processor status, memory status and power module status information.
- Device status: Displays status information of the front set hard disk.
- FRU information: Displays FRU information;

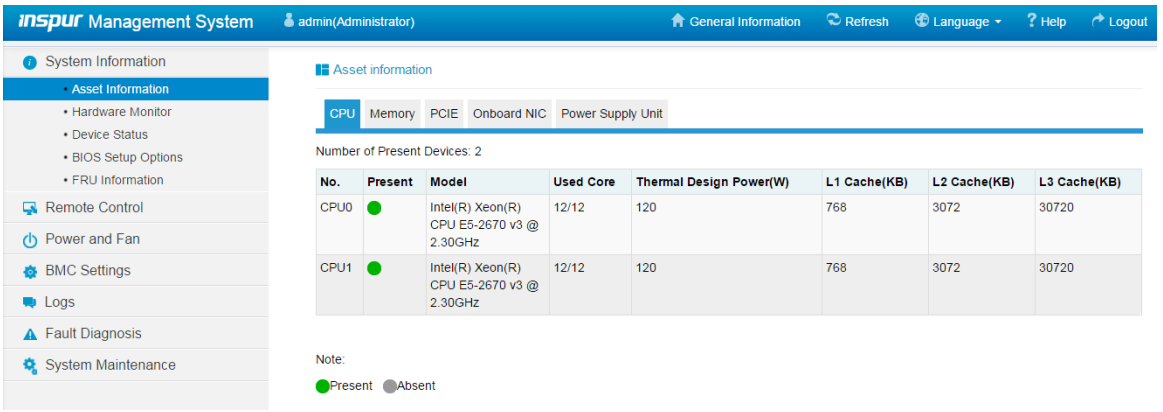
inspur Management System
admin(Administrator)
General Information
Refresh
Language
Help
Logout
System Information
• Asset Information
• Hardware Monitor
• Device Status
• BIOS Setup Options
• FRU Information
Remote Control
Power and Fan
BMC Settings
Logs
Fault Diagnosis
System Maintenance
Asset information
CPU
Memory
PCIE
Onboard NIC
Power Supply Unit
Number of Present Devices: 2
No. | Present | Model | Used Core | Thermal Design Power(W) | L1 Cache(KB) | L2 Cache(KB) | L3 Cache(KB)
CPU0 | Intel(R) Xeon(R) CPU E5-2670 v3 @ 2.30GHz | 12/12 | 120 | 768 | 3072 | 30720
CPU1 | Intel(R) Xeon(R) CPU E5-2670 v3 @ 2.30GHz | 12/12 | 120 | 768 | 3072 | 30720
Note:
Present
Absent

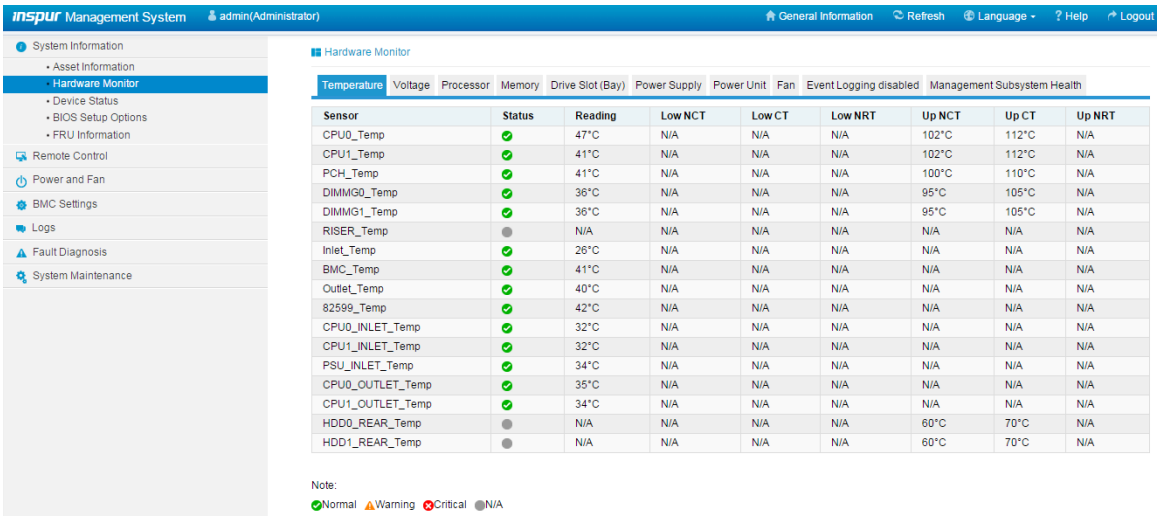
inspur Management System
admin(Administrator)
General Information
Refresh
Language
Help
Logout
System Information
• Asset Information
• Hardware Monitor
• Device Status
• BIOS Setup Options
• FRU Information
Remote Control
Power and Fan
BMC Settings
Logs
Fault Diagnosis
System Maintenance
Hardware Monitor
Temperature
Voltage
Processor
Memory
Drive Slot (Bay)
Power Supply
Power Unit
Fan
Event Logging disabled
Management Subsystem Health
Sensor | Status | Reading | Low NCT | Low CT | Low NRT | Up NCT | Up CT | Up NRT
CPU0_Temp | 47°C | N/A | N/A | N/A | 102°C | 112°C | N/A
CPU1_Temp | 41°C | N/A | N/A | N/A | 102°C | 112°C | N/A
PCH_Temp | 41°C | N/A | N/A | N/A | 100°C | 110°C | N/A
DIMMG0_Temp | 36°C | N/A | N/A | N/A | 95°C | 105°C | N/A
DIMMG1_Temp | 36°C | N/A | N/A | N/A | 95°C | 105°C | N/A
RISER_Temp | N/A | N/A | N/A | N/A | N/A | N/A | N/A
Inlet_Temp | 26°C | N/A | N/A | N/A | N/A | N/A | N/A
BMC_Temp | 41°C | N/A | N/A | N/A | N/A | N/A | N/A
Outlet_Temp | 40°C | N/A | N/A | N/A | N/A | N/A | N/A
82599_Temp | 42°C | N/A | N/A | N/A | N/A | N/A | N/A
CPU0_INLET_Temp | 32°C | N/A | N/A | N/A | N/A | N/A | N/A
CPU1_INLET_Temp | 32°C | N/A | N/A | N/A | N/A | N/A | N/A
PSU_INLET_Temp | 34°C | N/A | N/A | N/A | N/A | N/A | N/A
CPU0_OUTLET_Temp | 35°C | N/A | N/A | N/A | N/A | N/A | N/A
CPU1_OUTLET_Temp | 34°C | N/A | N/A | N/A | N/A | N/A | N/A
HDD0_REAR_Temp | N/A | N/A | N/A | N/A | 60°C | 70°C | N/A
HDD1_REAR_Temp | N/A | N/A | N/A | N/A | 60°C | 70°C | N/A
Note:
Normal
Warning
Critical
N/A

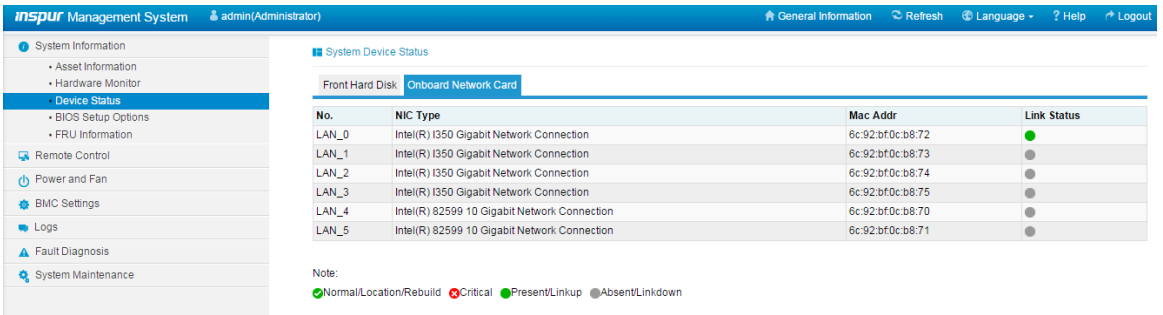
inspur Management System
admin(Administrator)
General Information
Refresh
Language
Help
Logout
System Information
• Asset Information
• Hardware Monitor
• Device Status
• BIOS Setup Options
• FRU Information
Remote Control
Power and Fan
BMC Settings
Logs
Fault Diagnosis
System Maintenance
System Device Status
Front Hard Disk
Onboard Network Card
No. | NIC Type | Mac Addr | Link Status
LAN_0 | Intel(R) I350 Gigabit Network Connection | 6c:92:bf:0c:b8:72
LAN_1 | Intel(R) I350 Gigabit Network Connection | 6c:92:bf:0c:b8:73
LAN_2 | Intel(R) I350 Gigabit Network Connection | 6c:92:bf:0c:b8:74
LAN_3 | Intel(R) I350 Gigabit Network Connection | 6c:92:bf:0c:b8:75
LAN_4 | Intel(R) 82599 10 Gigabit Network Connection | 6c:92:bf:0c:b8:70
LAN_5 | Intel(R) 82599 10 Gigabit Network Connection | 6c:92:bf:0c:b8:71
Note:
Normal/Location/Rebuild
Critical
Present/Linkup
Absent/Linkdown

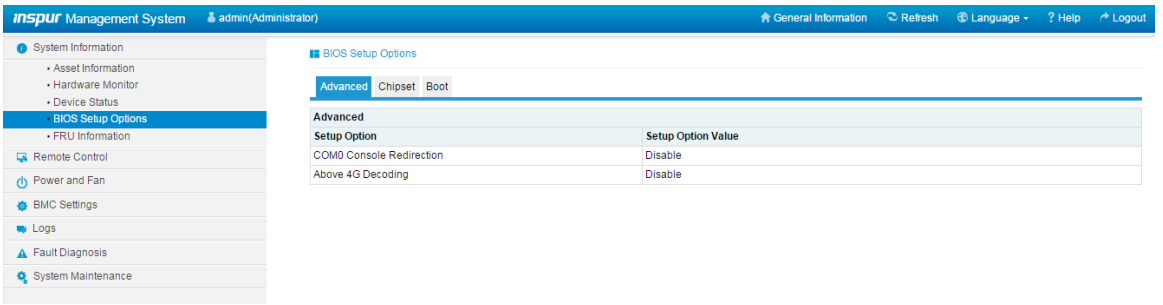

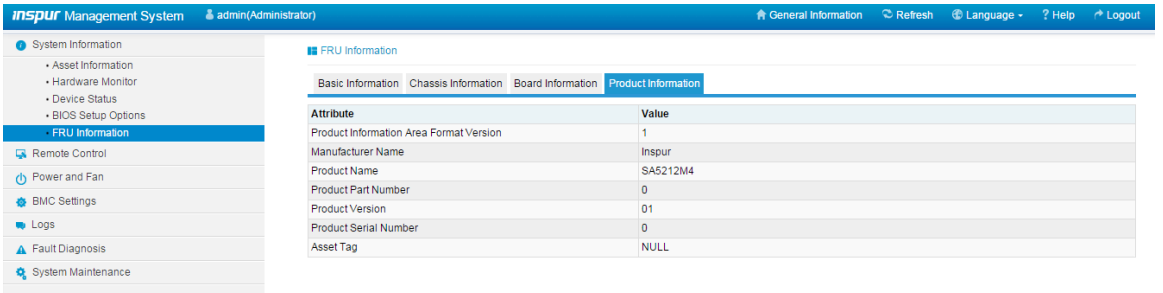

4.4 Remote Control

Select “Remote Control” on navigation tree, to open the remote control interface, which contains six interfaces of “Console Redirection (KVM)”, server switch-on/off control, server orientation, remote session configuration, virtual media configuration and mouse mode configuration, as shown in the following figure.

● Console redirection (KVM): To pop up the KVM console window.

● Server switch-on/off control: To control startup, shutdown and restart of the server.

● Server orientation: To turn on/off the positioning light.

● Remote session configuration: To set KVM session encryption, media encryption and virtual media connection methods.

● Virtual media configuration: To set the quantity of virtual media (floppy disks, CD drives and hard disks etc.)

● Mouse mode configuration: To set the mouse working mode for KVM remote console.

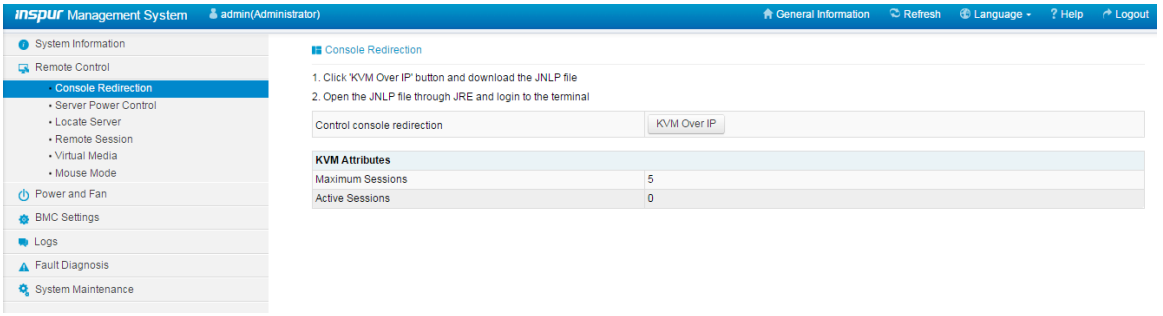

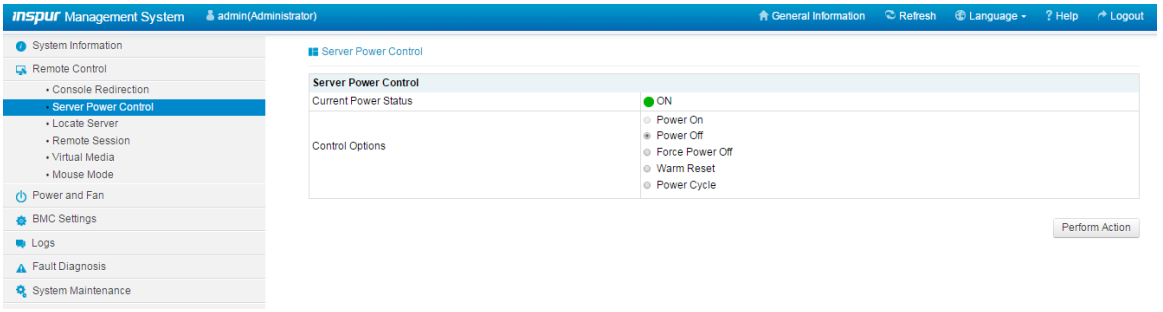

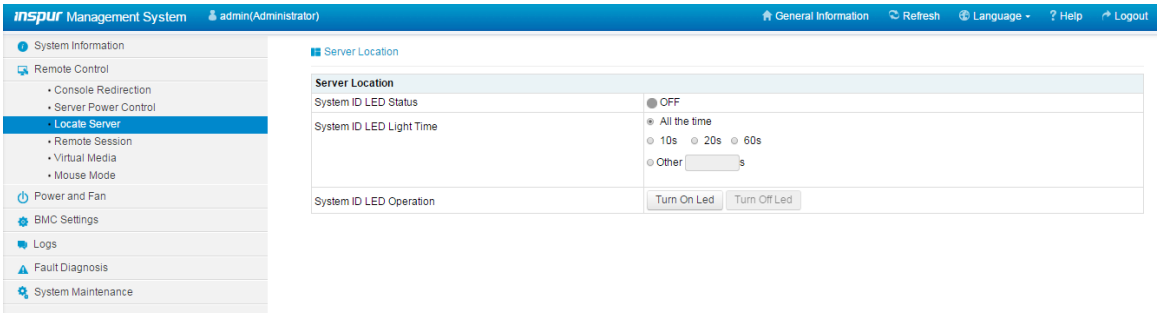

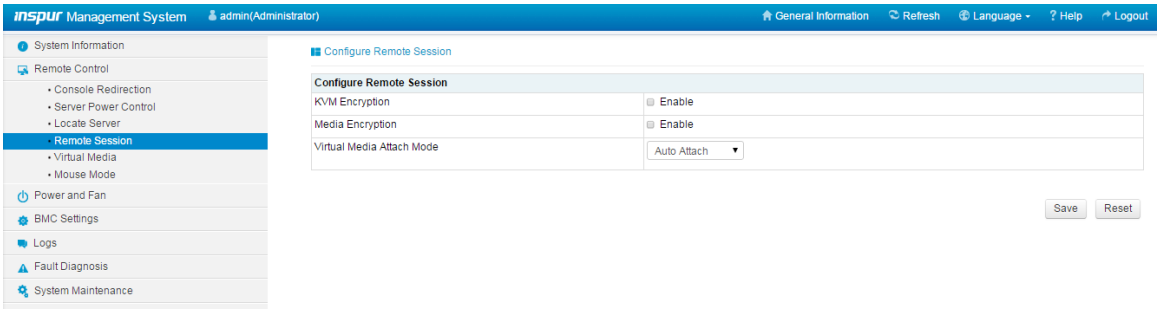

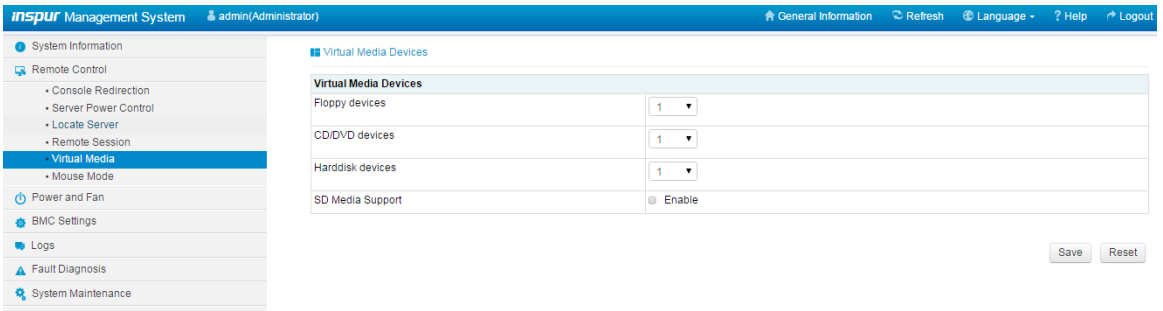

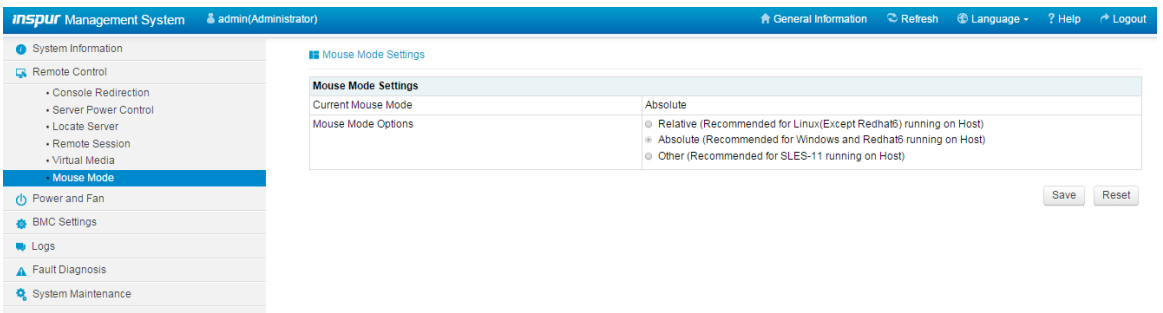

4.5 Power Supply and Heat Radiation

Select “Power Supply and Heat Radiation” on navigation tree, to open the power supply and heat radiation page, which contains three pages of power supply monitoring, power supply management, fan rotation rate control, as shown in the following figure.

● Power supply monitoring: Contains power supply module presence status, alarming status, temperature, input power, output power, input voltage, output voltage, input current, output current and power supply module firmware version

information.

● Power supply management: Contains power supply module presence status, current status and primary/secondary mode switching function.

● Fan rotation rate control: Contains fan status, current rotation rate information and rotation rate control function.

Note: Fan rotation rate control contains the following rotation rate gears:

- Low speed gear: About 20% duty ratio.
- Medium speed gear: About 50% duty ratio.
- High speed gear: About 80% duty ratio.
- Full speed gear: 100% duty ratio.

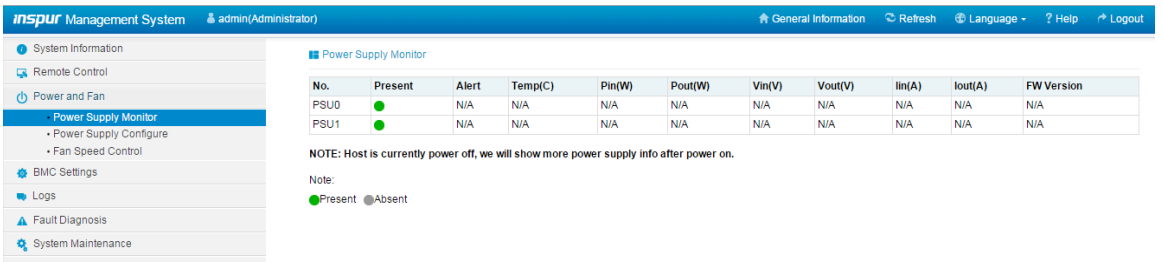

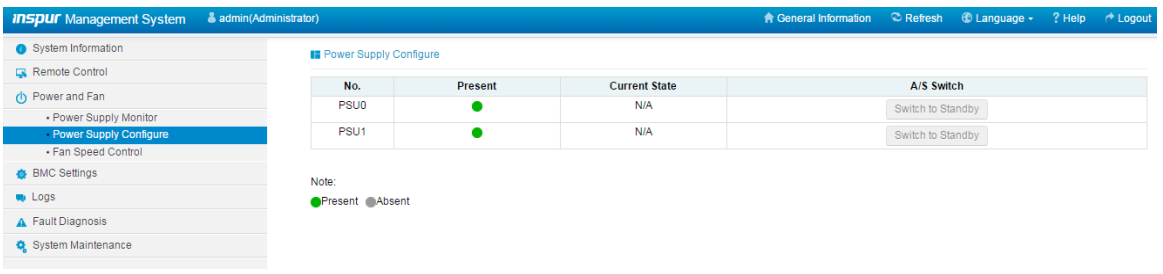

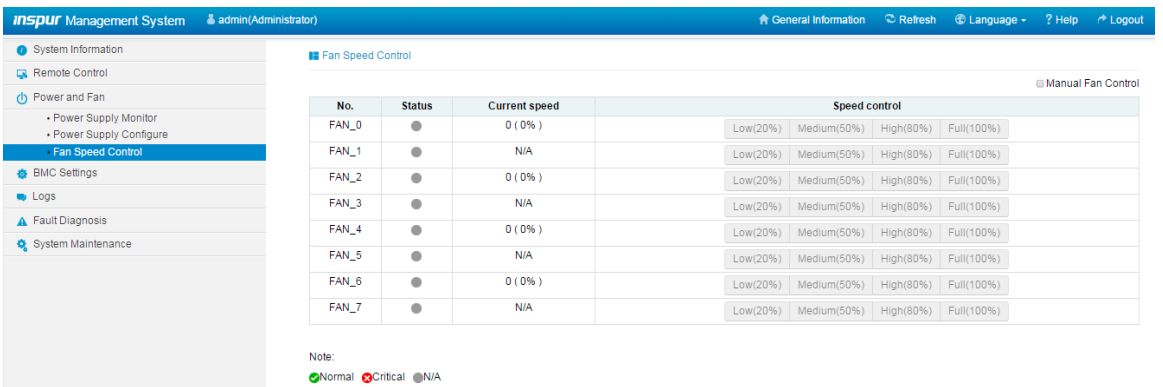

4.6 BMC Configuration

Select “BMC Configuration” on navigation tree, to open the BMC configuration page, which contains 10 pages of “BMC Network”, “Service Configuration”, “NTP Configuration", “SMTP Configuration”, “Alarming Management”, “Active Directory Configuration”, “LDAP/E-Directory”, “User Configuration”, “IP Access Control”, “NCSI Network Card Selection”, as shown in the following figure.

● BMC network: Contains network for BMC configuration (static IP and DHCP), DNS configuration and network interface binding function.

● Service configuration: Configures BMC’S Web service, KVM service, ssh service and telnet service etc.

● NTP configuration: Sets BMC time, which has two methods:

- One is to synchronize from NTP server.
- The other is to configure time manually.

● SMTP configuration: Sets SMTP server information related to alarming.

● Alarming management: Sets information about BMC management module alarming event filtering and alarming targets etc.

● Active directory configuration: Carries out related configuration on BMC active directory.

● LDAP/E-Directory: Carries out related configuration on BMC’s LDAP.

● User configuration: Carries out management on BMC users, including add user, delete user and change password.

● IP access control: Configures IP address fields accessible to BMC.

● NCSI network card selection: Includes NCSI network card switching, and NCSI work mode switching functions.

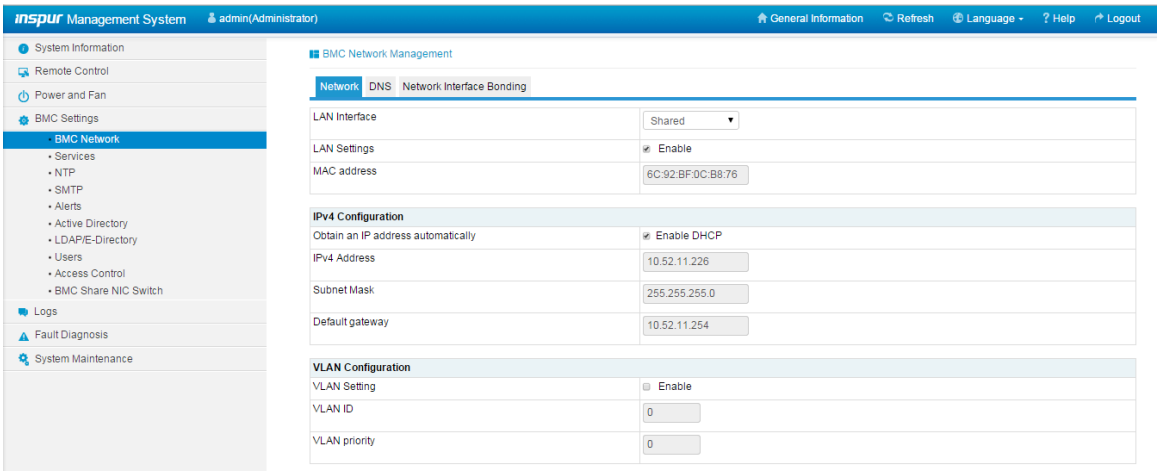
inspur Management System
admin(Administrator)
General Information
Refresh
Language
Help
Logout
System Information
Remote Control
Power and Fan
BMC Settings
BMC Network
Services
NTP
SMTP
Alerts
Active Directory
LDAP/E-Directory
Users
Access Control
BMC Share NIC Switch
Logs
Fault Diagnosis
System Maintenance
BMC Network Management
Network
DNS
Network Interface Bonding
LAN Interface
Shared
LAN Settings
Enable
MAC address
6C:92:BF:0C:B8:76
IPv4 Configuration
Obtain an IP address automatically
Enable DHCP
IPv4 Address
10.52.11.226
Subnet Mask
255.255.255.0
Default gateway
10.52.11.254
VLAN Configuration
VLAN Setting
Enable
VLAN ID
0
VLAN priority
0

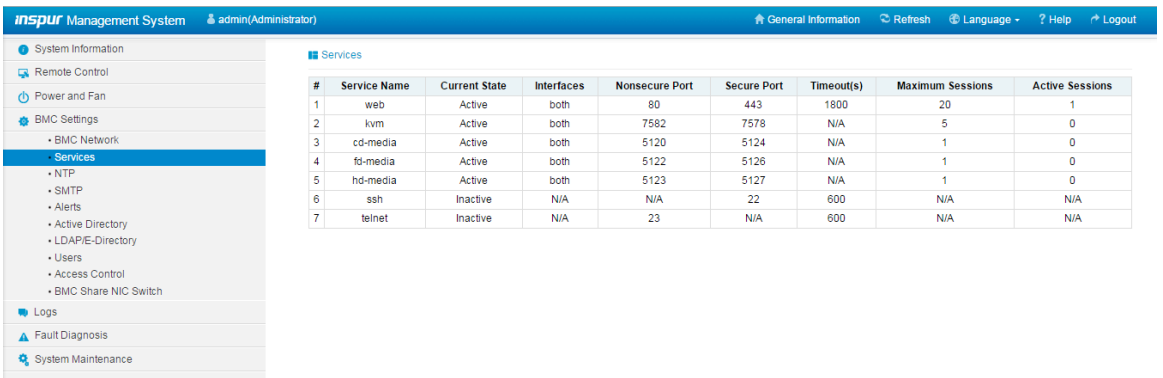
inspur Management System
admin(Administrator)
General Information
Refresh
Language
Help
Logout
System Information
Remote Control
Power and Fan
BMC Settings
BMC Network
Services
NTP
SMTP
Alerts
Active Directory
LDAP/E-Directory
Users
Access Control
BMC Share NIC Switch
Logs
Fault Diagnosis
System Maintenance
Services
Service Name Current State Interfaces Nonsecure Port Secure Port Timeout(s) Maximum Sessions Active Sessions
1 web Active both 80 443 1800 20 1
2 kvm Active both 7582 7578 N/A 5 0
3 cd-media Active both 5120 5124 N/A 1 0
4 fd-media Active both 5122 5126 N/A 1 0
5 hd-media Active both 5123 5127 N/A 1 0
6 ssh Inactive N/A N/A 22 600 N/A N/A
7 telnet Inactive N/A 23 N/A 600 N/A N/A

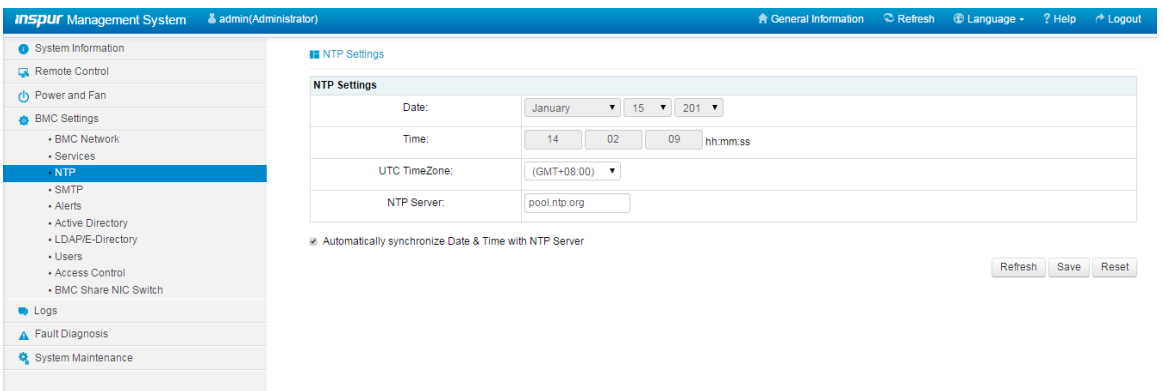
inspur Management System
admin(Administrator)
General Information
Refresh
Language
Help
Logout
System Information
Remote Control
Power and Fan
BMC Settings
BMC Network
Services
NTP
SMTP
Alerts
Active Directory
LDAP/E-Directory
Users
Access Control
BMC Share NIC Switch
Logs
Fault Diagnosis
System Maintenance
NTP Settings
NTP Settings
Date:
January
15
201
Time:
14
02
09
hh:mm:ss
UTC TimeZone:
(GMT+08:00)
NTP Server:
pool.ntp.org
Automatically synchronize Date & Time with NTP Server
Refresh
Save
Reset

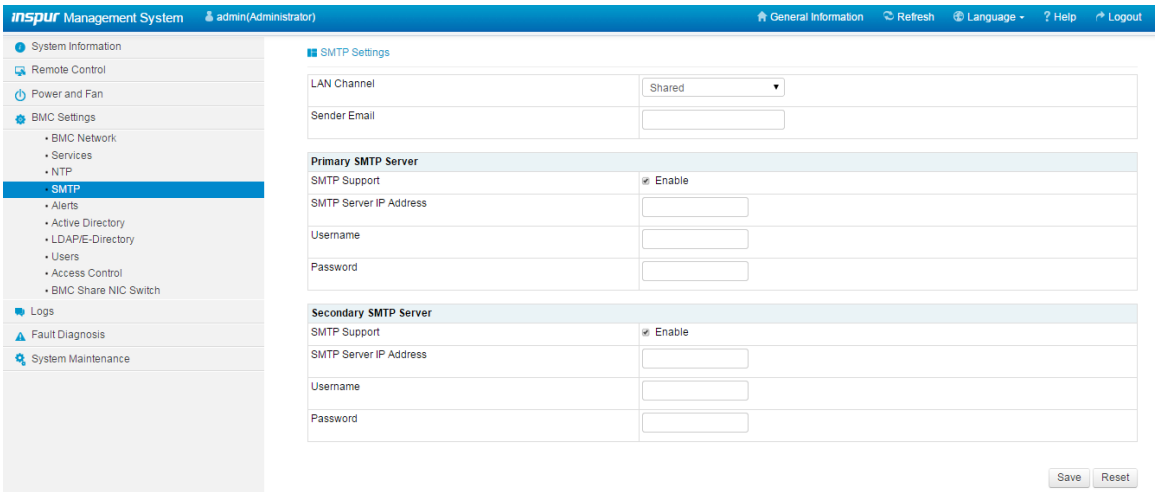
inspur Management System
admin(Administrator)
General Information
Refresh
Language
Help
Logout
System Information
Remote Control
Power and Fan
BMC Settings
BMC Network
Services
NTP
SMTP
Alerts
Active Directory
LDAP/E-Directory
Users
Access Control
BMC Share NIC Switch
Logs
Fault Diagnosis
System Maintenance
SMTP Settings
LAN Channel
Shared
Sender Email
Primary SMTP Server
SMTP Support
Enable
SMTP Server IP Address
Username
Password
Secondary SMTP Server
SMTP Support
Enable
SMTP Server IP Address
Username
Password
Save
Reset

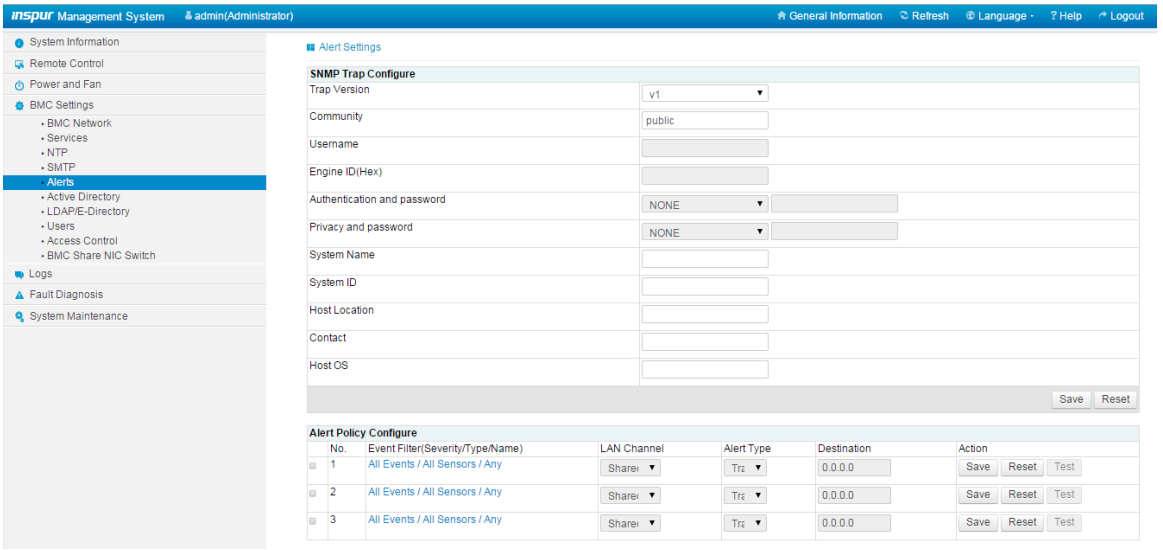
inspur Management System
admin(Administrator)
General Information
Refresh
Language
Help
Logout
System Information
Remote Control
Power and Fan
BMC Settings
BMC Network
Services
NTP
SMTP
Alerts
Active Directory
LDAP/E-Directory
Users
Access Control
BMC Share NIC Switch
Logs
Fault Diagnosis
System Maintenance
Alert Settings
SNMP Trap Configure
Trap Version
v1
Community
public
Username
Engine ID(Hex)
Authentication and password
NONE
Privacy and password
NONE
System Name
System ID
Host Location
Contact
Host OS
Save
Reset
Alert Policy Configure
No.
Event Filter(Severity/Type/Name)
LAN Channel
Alert Type
Destination
Action
1
All Events / All Sensors / Any
2
All Events / All Sensors / Any
3
All Events / All Sensors / Any
0.0.0.0
Save
Reset
Test

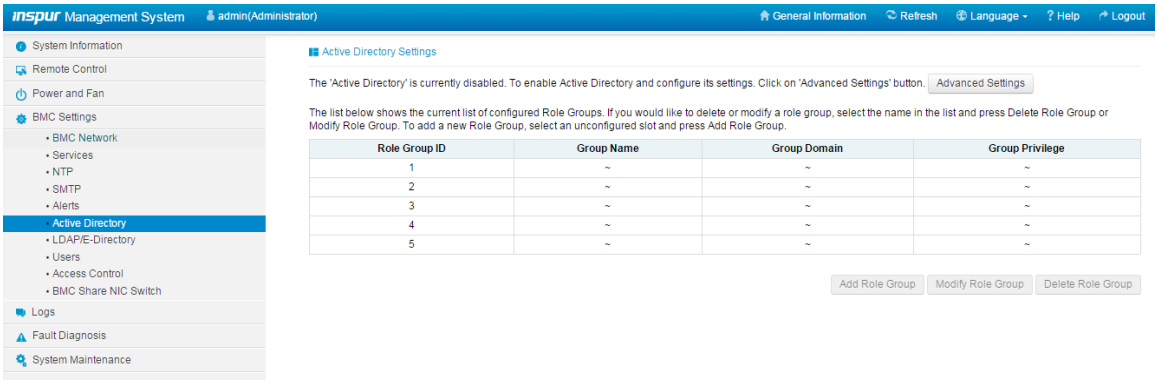
inspur Management System
admin(Administrator)
General Information
Refresh
Language
Help
Logout
System Information
Remote Control
Power and Fan
BMC Settings
BMC Network
Services
NTP
SMTP
Alerts
Active Directory
LDAP/E-Directory
Users
Access Control
BMC Share NIC Switch
Logs
Fault Diagnosis
System Maintenance
Active Directory Settings
The 'Active Directory' is currently disabled. To enable Active Directory and configure its settings. Click on 'Advanced Settings' button.
Advanced Settings
The list below shows the current list of configured Role Groups. If you would like to delete or modify a role group, select the name in the list and press Delete Role Group or Modify Role Group. To add a new Role Group, select an unconfigured slot and press Add Role Group.
Role Group ID
Group Name
Group Domain
Group Privilege
1
2
3
4
5
Add Role Group
Modify Role Group
Delete Role Group

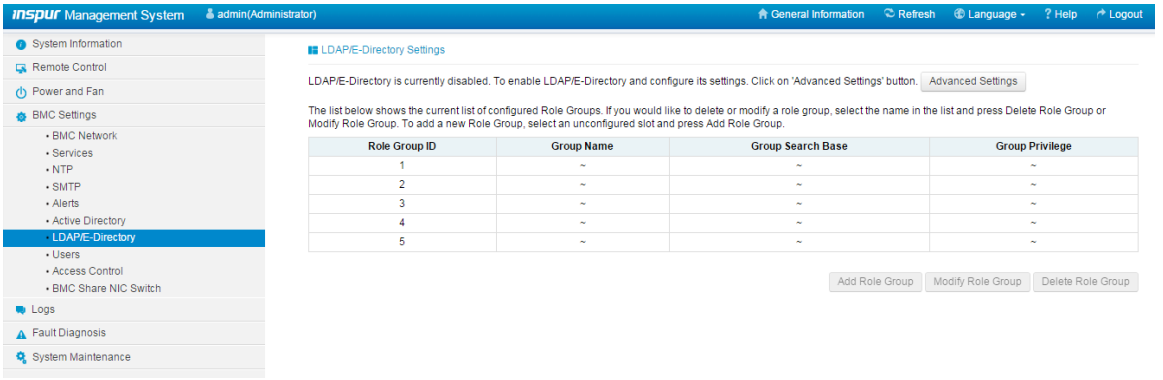
inspur Management System
admin(Administrator)
General Information
Refresh
Language
Help
Logout
System Information
Remote Control
Power and Fan
BMC Settings
• BMC Network
• Services
• NTP
• SMTP
• Alerts
• Active Directory
• LDAP/E-Directory
• Users
• Access Control
• BMC Share NIC Switch
Logs
Fault Diagnosis
System Maintenance
LDAP/E-Directory Settings
LDAP/E-Directory is currently disabled. To enable LDAP/E-Directory and configure its settings. Click on 'Advanced Settings' button.
Advanced Settings
The list below shows the current list of configured Role Groups. If you would like to delete or modify a role group, select the name in the list and press Delete Role Group or Modify Role Group. To add a new Role Group, select an unconfigured slot and press Add Role Group.
Role Group ID
Group Name
Group Search Base
Group Privilege
1 ~ ~ ~
2 ~ ~ ~
3 ~ ~ ~
4 ~ ~ ~
5 ~ ~ ~
Add Role Group
Modify Role Group
Delete Role Group

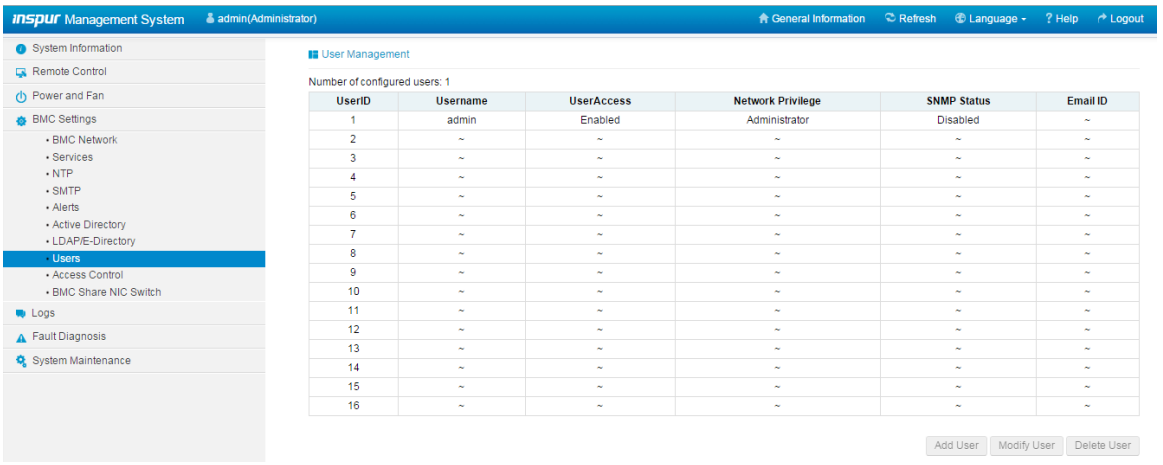
inspur Management System
admin(Administrator)
General Information
Refresh
Language
Help
Logout
System Information
Remote Control
Power and Fan
BMC Settings
• BMC Network
• Services
• NTP
• SMTP
• Alerts
• Active Directory
• LDAP/E-Directory
• Users
• Access Control
• BMC Share NIC Switch
Logs
Fault Diagnosis
System Maintenance
User Management
Number of configured users: 1
UserID
Username
UserAccess
Network Privilege
SNMP Status
Email ID
1 admin Enabled Administrator Disabled ~
2 ~ ~ ~ ~ ~
3 ~ ~ ~ ~ ~
4 ~ ~ ~ ~ ~
5 ~ ~ ~ ~ ~
6 ~ ~ ~ ~ ~
7 ~ ~ ~ ~ ~
8 ~ ~ ~ ~ ~
9 ~ ~ ~ ~ ~
10 ~ ~ ~ ~ ~
11 ~ ~ ~ ~ ~
12 ~ ~ ~ ~ ~
13 ~ ~ ~ ~ ~
14 ~ ~ ~ ~ ~
15 ~ ~ ~ ~ ~
16 ~ ~ ~ ~ ~
Add User
Modify User
Delete User

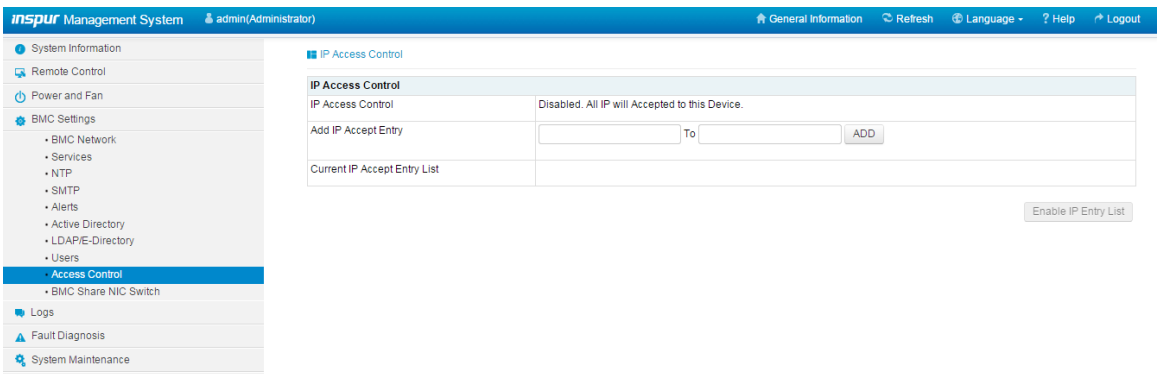
inspur Management System
admin(Administrator)
General Information
Refresh
Language
Help
Logout
System Information
Remote Control
Power and Fan
BMC Settings
• BMC Network
• Services
• NTP
• SMTP
• Alerts
• Active Directory
• LDAP/E-Directory
• Users
• Access Control
• BMC Share NIC Switch
Logs
Fault Diagnosis
System Maintenance
IP Access Control
IP Access Control
IP Access Control
Disabled. All IP will Accepted to this Device.
Add IP Accept Entry
To
ADD
Current IP Accept Entry List
Enable IP Entry List

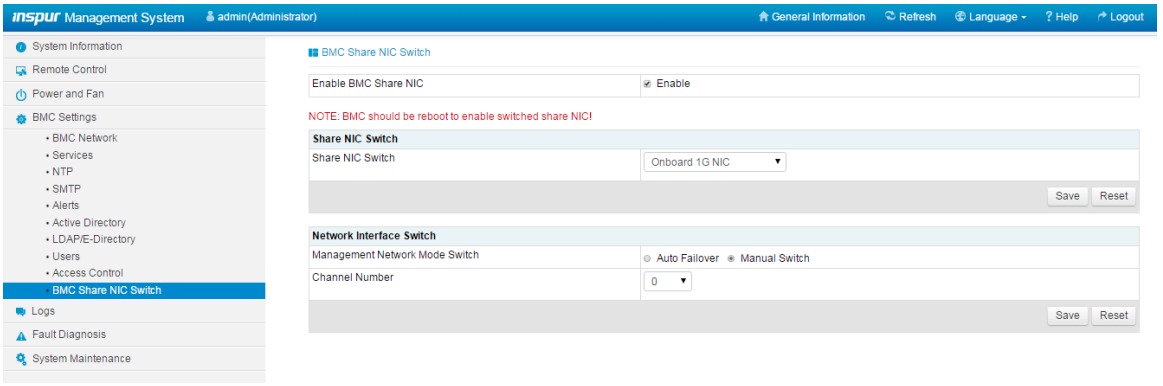

4.7 Logs

Select “Logs” on navigation tree, open pages related to logs, including four pages of “System Event Logs", “BMC System Design Logs”, “Black Box Logs”, “Event Logs Settings” and “BMC System Audit Logs Settings”.

● System event logs: Displays various event logs generated by server.

● BMC system audit logs: Displays system logs and audit logs of BMC.

● Black box logs: Used to import fault logs.

● Event logs configuration: Sets BMC logs storage strategies:

➢ Linear strategy: To clean all logs after log storage is full and record again.

➢ Circulation strategy: To record circularly after log record is full.

● BMC system audit logs configuration: Sets information about BMC system audit logs storage methods and lengths etc.

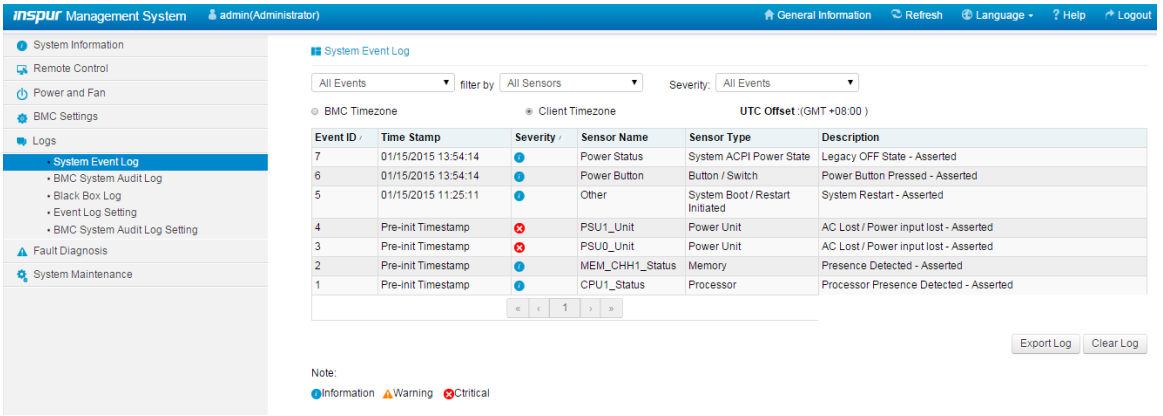

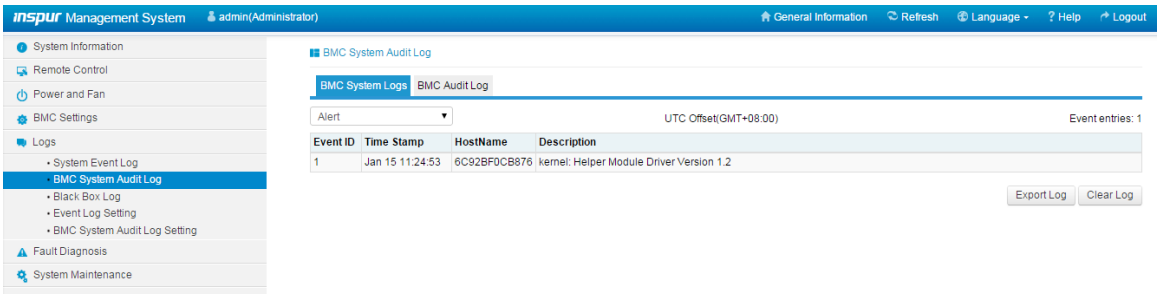
inspur Management System
admin(Administrator)
General Information
Refresh
Language
Help
Logout
System Information
Remote Control
Power and Fan
BMC Settings
Logs
• System Event Log
• BMC System Audit Log
• Black Box Log
• Event Log Setting
• BMC System Audit Log Setting
Fault Diagnosis
System Maintenance
BMC System Audit Log
BMC System Logs
BMC Audit Log
Alert
UTC Offset(GMT+08:00)
Event entries: 1
Event ID
Time Stamp
HostName
Description
1
Jan 15 11:24:53
6C92BF0CB876
kernel: Helper Module Driver Version 1.2
Export Log
Clear Log

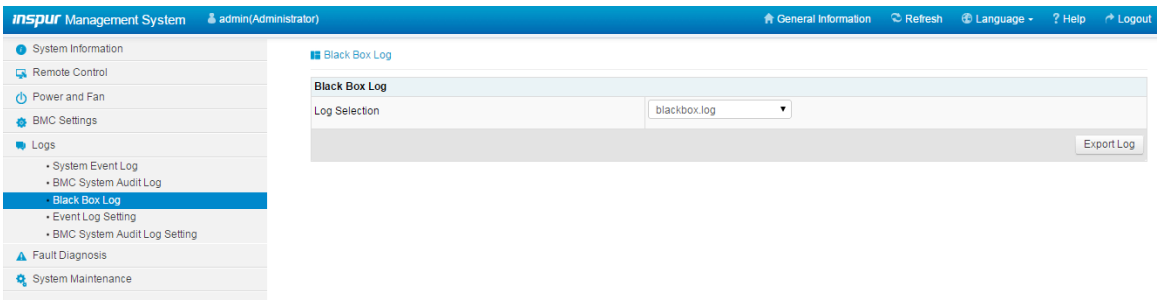
inspur Management System
admin(Administrator)
General Information
Refresh
Language
Help
Logout
System Information
Remote Control
Power and Fan
BMC Settings
Logs
• System Event Log
• BMC System Audit Log
• Black Box Log
• Event Log Setting
• BMC System Audit Log Setting
Fault Diagnosis
System Maintenance
Black Box Log
Black Box Log
Log Selection
blackbox.log
Export Log

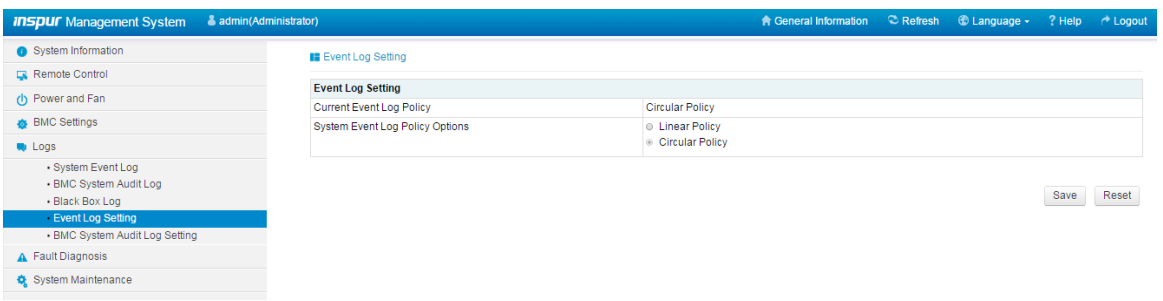
inspur Management System
admin(Administrator)
General Information
Refresh
Language
Help
Logout
System Information
Remote Control
Power and Fan
BMC Settings
Logs
• System Event Log
• BMC System Audit Log
• Black Box Log
• Event Log Setting
• BMC System Audit Log Setting
Fault Diagnosis
System Maintenance
Event Log Setting
Event Log Setting
Current Event Log Policy
Circular Policy
System Event Log Policy Options
Linear Policy
Circular Policy
Save
Reset

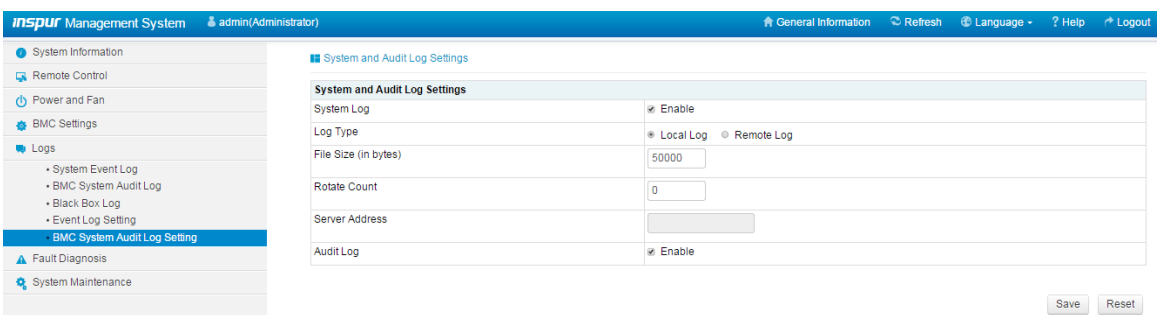
inspur Management System
admin(Administrator)
General Information
Refresh
Language
Help
Logout
System Information
Remote Control
Power and Fan
BMC Settings
Logs
• System Event Log
• BMC System Audit Log
• Black Box Log
• Event Log Setting
• BMC System Audit Log Setting
Fault Diagnosis
System Maintenance
System and Audit Log Settings
System and Audit Log Settings
System Log
Enable
Log Type
Local Log
Remote Log
File Size (in bytes)
50000
Rotate Count
0
Server Address
Audit Log
Enable
Save
Reset

4.8 Fault Diagnosis

Select “Fault Diagnosis” on navigation tree, to open fault diagnosis page, which contains three pages of “Task Restart”, “Last Crash Screen” and “System Power On Self test codes”. As shown in the following figure.

● Task restart: Contains restart two functions of restarting BMC and restarting KVM service;

● Last crash screen: Used to capture information on the last screen at system crash;

Note: Blue screen only adapts to Windows 2008R2 and Windows 2012 OS;

● System power on self test codes: Displays power-on codes during system startup.

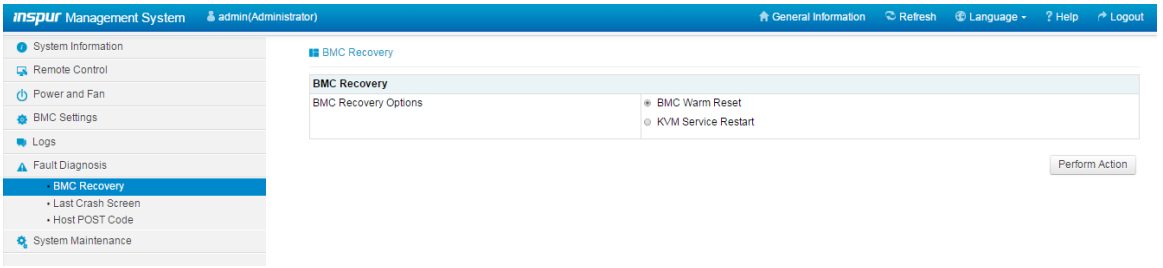

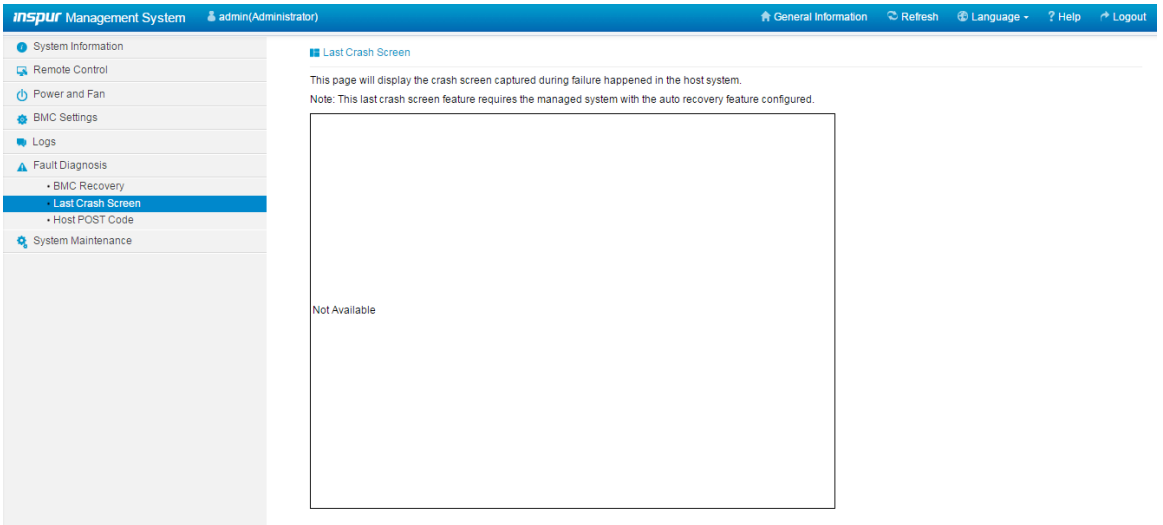

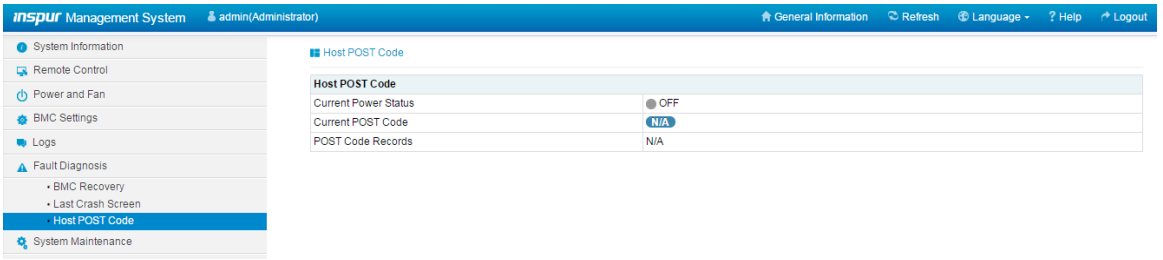

4.9 System Maintenance

Select “System Maintenance” on navigation tree, to open system maintenance page, and system maintenance page includes three pages of “BMC Firmware Update”, “BIOS Firmware Update” and “Restore Factory Settings”, as shown in the following figure.

- BMC firmware update: Carries out update on BMC FW via BMC Web interface;
- BIOS firmware update: Carries out update on BIOS via BMC Web interface;
- Restore factory configuration: Restores BMC’s configuration to factory state.

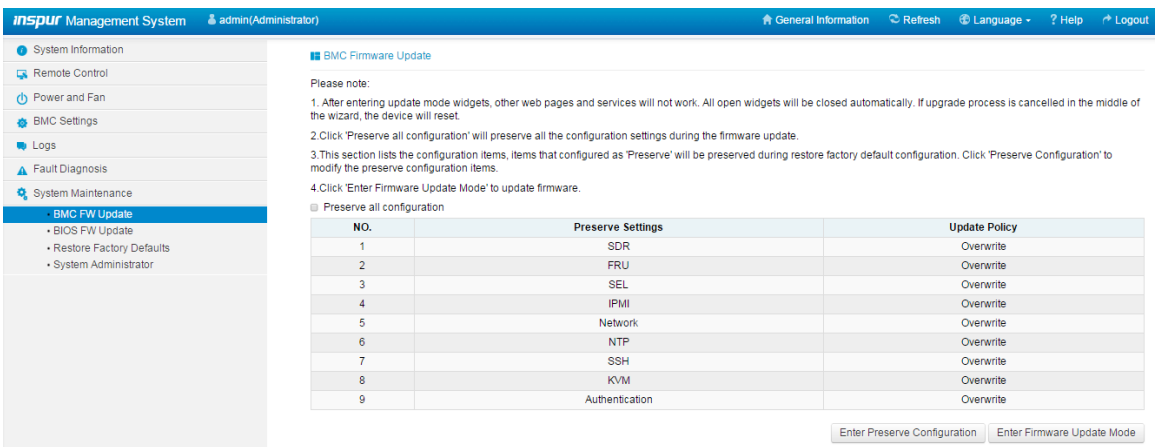
inspur Management System
admin(Administrator)
General Information
Refresh
Language
Help
Logout
System Information
Remote Control
Power and Fan
BMC Settings
Logs
Fault Diagnosis
System Maintenance
• BMC FW Update
• BIOS FW Update
• Restore Factory Defaults
• System Administrator
BMC Firmware Update
Please note:
1. After entering update mode widgets, other web pages and services will not work. All open widgets will be closed automatically. If upgrade process is cancelled in the middle of the wizard, the device will reset.
2.Click 'Preserve all configuration' will preserve all the configuration settings during the firmware update.
3.This section lists the configuration items, items that configured as 'Preserve' will be preserved during restore factory default configuration. Click 'Preserve Configuration' to modify the preserve configuration items.
4.Click 'Enter Firmware Update Mode' to update firmware.
Preserve all configuration
NO.
Preserve Settings
Update Policy
1 SDR Overwrite
2 FRU Overwrite
3 SEL Overwrite
4 IPMI Overwrite
5 Network Overwrite
6 NTP Overwrite
7 SSH Overwrite
8 KVM Overwrite
9 Authentication Overwrite
Enter Preserve Configuration
Enter Firmware Update Mode

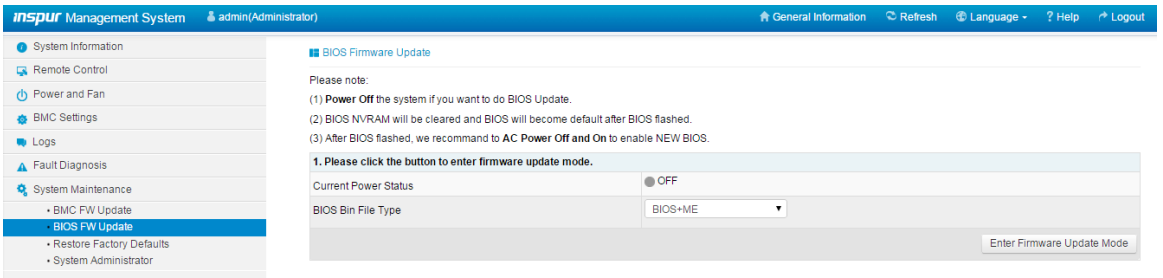

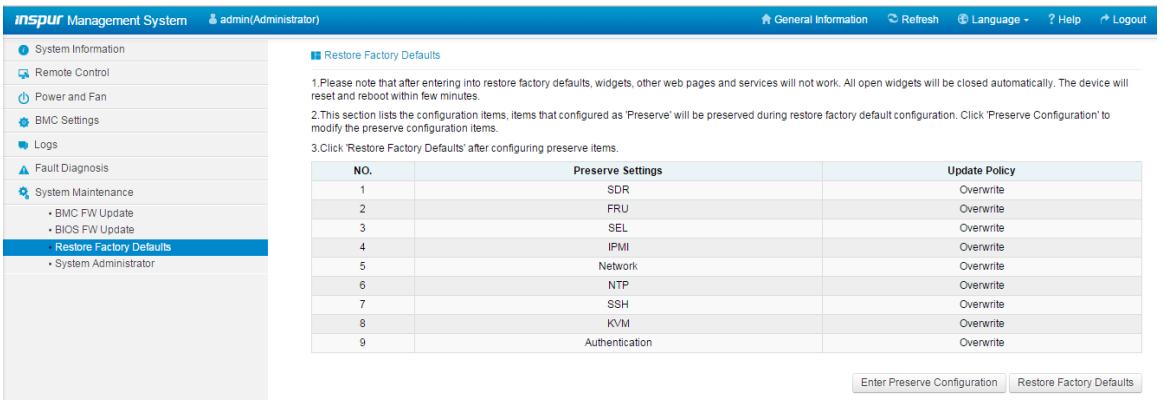
inspur Management System
admin(Administrator)
General Information
Refresh
Language
Help
Logout
System Information
Remote Control
Power and Fan
BMC Settings
Logs
Fault Diagnosis
System Maintenance
• BMC FW Update
• BIOS FW Update
• Restore Factory Defaults
• System Administrator
Restore Factory Defaults
1.Please note that after entering into restore factory defaults, widgets, other web pages and services will not work. All open widgets will be closed automatically. The device will reset and reboot within few minutes.
2.This section lists the configuration items, items that configured as 'Preserve' will be preserved during restore factory default configuration. Click 'Preserve Configuration' to modify the preserve configuration items.
3.Click 'Restore Factory Defaults' after configuring preserve items.
NO.
Preserve Settings
Update Policy
1 SDR Overwrite
2 FRU Overwrite
3 SEL Overwrite
4 IPMI Overwrite
5 Network Overwrite
6 NTP Overwrite
7 SSH Overwrite
8 KVM Overwrite
9 Authentication Overwrite
Enter Preserve Configuration
Restore Factory Defaults

4.10 Command Line Function Introduction

About this chapter

It introduces Web interface of management system as well as operation steps to login Web interface.

● Login command line

Introduces methods of login command line.

● Command line function introduction

Introduces command line functions.

4.10.1 Command line login:

Command line using ssh to login BMC, default user name: root, and default password: rootuser.

```
login as: root
root@10.53.11.240's password:
Executing [-/usr/local/bin/smashclp]
```

After login, you could enter the command line interface:

```
                >> smashclp <<
////////////////////////////////////////////////
smashclp cli tool version 0.9
Enter 'help' for a list of built-in commands
////////////////////////////////////////////////

/smashclp>
```

Enter help, you could view online help:

```
/smashclp> help
Built-in command:
------------------
ipconfig:       get or set network parameters, please enter <ipconfig --help> for more information
sensor  :       get or set sensor parameters, please enter <sensor --help> for more information
fru     :       get or set fru parameters, please enter <fru --help> for more information
chassis :       get or set chassis parameters, please enter <chassis --help> for more information
user    :       get or set user parameters, please enter <user --help> for more information
mc      :       get or set mc parameters, please enter <mc --help> for more information
fan     :       get or set fan parameters, please enter <fan --help> for more information
psu     :       get or set psu parameters, please enter <psu --help> for more information
password:       change root password
exit    :       exit the command line
/smashclp>
```

4.10.2 Command Line Function Introduction

4.10.2.1 Network Information Acquisition and Configuration:

You could acquire and configure BMC's network information via ipconfig instruction:

```
/smashclp> ipconfig --get
     eth0
          IP Address Source  :  dhcp
          IP Address         :  10.53.11.240
          Subnet Mask        :  255.255.255.0
          Default Gateway IP :  10.53.11.254
          MAC Address        :  6C:92:BF:07:1A:B6
     eth1
          IP Address Source  :  dhcp
          IP Address         :  0.0.0.0
          Subnet Mask        :  0.0.0.0
          Default Gateway IP :  0.0.0.0
          MAC Address        :  6C:92:BF:07:1A:B7
```

4.10.2.2 Sensor Information Acquisition:

Via sensor instruction, you could acquire all sensor information lists:

```
/smashclp> sensor --list
sensor name      | num | value     | unit       | status | lnr       | lc        | lnc       | unc       | uc        | unr
CPU0_Temp        | 19h | 60.000    | degrees C  | ok     | na        | na        | na        | 102.000   | 112.000   | na
CPU1_Temp        | 1Ah | na        | degrees C  | na     | na        | na        | na        | 102.000   | 112.000   | na
PCH_Temp         | 1Dh | 37.000    | degrees C  | ok     | na        | na        | na        | 100.000   | 110.000   | na
DIMMG0_Temp      | 1Eh | 30.000    | degrees C  | ok     | na        | na        | na        | 95.000    | 105.000   | na
DIMMG1_Temp      | 1Fh | na        | degrees C  | na     | na        | na        | na        | 95.000    | 105.000   | na
Inlet_Temp       | 02h | na        | degrees C  | na     | na        | na        | na        | 40.000    | 50.000    | na
Outlet_Temp      | 00h | na        | degrees C  | na     | na        | na        | na        | na        | na        | na
SYS0_Temp        | 01h | na        | degrees C  | na     | na        | na        | na        | na        | na        | na
SYS1_Temp        | 03h | na        | degrees C  | na     | na        | na        | na        | na        | na        | na
HDD0_REAR_Temp   | 04h | na        | degrees C  | na     | na        | na        | na        | 60.000    | 70.000    | na
HDD1_REAR_Temp   | 0Bh | na        | degrees C  | na     | na        | na        | na        | 60.000    | 70.000    | na
RISER0_Temp      | 05h | na        | degrees C  | na     | na        | na        | na        | na        | na        | na
RISER1_Temp      | 06h | na        | degrees C  | na     | na        | na        | na        | na        | na        | na
GPU0_Temp        | 07h | na        | degrees C  | na     | na        | na        | na        | 82.000    | 92.000    | na
GPU1_Temp        | 08h | na        | degrees C  | na     | na        | na        | na        | 82.000    | 92.000    | na
MIC0_Temp        | 09h | na        | degrees C  | na     | na        | na        | na        | 104.000   | 114.000   | na
MIC1_Temp        | 0Ah | na        | degrees C  | na     | na        | na        | na        | 104.000   | 114.000   | na
SYS_VCCIO        | 40h | 1.070     | Volts      | ok     | 0.690     | 0.770     | 0.850     | 1.170     | 1.250     | 1.330
SYS_12V          | 43h | 12.502    | Volts      | ok     | 9.024     | 9.776     | 10.528    | 13.536    | 14.288    | 15.040
SYS_3.3V         | 44h | 3.377     | Volts      | ok     | 2.660     | 2.800     | 2.940     | 3.657     | 3.797     | 3.938
SYS_5V           | 47h | 5.220     | Volts      | ok     | 3.888     | 4.176     | 4.464     | 5.544     | 5.832     | 6.120
PCH_P1V05        | 41h | 1.070     | Volts      | ok     | 0.770     | 0.850     | 0.930     | 1.170     | 1.250     | 1.330
PCH_P1V5         | 42h | 1.550     | Volts      | ok     | 1.180     | 1.260     | 1.340     | 1.670     | 1.750     | 1.830
CPU0_VCORE       | 45h | 1.810     | Volts      | ok     | 1.040     | 1.120     | 1.200     | 2.300     | 2.380     | 2.460
CPU1_VCORE       | 46h | na        | Volts      | na     | 1.040     | 1.120     | 1.200     | 2.300     | 2.380     | 2.460
CPU0_DDR_VDDQAB  | 48h | 1.220     | Volts      | ok     | 0.910     | 0.990     | 1.070     | 1.330     | 1.410     | 1.490
CPU0_DDR_VDDQCD  | 49h | 1.200     | Volts      | ok     | 0.910     | 0.990     | 1.070     | 1.330     | 1.410     | 1.490
CPU1_DDR_VDDQEF  | 4Ah | na        | Volts      | na     | 0.910     | 0.990     | 1.070     | 1.330     | 1.410     | 1.490
CPU1_DDR_VDDQGH  | 4Bh | na        | Volts      | na     | 0.910     | 0.990     | 1.070     | 1.330     | 1.410     | 1.490
FAN_0            | 30h | 0.000     | RPM        | cr     | na        | 0.000     | na        | na        | na        | na
FAN_1            | 31h | na        | RPM        | na     | na        | 0.000     | na        | na        | na        | na
FAN_2            | 32h | 0.000     | RPM        | cr     | na        | 0.000     | na        | na        | na        | na
FAN_3            | 33h | na        | RPM        | na     | na        | 0.000     | na        | na        | na        | na
FAN_4            | 34h | 0.000     | RPM        | cr     | na        | 0.000     | na        | na        | na        | na
FAN_5            | 35h | na        | RPM        | na     | na        | 0.000     | na        | na        | na        | na
FAN_6            | 36h | 0.000     | RPM        | cr     | na        | 0.000     | na        | na        | na        | na
FAN_7            | 37h | na        | RPM        | na     | na        | 0.000     | na        | na        | na        | na
CPU0_Status      | 6Ah | 0x0       | discrete   | 0x8080 | na        | na        | na        | na        | na        | na
CPU1_Status      | 6Bh | 0x0       | discrete   | 0x8000 | na        | na        | na        | na        | na        | na
MEM_CHA0_Status  | 70h | 0x0       | discrete   | 0x8040 | na        | na        | na        | na        | na        | na
```

4.10.2.3 FRU Information Acquisition and Configuration:

Via FRU instruction, you could acquire FRU configuration information:

```
/smashclp> fru --get all
 Chassis Type           : Rack Mount Chassis
 Chassis Part Number    : 0
 Chassis Serial         : 0
 Chassis Extra          : NULL
 Board Mfg Date         : Mon Sep  8 13:17:00 2014
 Board Mfg              : Inspur
 Board Product          : Baotu
 Board Serial           : 0
 Board Part Number      : 0
 Product Manufacturer   : Inspur
 Product Name           : NF5280M4
 Product Part Number    : 0
 Product Version        : 01
 Product Serial         : 0
 Product Asset Tag      : NULL
/smashclp>
```

4.10.2.4 Chassis Status Acquisition and Control:

Via chassis instruction, you could acquire and control system power status.

```
/smashclp> chassis --get --help
chassis commands:
     chassis <option1> [<option2> <parameter>]
     option1:
       --help     show help information
       ?          show help information
       --get      get chassis information
       for example : chassis --get <option2> <parameter>
       --set      set chassis information
       for example : chassis --set <option2> <parameter>
     option2:
       power      set or get host status
       identify   set or get UID status
     parameter:
       status     get host or UID status
       on         set host status power on
       off        set host or UID status power off
       force      set UID status all the light
     Set UID light on server seconds, Please put seconds in the followed identify
     for example : chassis --set identify 15. Light on 15 Seconds
     The Seconds must be greater than 0 and less than or equal to 240
```

Acquiring system power status:

```
/smashclp> chassis --get power status
The host status is on
```

4.10.2.5 User Acquisition, Adding and Deleting:

Via user instruction, you could acquire the user list, to add or delete users.

```
/smashclp> user  --help
user commands:
     user <option> [<user id> [<user name>/<user priv>]]
     option:
       --help     show help information
       ?          show help information
       --list     show all the user of the information
       --add      Add new user information
       for example : user --add <user id> <user name>
       --password     Modify user password
       for example : user --password <user id>
       --privilege     Modify user permissions
       for example : user --privilege <user id> <user priv>
       --delete     Delete user
       for example : user --delete <user id>
       <user name>, The user name cannot be longer than 16 bytes.
       <user id>, The user id more than 0, less than 16.
       <user priv>, The user priv is 2(USER), 3(OPERATOR), 4(ADMINISTRATOR) or 15(NO ACCESS).
       The password does not exceed 16 bytes.
```

Acquiring user list:

```
/smashclp> user  --list
ID  Name             Channel Priv Limit
1   admin            ADMINISTRATOR
2                    NO ACCESS
3                    NO ACCESS
4                    NO ACCESS
5                    NO ACCESS
6                    NO ACCESS
7                    NO ACCESS
8                    NO ACCESS
9                    NO ACCESS
10                   NO ACCESS
11                   NO ACCESS
12                   NO ACCESS
13                   NO ACCESS
14                   NO ACCESS
15                   NO ACCESS
16                   NO ACCESS
```

4.10.2.6 BMC Version Acquisition and BMC Restart

Via mc instruction, you could acquire BMC version information, and restart BMC.

```
/smashclp> mc --help
mc commands:
     mc <option1> [<option2>] <parameter>
     option1:
       --help     show help information
       ?          show help information
       --get      get mc information
       for example : mc --get <parameter>
       --set      set mc information
       for example : mc --set <option2> <parameter>
     option2:
       bmc        set bmc action, this only support --set
       kvm        set kvm action, this only support --set
     parameter:
       version    get bmc version, this only support --get command
       reset      set bmc or kvm reset action, this only support --set command
```

Acquiring BMC version information:

```
/smashclp> mc --get version
Device ID                     : 32
Device Revision               : 1
Firmware Revision             : 4.5.0
IPMI Version                  : 2.0
```

4.10.2.7 Fan Work Mode Configuration and Fan Rotation Rate Acquisition:

Via fan instruction, you could either set fan work mode, or acquire fan rotation rate.

```
/smashclp> fan --help
fan commands:
     fan <option1> [<option2> <parameter1> [<parameter2>]]
     option1:
       --help     show help information
       ?          show help information
       --get      get fan information
       for example : fan --get <option2>
       --set      set fan information
       for example : fan --set <option2> <parameter1> [<parameter2>]
     option2:
       fanmode     set or get fanmode
       for example : fan --set fanmode 0|1
       0 : auto mode
       1 : manual mode
       fanlevel     set or get fan level
       for example : fan --set fanlevel <parameter1> <parameter2>
       parameter1: the fan id
       parameter2: the fan of the precent
```

Fan rotation rate acquisition:

```
/smashclp> fan --get fanlevel
ID  Status  SpeedPercent  SpeedRPM
0    NA          0          0 PRM
1    NA          0          0 PRM
2    NA          0          0 PRM
3    NA          0          0 PRM
4    NA          0          0 PRM
5    NA          0          0 PRM
6    NA          0          0 PRM
7    NA          0          0 PRM
```

4.10.2.8 Power Module Information Acquisition and Configuration:

Via Psu instruction, you could either acquire power module information, or set power module as main output.

```
/smashclp> psu --help
psu commands:
    psu <option1> <option2> [<parameter1> <parameter2>]
    option1:
      --help     show help information
      ?          show help information
      --get      get psu information
      for example : psu --get <option2>
      --set      set psu information
      for example : psu --set <option2> [<parameter1> <parameter2>]
    option2:
      psuinfo     show all psu information, this only support --get
      psumode     set psu information, this only support --set
      parameter1: the ID of the PSU module, not more than 1
      parameter2: the Action of the PSU module. 0 representation activate, 1 representation standby.
```

Power module information acquisition:

```
/smashclp> psu --get psuinfo
PSU Asset Info:
ID | Mfr ID          | Mfr Model       | Serail Number   | FW Ver
0  | N/A             | N/A             | N/A             | N/A
1  | N/A             | N/A             | N/A             | 1.000
PSU Monitor Info:
ID | Status | Alert | Temp(C) | Pin(W) | Pout(W) | Vin(V) | Vout(V) | Iin(A) | Iout(A)
0  | N/A    | N/A   | N/A     | N/A    | N/A     | N/A    | N/A     | N/A    | N/A
1  |Activate| OK    | 24      | 56     | 40      | 231    | 12.33   | 0.26   | 3.28
```

4.10.2.9 Change Root Password:

Via password instruction, you could change root user's password:

```
/smashclp> password
New password:
```

4.11 Time Zone Table

Time Zone	Countries and Regions
GMT-12:00	West Date Line
GMT-11:00	Appiah, Niue, Pago Pago, Midway
GMT-10:00	Fakaofo, Rarotonga, the island of Tahiti, Johnston, Hawaii
GMT-09:30	Marquesas
GMT-09:00	Alaska, Gambier Islands
GMT-08:00	Pacific Time (USA and Canada), Pitcairn, Whitehorse, Tijuana, Vancouver
GMT-07:00	Mountain Time (USA and Canada), Edmonton, Hermosillo, the Tao gave birth to Crick, Chihuahua, Yellowknife, Arizona, Mazatlan
GMT-06:00	Central Time (USA and Canada), Belize, Costa Rica, Easter Island, Galapagos Islands, Salvatore, Guatemala, Managua, Mexico City, Regina, Winnipeg
GMT-05:00	Eastern Time (USA and Canada), Panama, Bogota, Toronto, Grand Turk Island, Montreal, Iqaluit, Guayaquil, Havana, the Cayman Islands, Leo Brown Cu, Lima, Nassau, Port au Prince, Jamaica
GMT-04:00	Atlantic Time (Canada), Aruba, Anguilla, Antigua, Babado J, Bermuda, Puerto Rico, Bo Avesta, Campo Grande, Halifax City, Dominica, Grenada, Guadeloupe, Guyana, Caracas, Curacao, Cuiaba, Labasse, Martinique, Manaus, Montserrat, Palmer, Santiago, Santo Domingo, St. Kitts, St Lucia, St. Thomas, Vincent, STANLEY, Thule, Tortora, Porto Velho, port of Spain, Asuncion
GMT-03:30	St. Louis
GMT-03:00	Aragua ina, Belem, Buenos Aires, Fortaleza, Geert Holob, cayenne, Recife, Lutheran, Maceio, Montevideo, Miquelon Island, Paramaribo, Salvatore, St. Paul
GMT-02:00	South Georgia, Noronha
GMT-01:00	Cape Verde, Si kolle SBI Sander, Azores

GMT+00:00	Abidjan, Accra, Bamako, Banjul, Laayoune, Bissau, Dakar, Dublin, Freetown, Greenland, the Canary Islands, Casablanca, Conakry, Reykjavik, Lisbon, London, Monrovia, Nouakchott, Saint Lome, how beautiful, St. Helena, Ouagadougou
GMT+01:00	Algiers, Amsterdam, Andorra, Oslo, Paris, Berlin, Bangui, Porto Novo, Budapest, Brazzaville, Brussels, Tirana, Douala, Ndjamena, Copenhagen, Warsaw, Kinshasa, Lagos, Liebe Weil, Luxemburg, Luanda, Rome, Madrid, Malta, Monaco, Niamey, Stockholm, Guinea, Zurich, Tunisia, Vaduz, Vienna, Windhoek, Ceuta, Gibraltar
GMT+02:00	Amman, Beirut, Bucharest, Blantyre, Bujumbura, Damascus, Tripoli, Harare, Habo Roney, Helsinki, Kiev, Kigali, Kihine U, Cairo, Gaza, Riga, Lubumbashi, Lusaka, Maputo, Minsk, Kaliningrad, Maseru, Mbabane, Nicosia, Sofia, Tallinn, Tel Aviv, Vilnius, Athens, Istanbul, Johannesburg
GMT+03:00	Antananarivo, Baghdad, Bahrain, Dar Es Salaam, Djibouti, Qatar, ha Khartoum, Kampala, Comoros, Kuwait, Mayotte, Riyadh, Mogadishu, Moscow, Nairobi, Addisababa, Aden, Showa
GMT+03:30	Newfoundland
GMT+04:00	Baku, Dubai, Tbilisi, Reunion Island, Mahe, Muscat, Mauritius, Samarra, Ye Liewan
GMT+04:30	Kabul
GMT+05:00	Aktau Aktobe, Ashkhabad, Karachi, Dushanbe, Kell islands, Maldives, Kelang, Yekaterinburg, Tashkent
GMT+05:30	Colombo, India
GMT+06:00	Ala Mutu, Bishkek, Chagos, Dhaka, Mo Sen, Omsk, Novosibirsk, Thimphu, Vostok
GMT+06:30	The Coco Islands, Yangon
GMT+07:00	Davies, Hanoi, Phnom Penh, Khovd, Bangkok, Lasinuoyaersike, Christmas Island, Vientiane, Jakarta
GMT+08:00	Macao, Kuala Lumpur, Manila, Ilkuts J, Casey, Macassar, Taipei, Brunei, Ulan Bator, Perth, Singapore, Beijing, Hongkong, China
GMT+09:00	Chaya Pla, Dili, Tokyo, Yakutsk, Palau, Pyongyang, Qiao Bashan, Seoul
GMT+09:30	Adelaide, Darwin

GMT+10:00	Di Mundi Weil, Brisbane, Hobart, Melbourne, Sydney, Guam, Port Moresby, Yuzhno-Sakhalinsk, Saipan, Truc
GMT+11:00	Efate, Ponape Island, Guadalcanal, Kosrae, Magadan, Noumea
GMT+11:30	Nuo Fuke
GMT+12:00	Oakland, Funafuti, Kwajalein, Majuro, Pietro Pavlov's Kamchatka, Tarawa Island, Wallis, Wake Island, Nauru, Fiji
GMT+13:00	Nukualofa

5 Hardware Maintenance

5.1 Tool Preparation

● Tools to be prepared before construction, as shown in the following table.

Tool List

Illustration	Name	Description
	Phillips Screwdriver	Used to fix bolts.
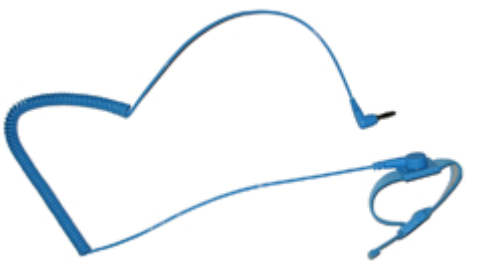	Anti-static Wrist Strap	Used to contact or operate devices and apparatuses, to prevent static electricity.
	Anti-static Gloves	Used to plug in single board, hand-held single board or other precision instruments etc., to prevent static electricity.

5.2 Parts Replacement

Special tips: Except hot plugging parts (i.e. hot plugging hard disk etc.), all part replacements could only be carried out with power disconnected.

5.2.1 Processor Replacement

During installing and replacing CPU, please pay attention to the following issues:

● During installing two CPUs, type of these two CPUs shall be the same.

● When only one CPU is to be installed, please operate according to the following requirements:

1) This CPU has to be installed on CPU0's socket, and see [Mainboard Diagram] for CPU position.

2) It is not allowed to dismantle the protective cover on sockets without CPU1 installed.

Step 1: Open two pull rods on CPU slot, and open CPU fixing plate.

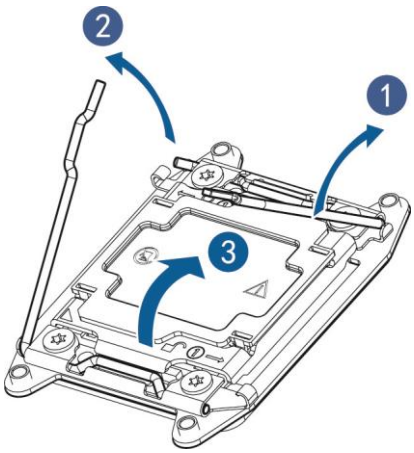

Step 2: Install CPU into CPU slot, and then remove protective cover on CPU slot.

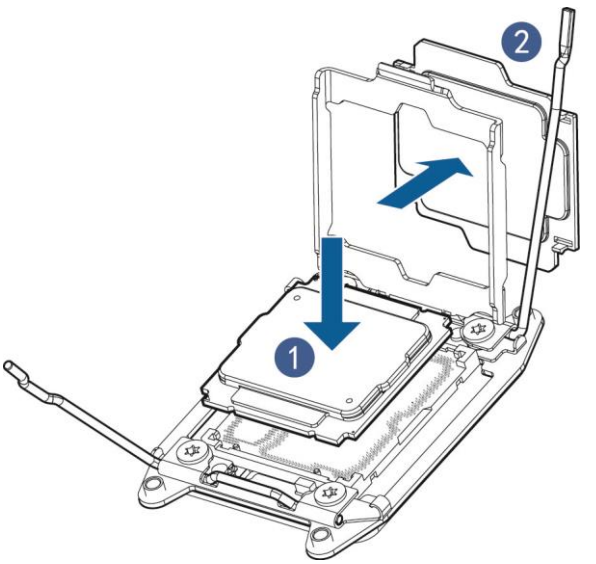

Step 3: Clamp CPU with CPU fixing plate, and then fix two pull rods firmly.

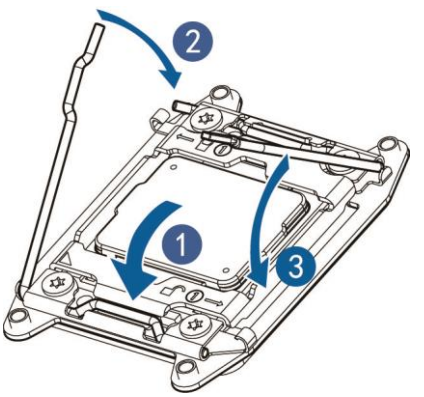

Step 4: Fix CPU heat radiator above CPU, and fasten bolts on heat radiator.

Note:

● It is required to coat thermal grease evenly onto contact position between CPU heat radiator and CPU.

● Fins of CPU heat radiator must be installed in the direction corresponding to system inlet/outlet.

● During fixing CPU heat radiator, it is required to fasten bolts according to diagonal sequence accordingly.

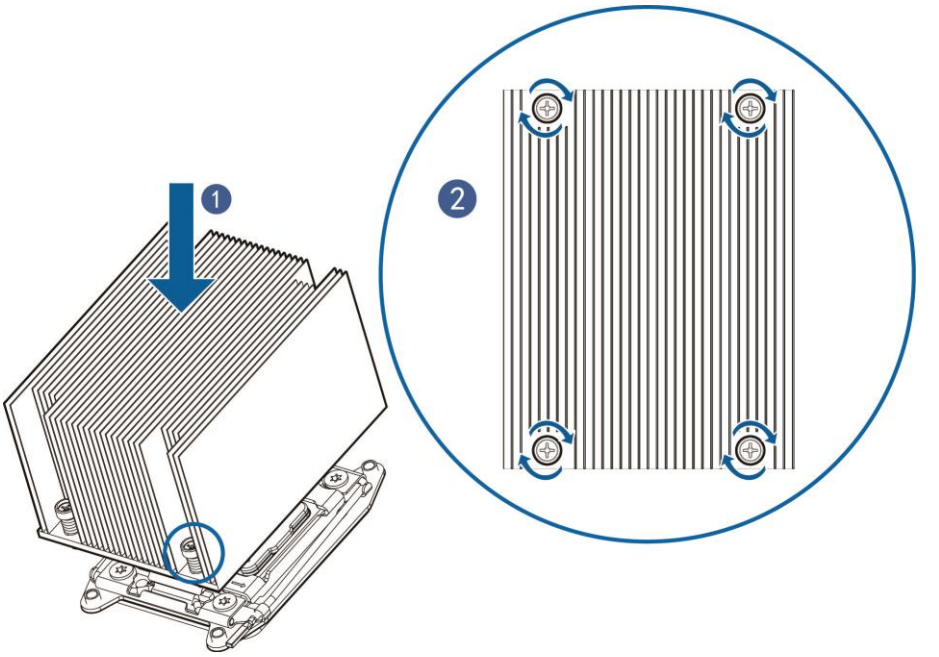

5.2.2 Memory Replacement

● Memory slot layout is as shown in the following figure:

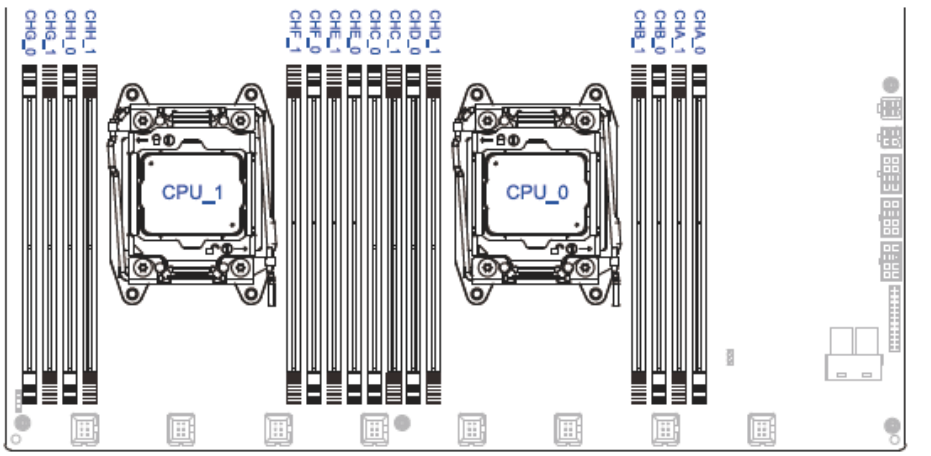

● Memory installation principle:

Only memory of the same type could be used in the same machine. Detailed memory installation and combination principles are as follows:

a. The white slot shall take the priority, while CPU1 memory shall be symmetrically installed with CPU0.
b. For single CPU, memory shall follow the screen printing sequence: CHA-0, CHB-0, CHC-0, CHD-0, CHA-1…
c. For dual CPUs, CPU0 position memory shall follow the screen printing sequence: CHA-0, CHB-0, CHC-0, CHD-0, CHA-1… CHG-0, CHH-0, CHE-0, CHF-0 …
Step 1: Open fixing catches on both ends of memory slot.
Step 2: Align the notch at memory bottom with memory slot positioning point, and press both ends of the memory with your thumbs, to insert the memory into the slot completely, and then fasten fixing catches on both ends of the memory slot.

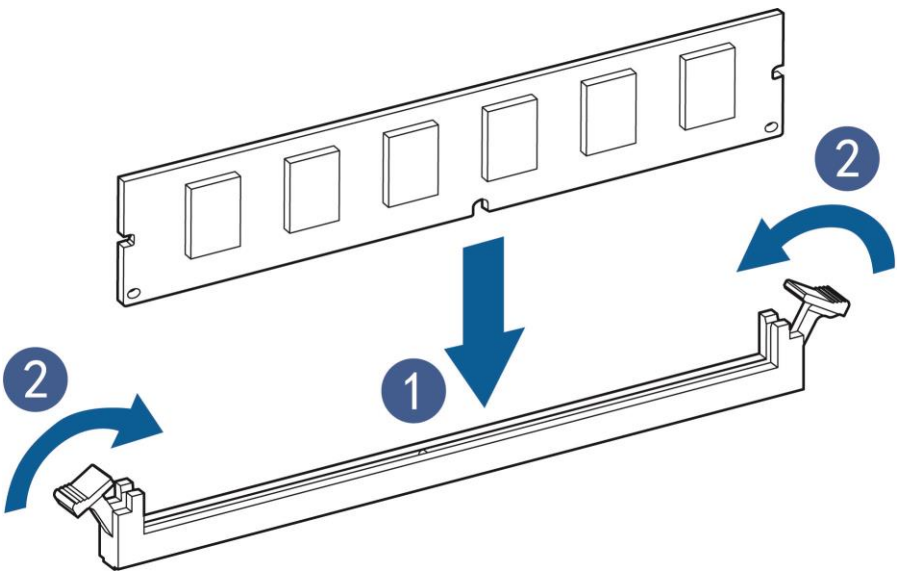

5.2.3 Hard Disk Replacement

Step 1: Press hard disk panel button.

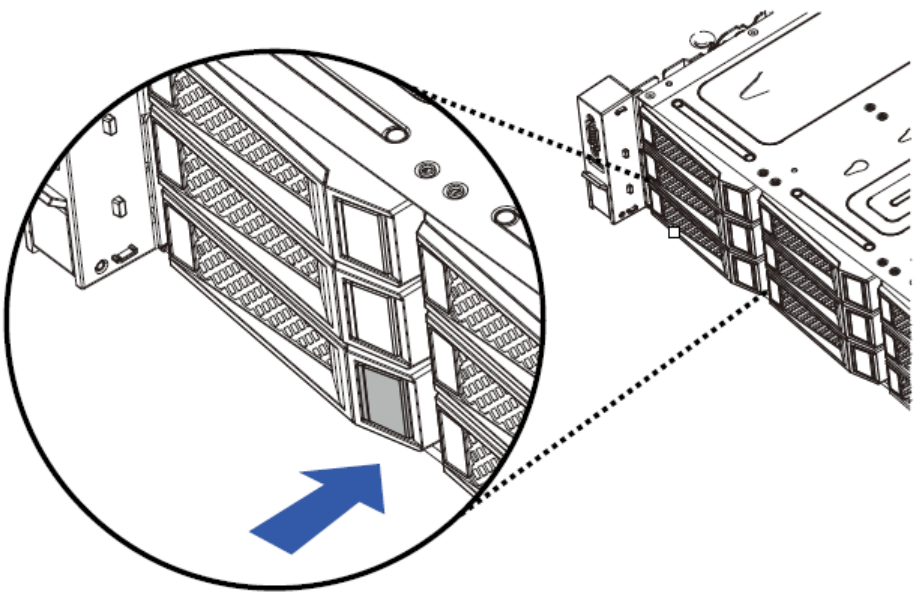

Step 2: Pop up buckles on hard disk bracket automatically, flatten and dismantle hard disk bracket.

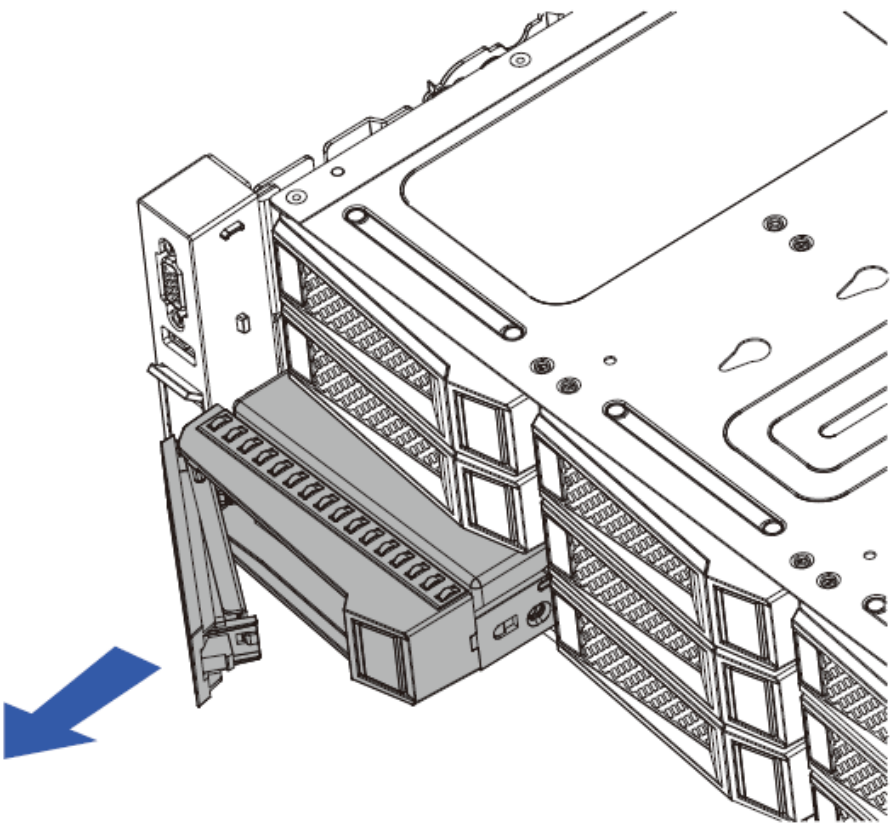

Step 3: Use four hard disk bolts to fix the hard disk onto the bracket.

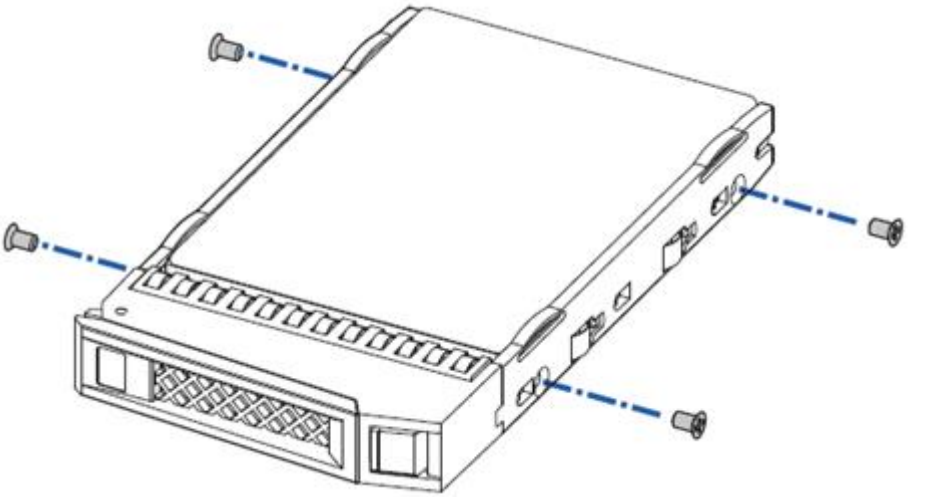

Step 4: Install the hard disk into the server, and fasten hard disk buckles firmly.

5.2.4 Power Replacement

Step 1: Pull power catch in the direction of the arrow.

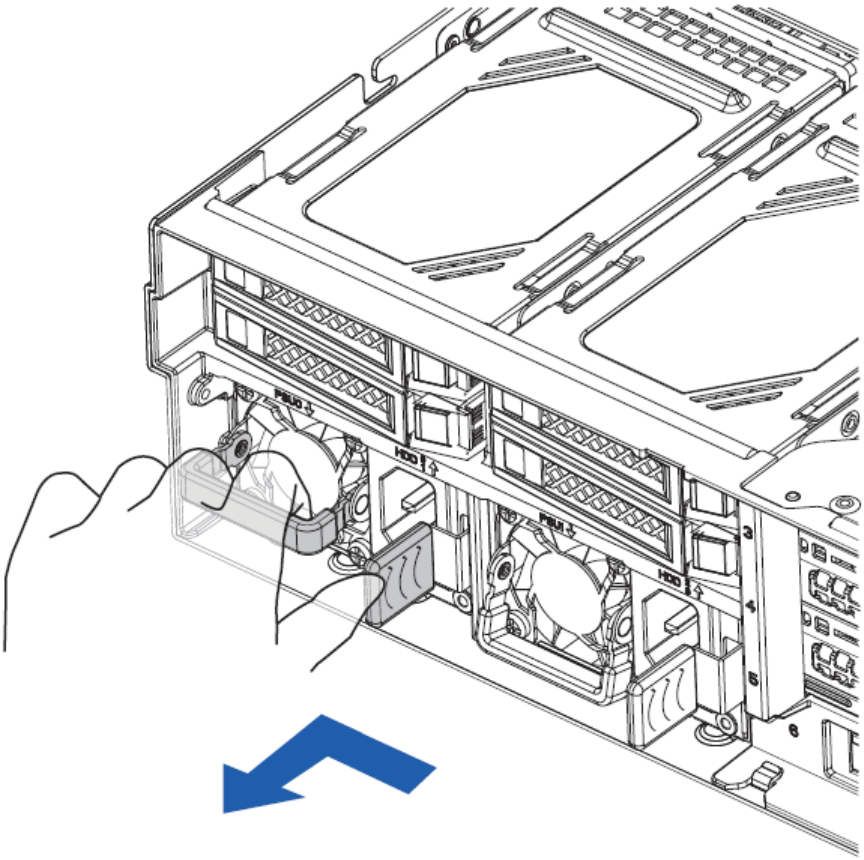

Step 2: Remove the power horizontally with even force.

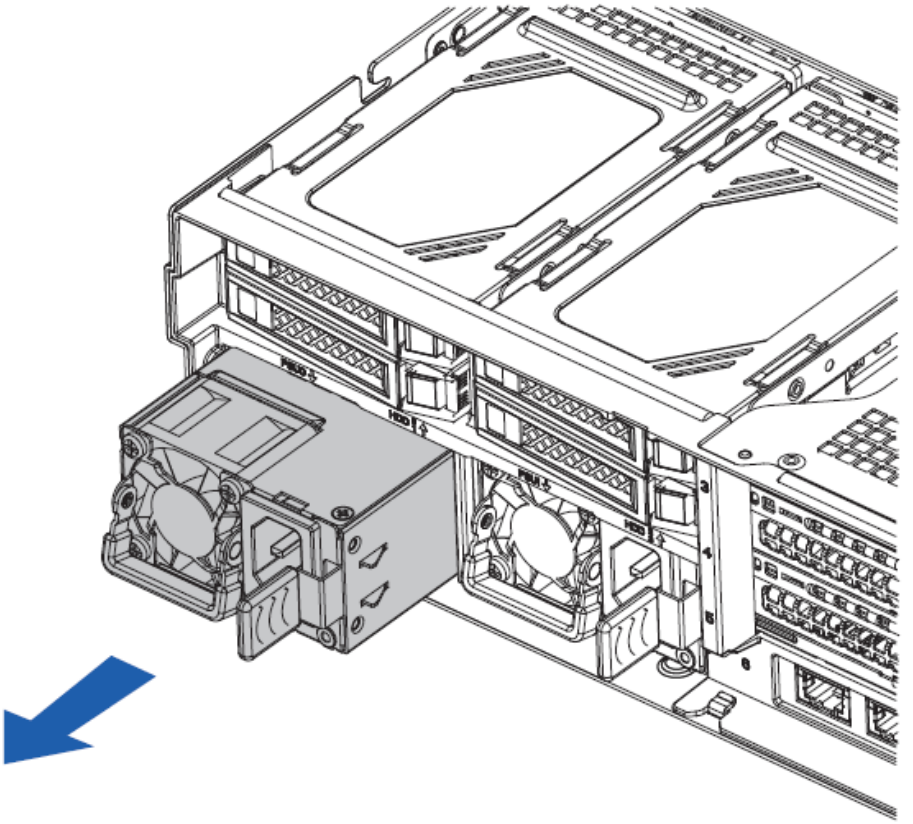

Figure 3: Install power module.

Push the new power module into the sliding channel, until a “click” sound is heard, power spring leaf is caught into the buckle automatically, and power module could not move any more.

5.2.5 Chassis Cover Replacement

Step 1: Turn the chassis cover lock to the open position.

Step 2: Press the lock button.

Step 3: Turn the lock to its maximum openness.

Step 4: Vertically remove the chassis cover upwards.

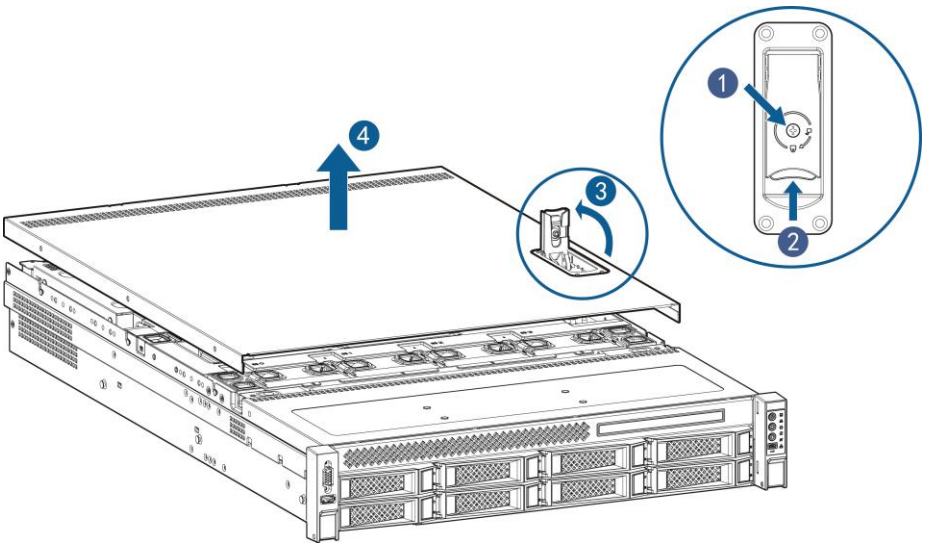

5.2.6 System Fan Replacement

System Fan Layout

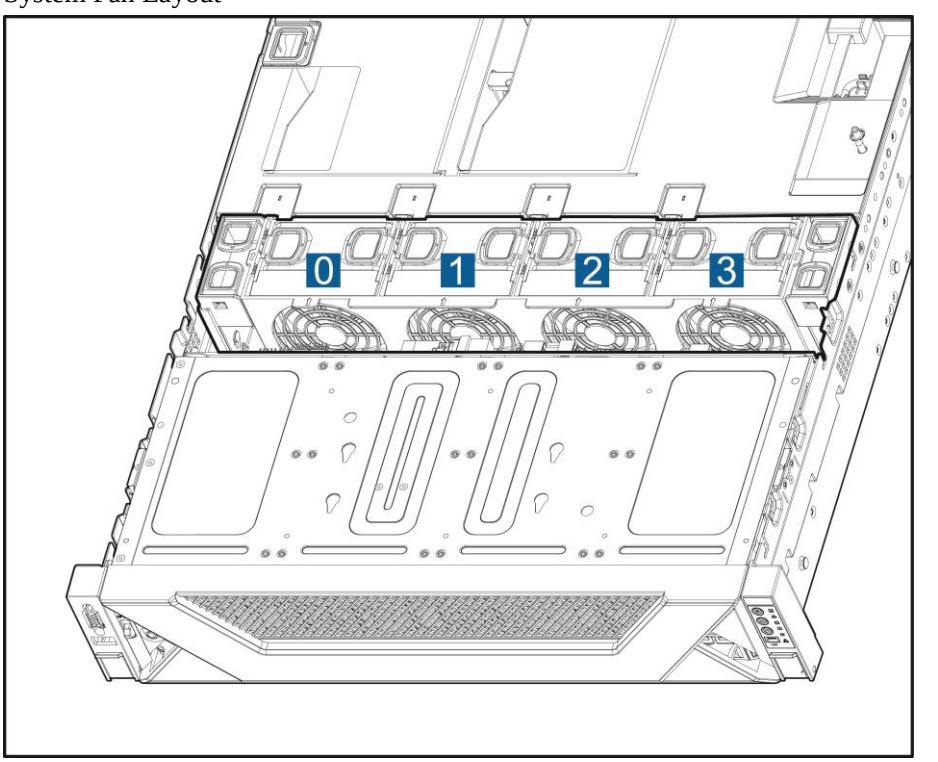

Step: Hold buckles on single fan bracket, and vertically remove the single fan upwards.

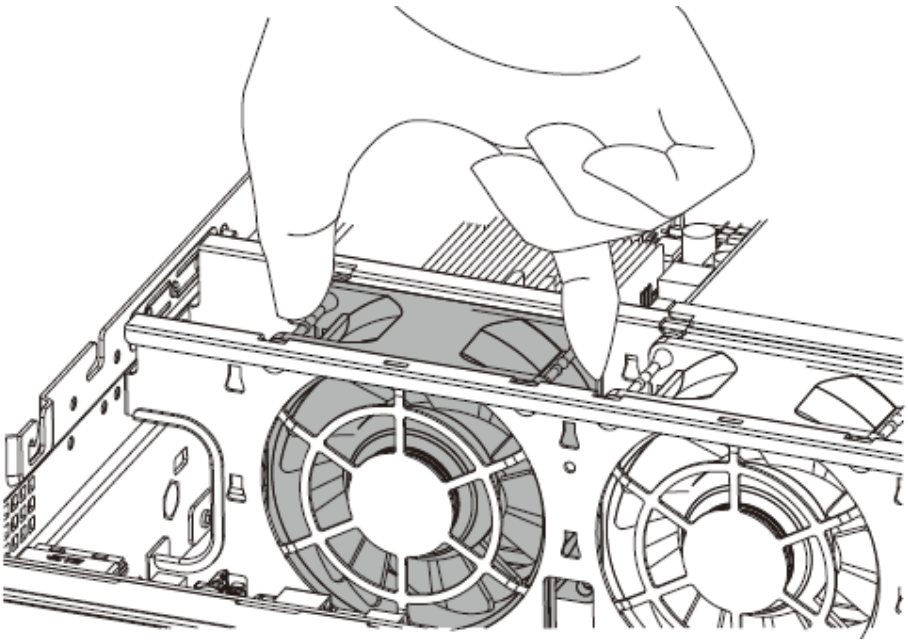

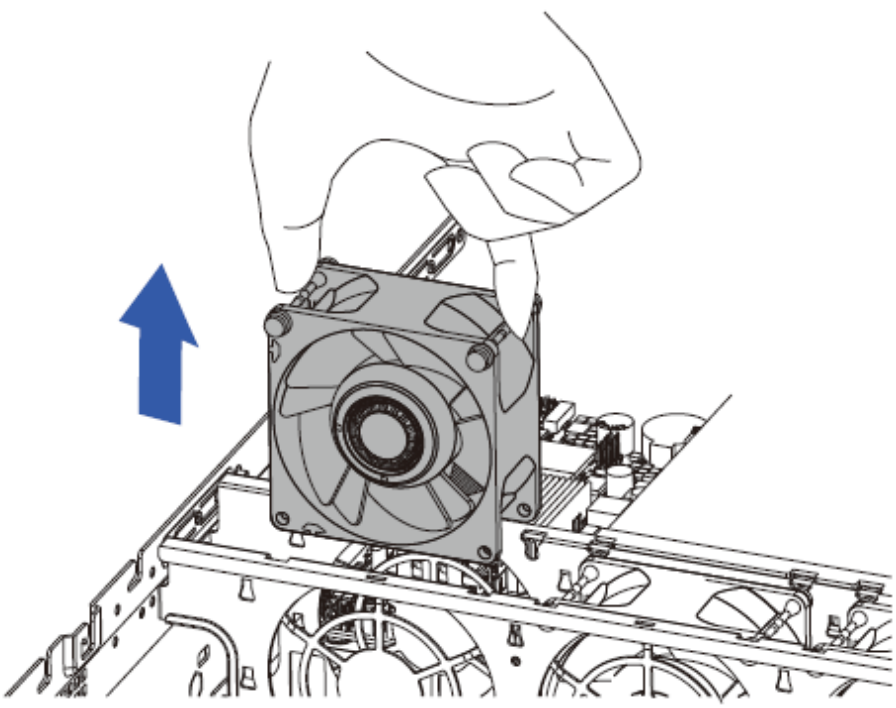

5.2.7 Riser Card Replacement

Step 1: Install the riser card into riser card bracket, while aligning with the hardy hole on riser card bracket.

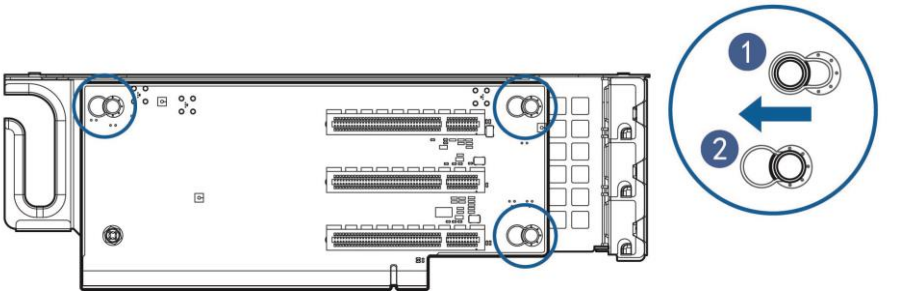

Step 2: Fix the riser card onto the bracket in the direction of arrows, and tighten with 1 bolt.

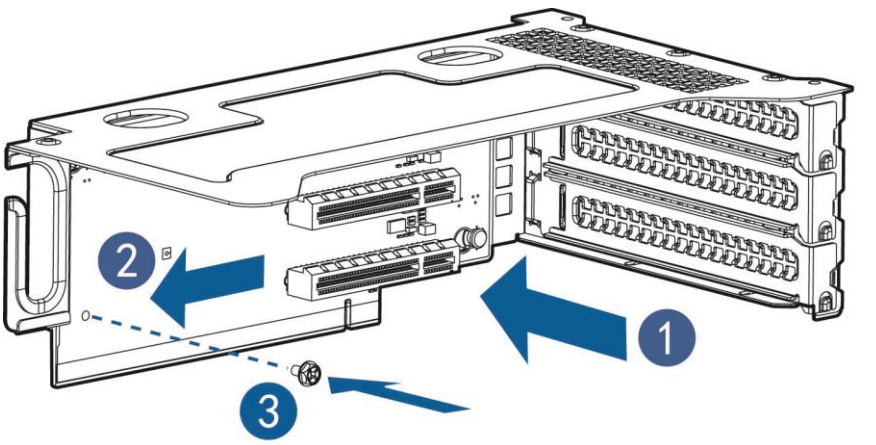

5.2.8 PCIE Expansion Card Replacement

Step 1: Remove the blocking piece on riser card bracket.

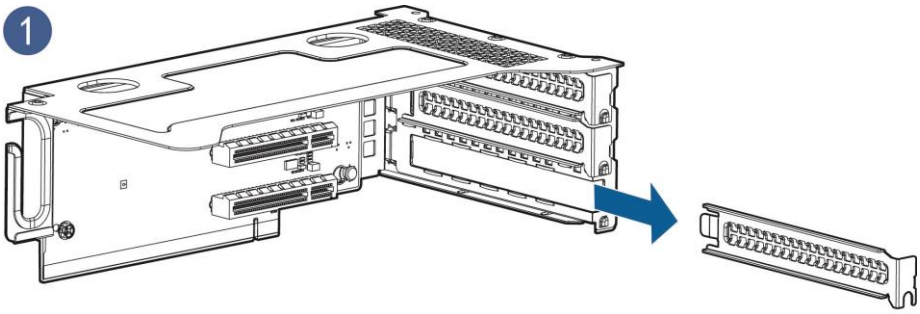

Step 2: Install a matching blocking piece onto expansion card, and insert the expansion card into the slot corresponding to riser card.

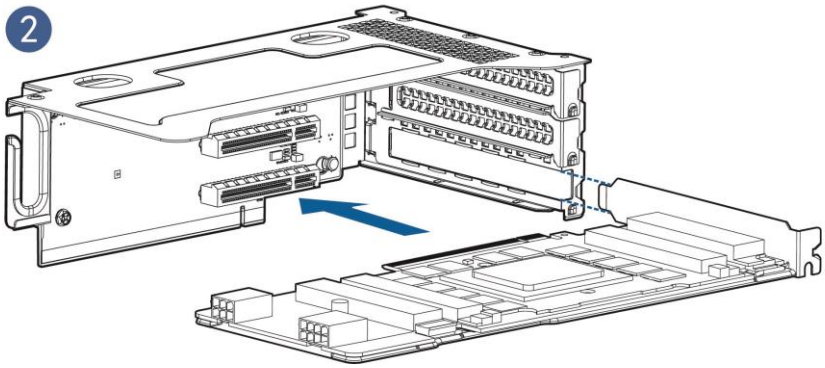

Step 3: Install the riser card bracket back to the server.

5.2.9 Wind Scooper Replacement

Step 1: Open upper cover of the chassis.
Step 2: Pull buckles inwards on both ends of the wind scooper, and then vertically remove the wind scooper upwards.

5.2.10 Mainboard Replacement

Step 1: Dismantle all parts and cables connecting to mainboard.
Step 2: Lift spring fixed legs on mainboard, then move the mainboard forward to remove the hardy hole, and vertically remove the mainboard upwards.

5.2.11 Front Set Hard Disk Backplane Replacement

Steps: Depart hard disk backplane from fixed legs of the chassis, vertically remove the chassis buckles upwards, and then remove the hard disk backplane outwards.

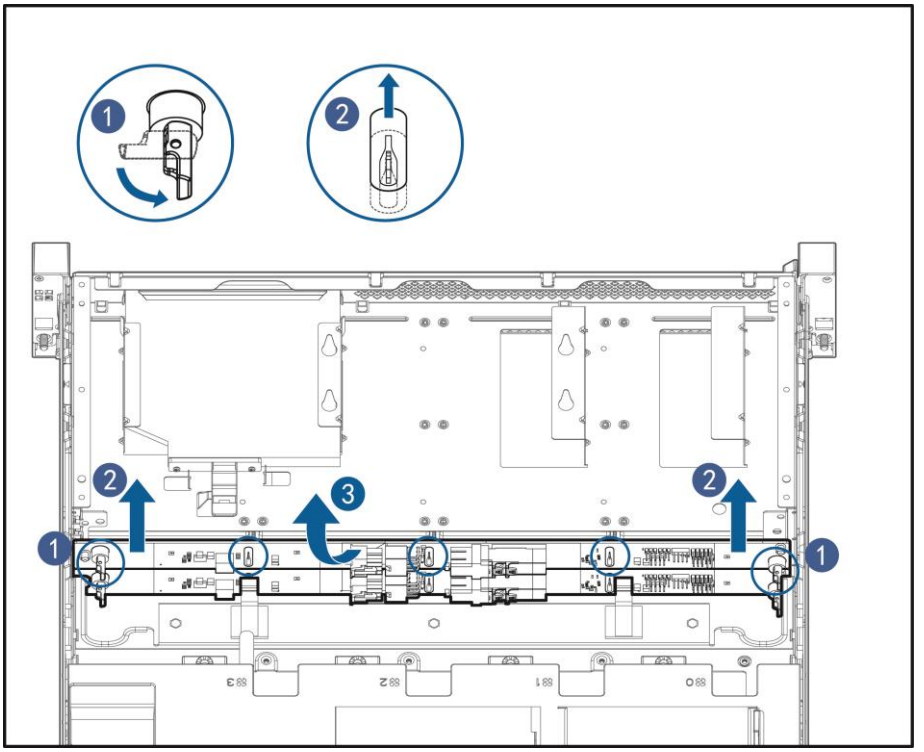

5.2.12 Rear Set Hard Disk Backplane Replacement

Steps: Depart hard disk backplane from fixed legs of the chassis, vertically remove the chassis buckles upwards, and then remove the hard disk backplane outwards.

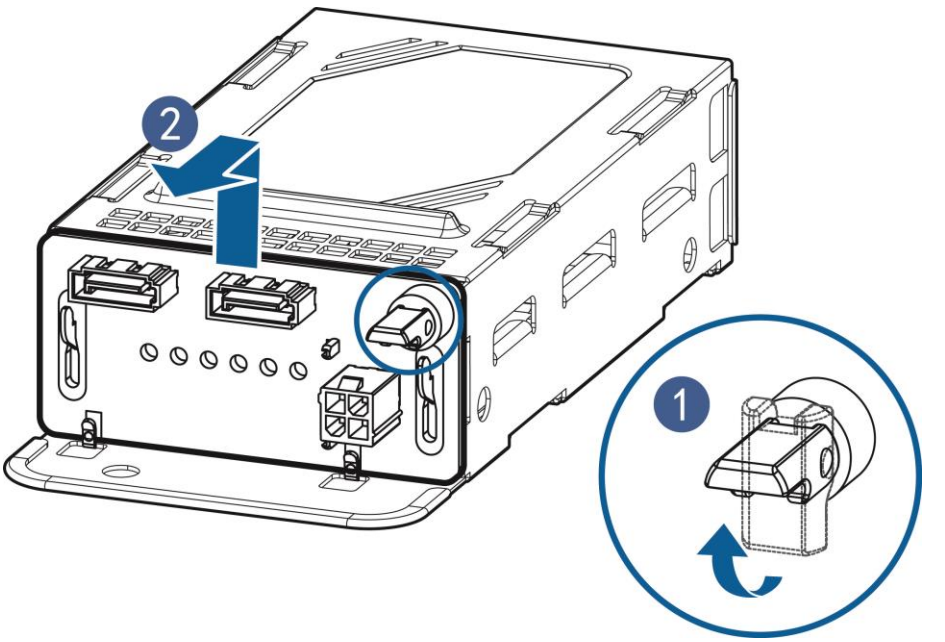
2
1

6. Frequent Faults, Diagnosis and Troubleshooting

This chapter introduces
Frequent server faults as well as corresponding diagnosis and troubleshooting suggestions.

6.1 Frequent Faults

1) No power after startup

After the machine is connected with power cable, no power is provided for the machine while pressing the On/Off button, and indicator does not light up after power on.

2) Power module indicator off or red indicator on

The machine is under normal operation, but a certain power module indicator is off or red indicator is on to alarm.

3) No display after power on

No information output appeared on the display after power on via pressing On/Off button.

4) Front panel indicator is off

All front panel indicators are off after power on.

5) Front panel status indicator alarms

The machine is under normal operation, but status indicator alarms.

6) Blank screen of the display

Blank screen fault occurs during display usage.

7) Abnormal display

Trembling, rolling or twisting screen images on the display during machine usage.

8) Memory capacity displays abnormality

It is shown by the operation system that memory capacity does not correspond with physical memory capacity.

9) Keyboard and mouse are not available

Neither keyboard nor mouse could be operated normally.

10) USB interface problem

Introduces solutions to failing to use USB interface.

6.2 Diagnosis and Exclusion Instructions

1) Diagnosis and exclusion on power-on failure at startup

Description: After pressing the power button, server front control panel indicator (power-on status indicator, hard disk status indicator) is off, meanwhile, no KVM (display) output is displayed, and server chassis fan does not rotate.

Operation steps:

a. Verify whether machine power supply is normal or not: If power module indicator is on, it indicates normal power supply; if power module indicator is off, please check if power supply is normal;

b. If power supply is normal, plug in and off the power module again to test, and then start for verification;

c. If there’s a machine and a power module of the same type, you could change the power module to test whether there’s a power module fault;

d. If no solution could be achieved via the above operation, please contact the distributor customer service.

2) Power module indicator off or red indicator on

Description: The machine is under normal operation, but a certain power module indicator is off or the red light is on.

Operation steps:

a. Firstly check whether all power cables are normal, and plug in power cables again;

b. If fault still exists, plug in and off power module again;

c. If shutdown is allowed, you could exchange these 2 power modules, to judge whether it is a power module fault.

d. If no solution could be achieved via the above operation, please contact the distributor customer service.

3) No display if power on

Description: After pressing the power button, server front control panel indicator is on, but there's no output on the display.

Operation steps:

a. Firstly check whether VGA port on display and server is connected normally;

b. Test on another display
d. If no solution could be achieved via the above operation, please contact the distributor customer service.

4) Front panel status indicator alarms

Description: The server is under normal operation, but system status indicator on front control panel flashes or the red indicator is on to alarm.

Operation steps:

Please check whether all power module indicators are green constant, if so, your could login BMC web interface to collect logs, and contact the distributor customer service.

5) Memory capacity incomplete

Description: Memory capacity viewed via the operation system does not correspond with physical memory capacity.

Operation steps:

a. Ensure all memories have been correctly installed in place, and memories of correct type have also been configured.

b. Enter BIOS setup to view memory capacity, if it could be completely identified in BIOS setup, this may lie in the limitation on memory capacity set by the operation system. Otherwise, please contact the distributor customer service.

6) Keyboard and mouse are not available

Description: Neither keyboard nor mouse could be operated normally.

Operation steps:

a. Make sure whether cable connection of keyboard or mouse is correct and firm.
b. Test other parts to verify whether it is a mouse or keyboard fault.
c. Retest the machine via power on/off.
d. Reboot and enter cmos or raid configuration interface to test keyboard or mouse performance, when tested in a non-system situation, if keyboard or mouse performance turns out to be normal, a system fault could be considered; if keyboard or mouse fault still exists, a mainboard interface fault could be considered, and you could contact the distributor technical support.

7) USB interface problem

Description: Unable to use devices with a USB interface.

Operation steps:

a. Make sure operation system on server supports USB devices.

b. Make sure system has been installed with correct USB device driver.

c. Power off the server, and then power on again to test.

d. Make sure whether the USB device is normal when connecting to other hosts.

e. If the USB device is normal when connecting to other hosts, the server may be abnormal, please contact the distributor technical support; if the USB device turns out to be abnormal when connecting to other hosts, change the USB device.

7 Specifications

This chapter introduces various access authentications achieved by this product and standards it complies with.

● USA FCC statement.

Introduces FCC standards abided by the product.

● CE statement of EU.

Introduces CE standards abided by the product.

● China CCC

Introduces CCC standards abided by the product.

● China Environmental Symbols

Introduces China environmental symbols standards abided by the product.

7.1 USA FCC Statement

Introduces FCC standards abided by the product.

It is regulated in Subpart B, Part 15 of 47 CFR by Federal Communications Commission of the United States that users of this product shall pay attention to the following issues:

Annotations: This device has been tested and complies with regulations related to Class A digital devices in Part 15 of FCC rules. Main purpose of these limitations is to provide reasonable protection while operating such devices in business districts, to avoid harmful disturbance. This device may produce, use and emit RF

energy, if installation or usage is carried out not according to instructions, harmful disturbance may be caused on radio communication. Operating this device in residential areas may cause harmful disturbance, in this case, the user will be responsible for all costs arisen from correcting disturbance.
If the user carries out change or correction not expressly indicated by our company, it may cause the device failing to comply with FCC Class A requirements, and exempted from its authorization to operate this device.

7.2 CE Statement of EU

This chapter introduces CE standards abided by this product.
This is a Class A product. In the dwelling environment, this product may cause radio disturbance, in this case, the user will be asked to adopt certain appropriate measures.

7.3 China CCC

This chapter introduces the CCC standards to be abided by the product.
This product is a class A product, in daily life, it may cause radio disturbance, in this case, it is required to adopt practicable precautions against its disturbance.

7.4 China Environmental Symbols

The products comply with China environmental symbols criteria.

Name of Hazardous Substances or Elements in the Product & Content Mark Table – Server

Part Name	Toxic and Harmful Substances or Elements					
	Pb	**Hg**	**Cd**	**Cr(VI)**	**PBB**	**PBDE**
Case	×	○	○	○	○	○
Mainboard	×	○	○	○	○	○
Memory	○	○	○	○	○	○
Hard Disk	○	○	○	○	○	○
Power	×	○	○	○	○	○

Supply						
Cable	○	○	○	○	○	○
Floppy drive	×	○	○	○	○	○
CD Drive	×	○	○	○	○	○
External Plug-in Net Card	×	○	○	○	○	○
External Plug-in Storage Card	○	○	○	○	○	○
Connection Plate Card	×	○	○	○	○	○
Data Cable	×	○	○	○	○	○
Keyboard	×	○	○	○	○	○
Mouse	×	○	○	○	○	○
Central Processor	×	○	○	○	○	○
Processor Radiator	×	○	○	○	○	○
Rail	○	○	○	○	○	○
Printing	○	○	○	○	○	○
CD	○	○	○	○	○	○
Package	○	○	○	○	○	○
Packing Pads	○	○	○	○	○	○
Packing Plastic Bags	○	○	○	○	○	○

Instructions:

1. ○: Indicates content of hazardous substances in all homogenous materials of this part is below limit regulated in Requirements for Concentration Limits for Certain Hazardous Substances in Electronic Information Products.

2. ×: Indicates content of hazardous substances in at least one homogenous material of this part is below limit regulated in Requirements for Concentration Limits for Certain Hazardous Substances in Electronic Information Products. In the table, "×" indicates printed board welding technique limit fails to reach limit requirements.

3. All the above parts are possible configuration parts in product, for actual product configuration please refer to configuration label.